



ASSEMBLY INSTRUCTION

Hall Tree


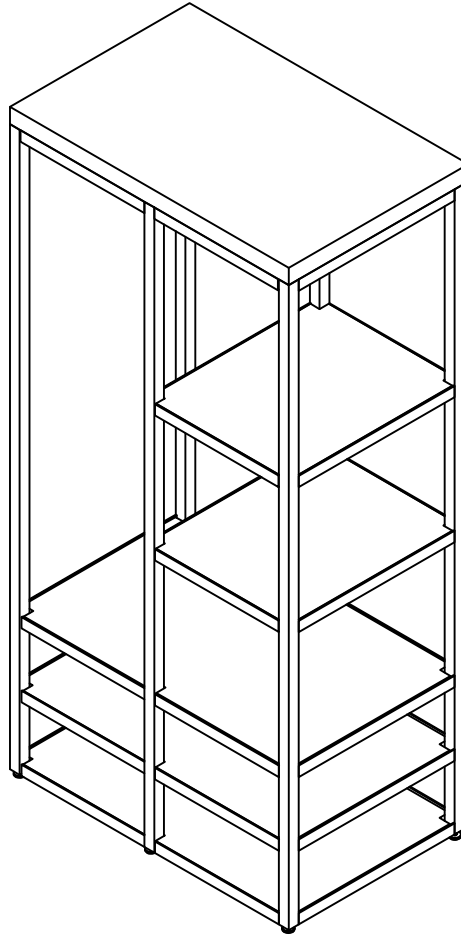


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

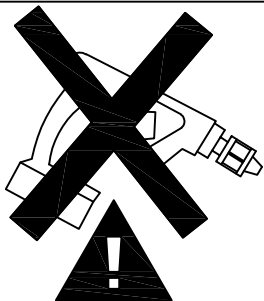

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

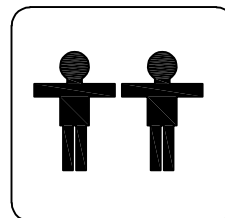


Tools Required

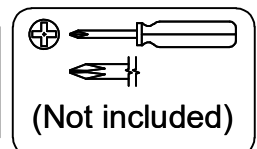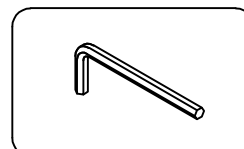


www.boltonfurniture.com

Part list - Hall Tree

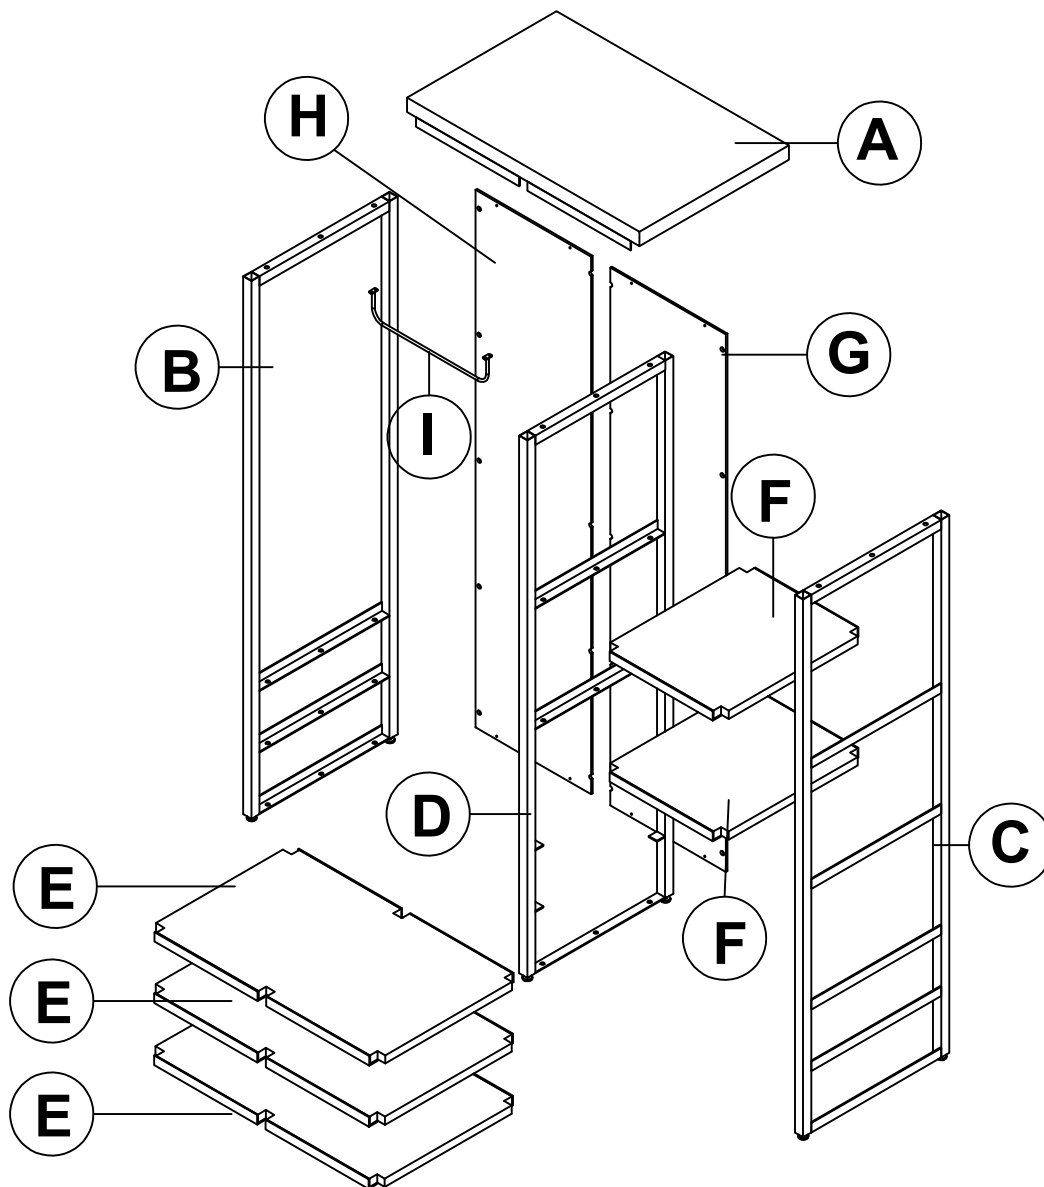

Identifying the hardware-Identify the hardware using the illustrations below


J  **09**
M6*40mm Bolt


K  **15**
M6*20mm Bolt

L  **33**
M6*15mm Bolt

M  **15**
Ø19 Washer

N  **12**
4*15mm Screw

O  **01**

P  **02**
ANTI-TIP

www.boltonfurniture.com

Step 01

L


M6*15mm Bolt

09

O



01

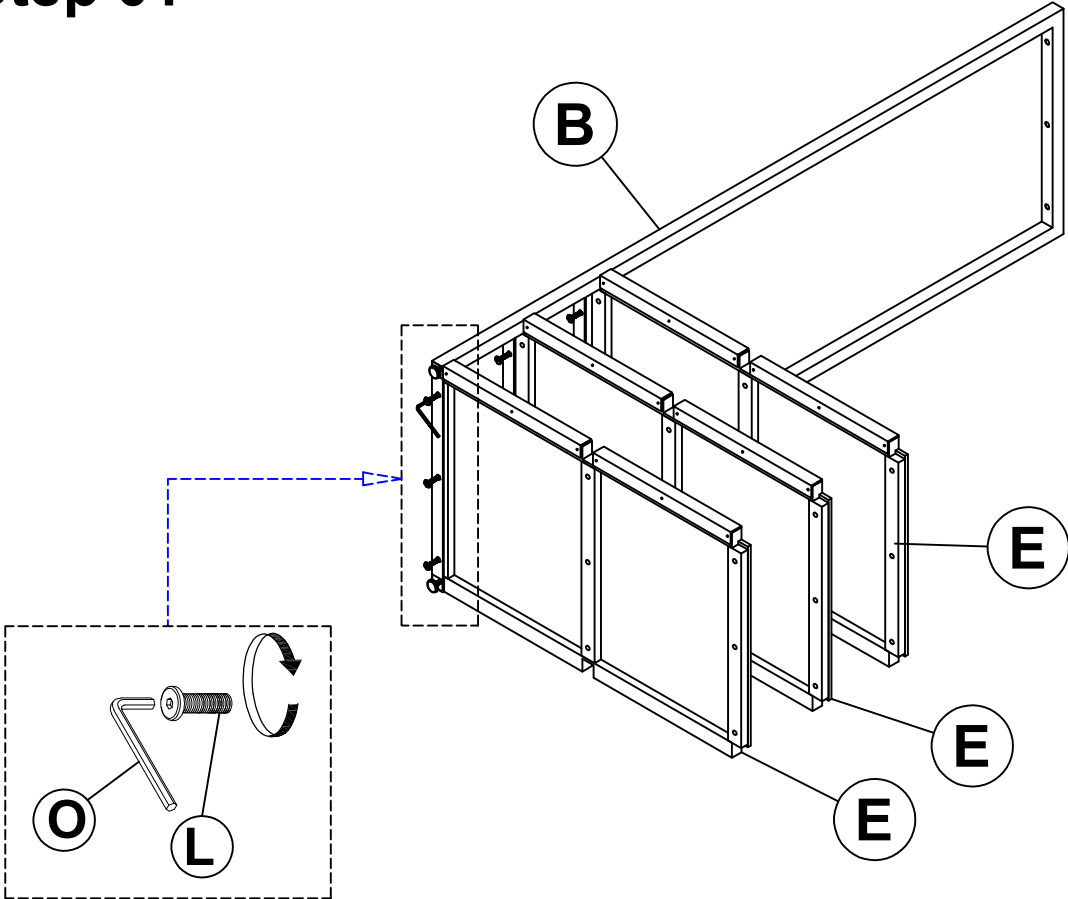

Step 02

L


M6*15mm Bolt

03

O




01

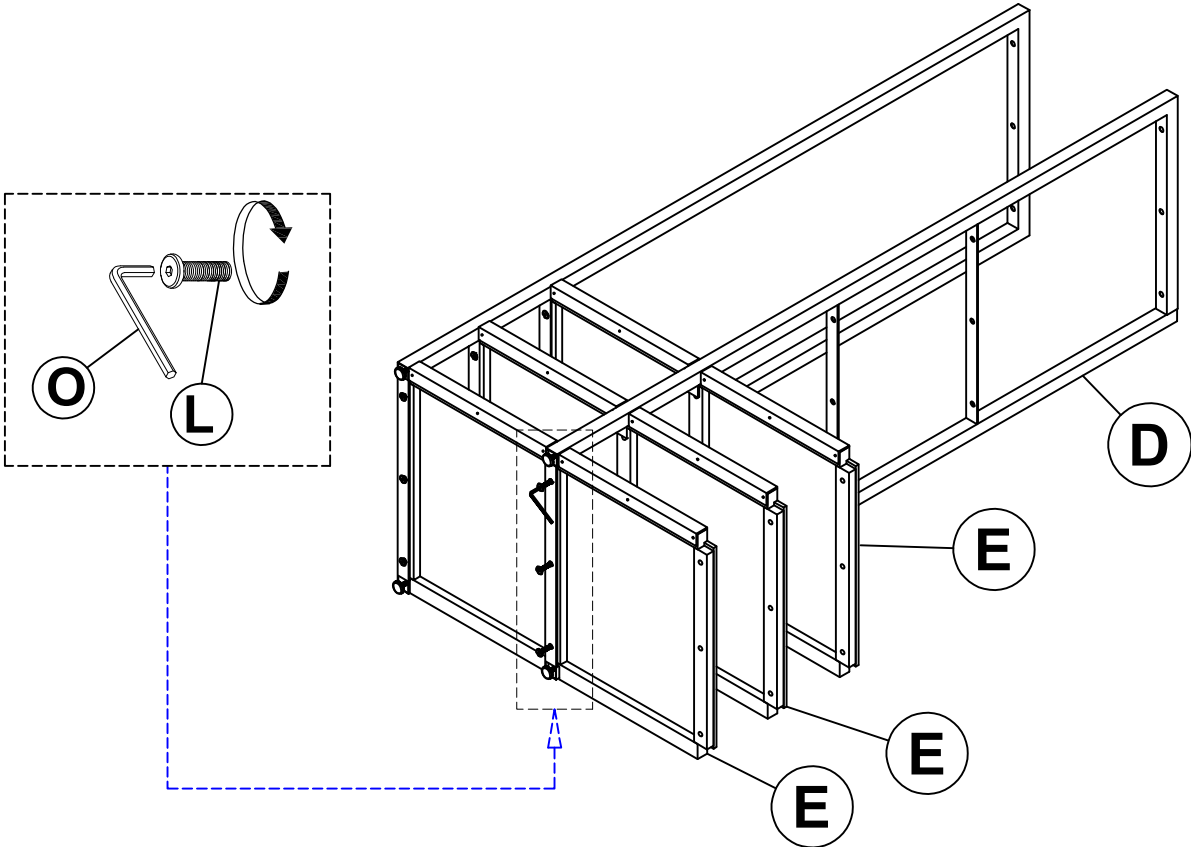


Step 03

L M6*15mm Bolt 09
O 01

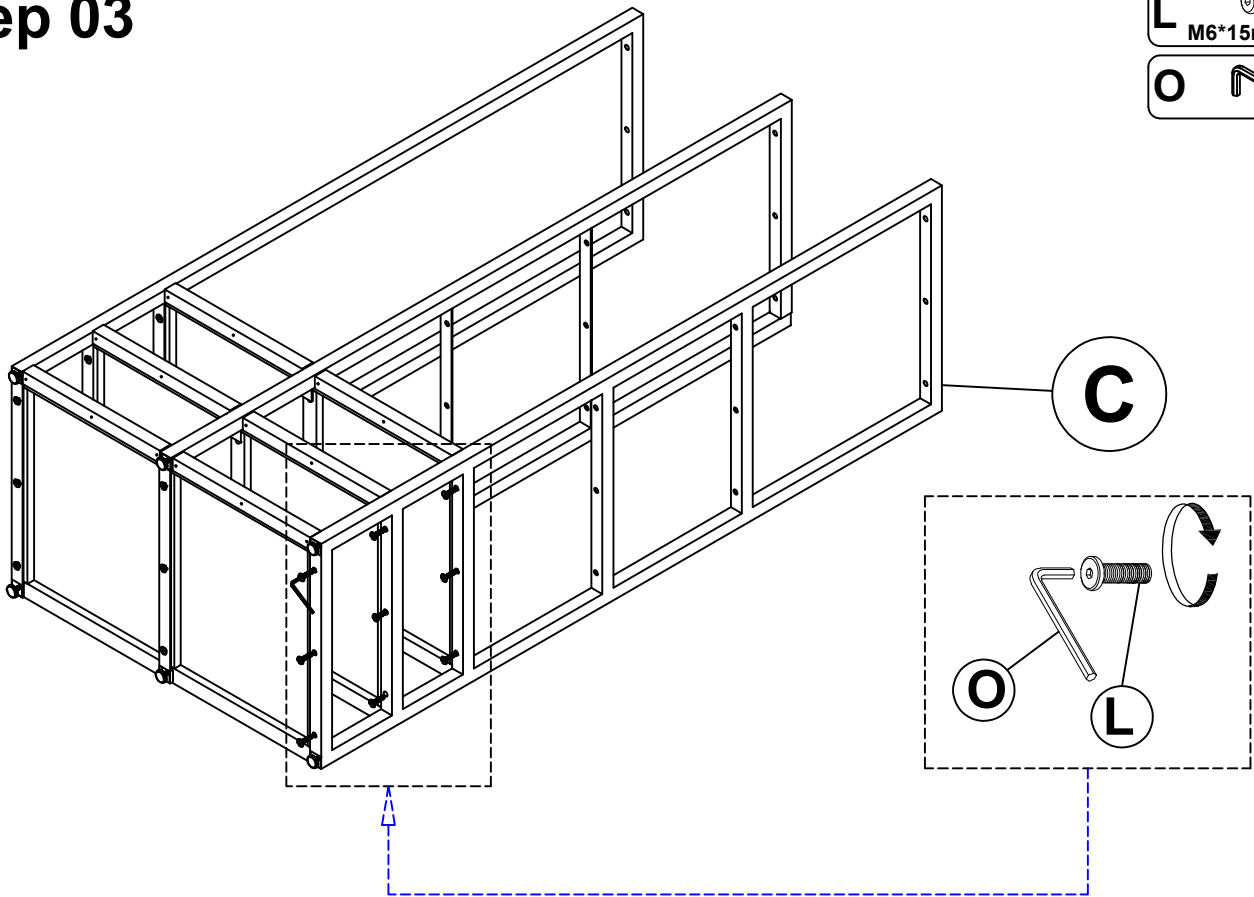

Step 04

L M6*15mm Bolt 12
O 01

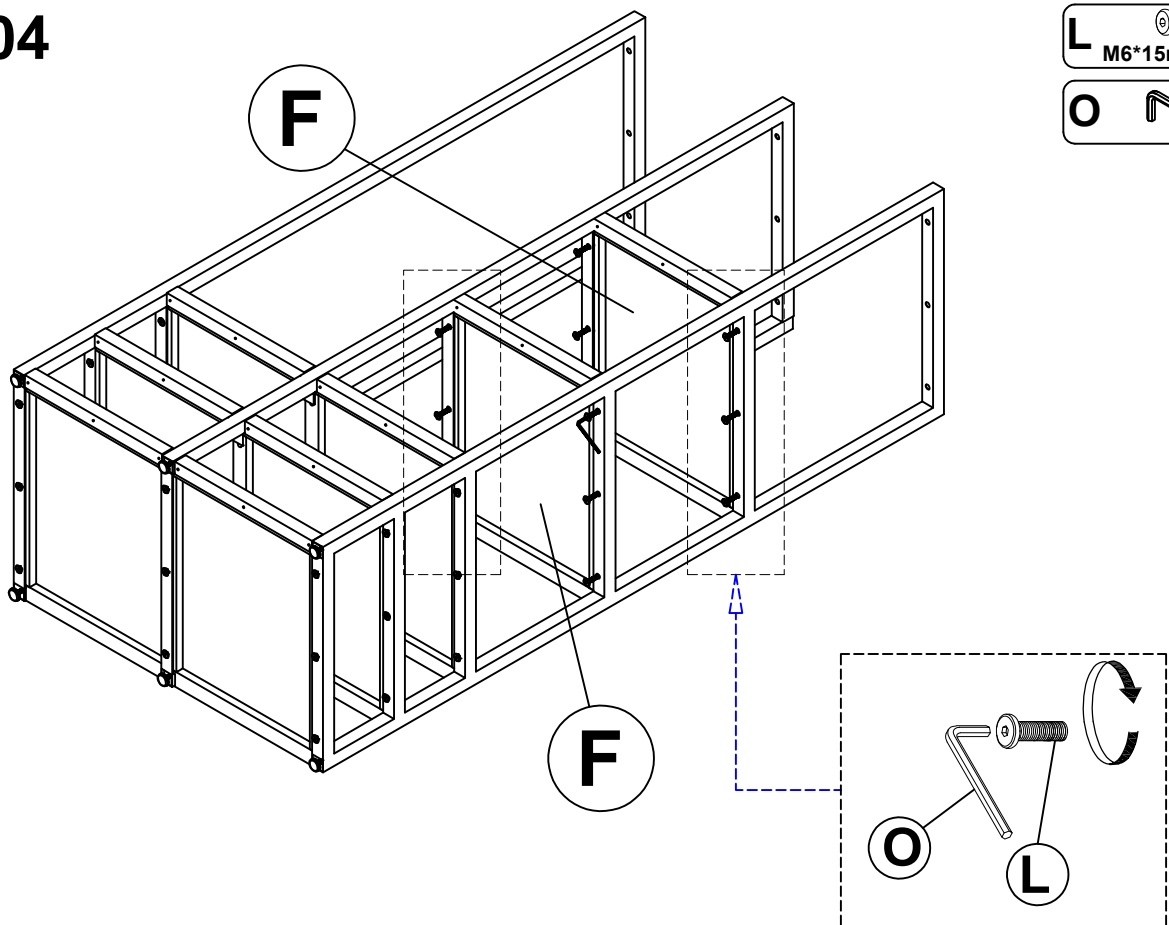

Step 05

N




04



01

(Not included)

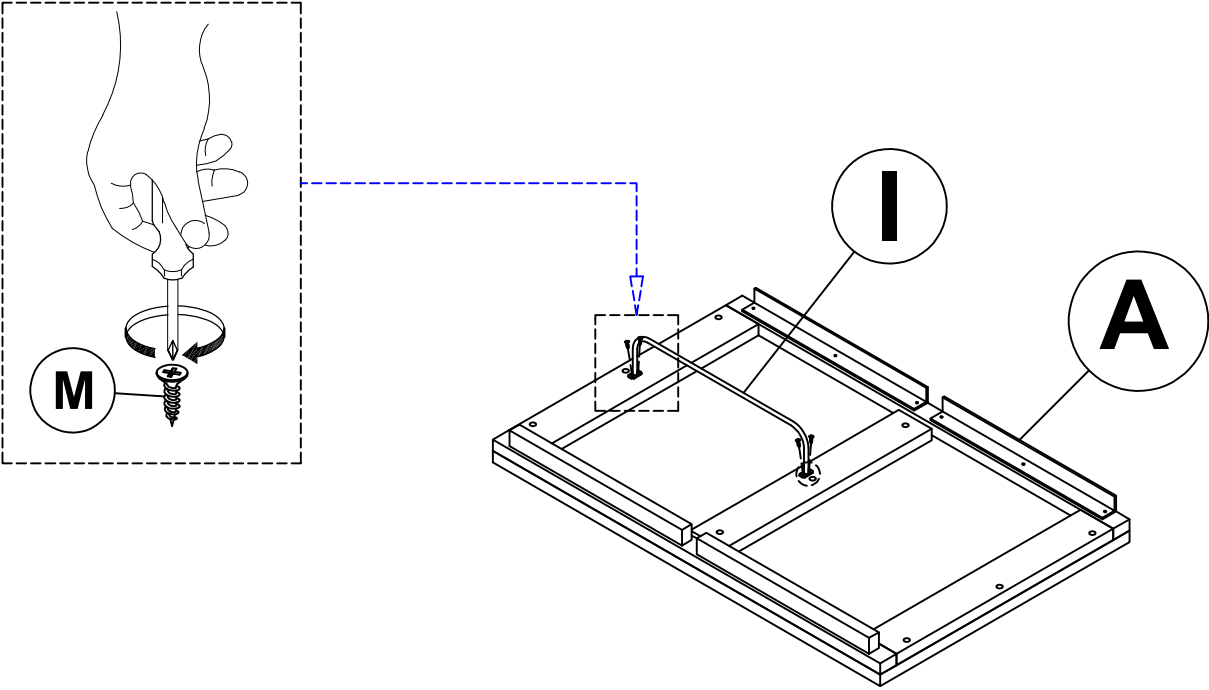

Step 06

J




09

O







01



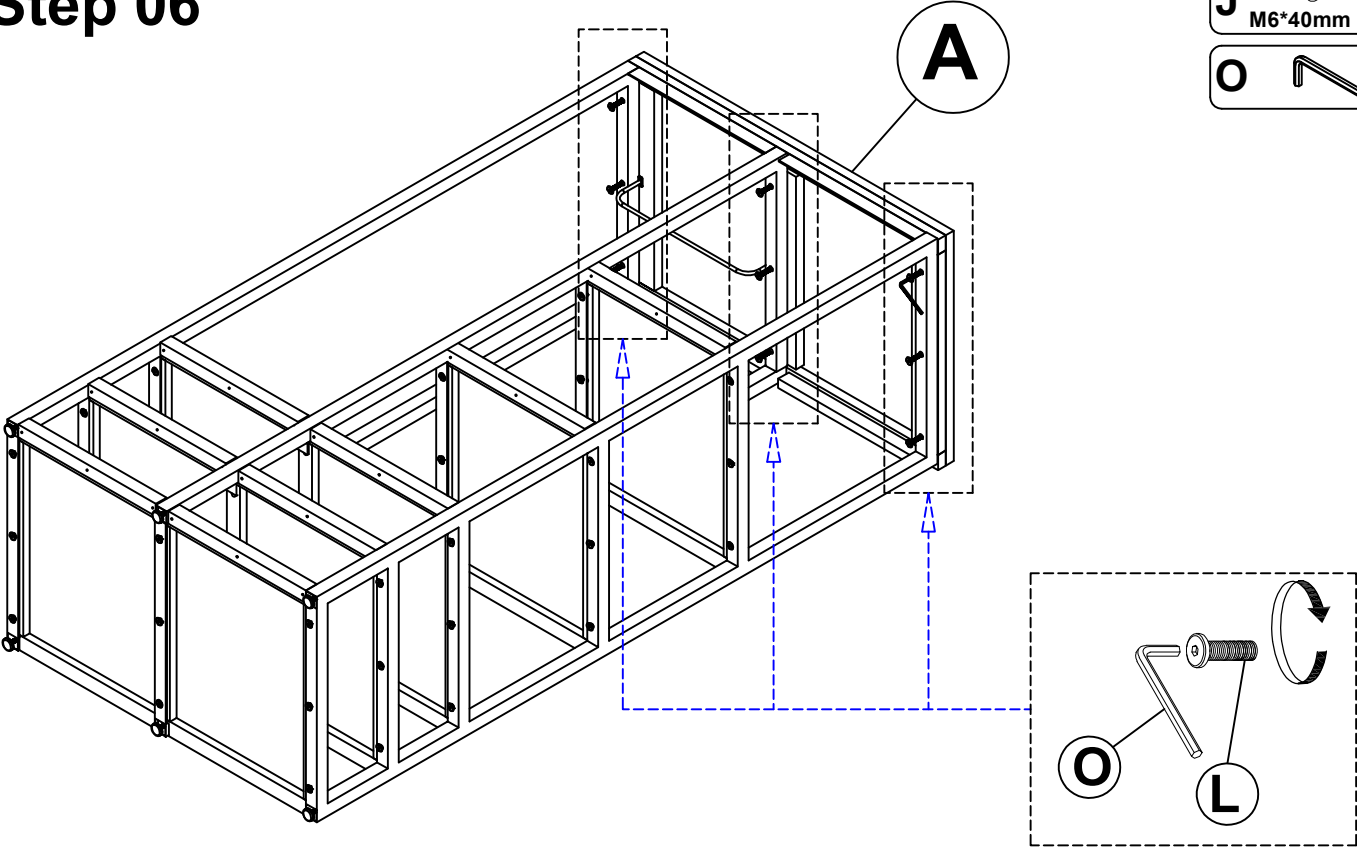


Step 07






- K**  **15**
M6x20MM Bolt
- M**  **15**
Ø19 Washer
- N**  **08**
4x15MM Screw
- O**  **01**
-  **01**
(Not included)

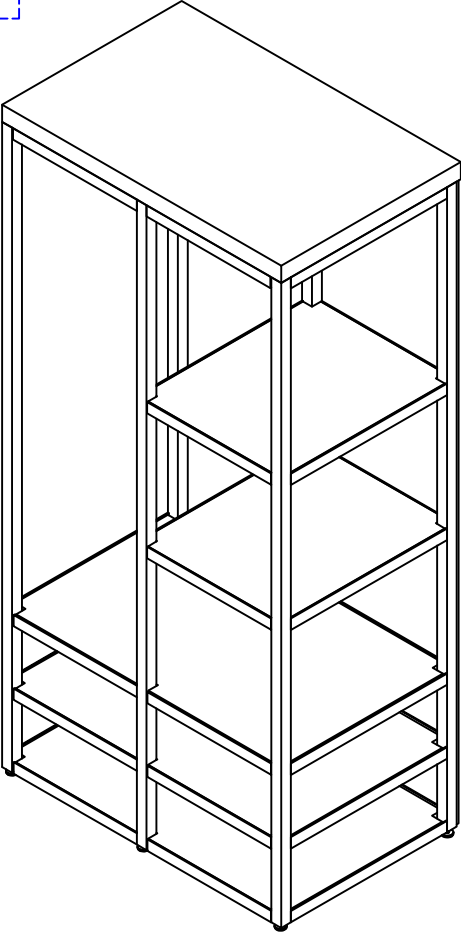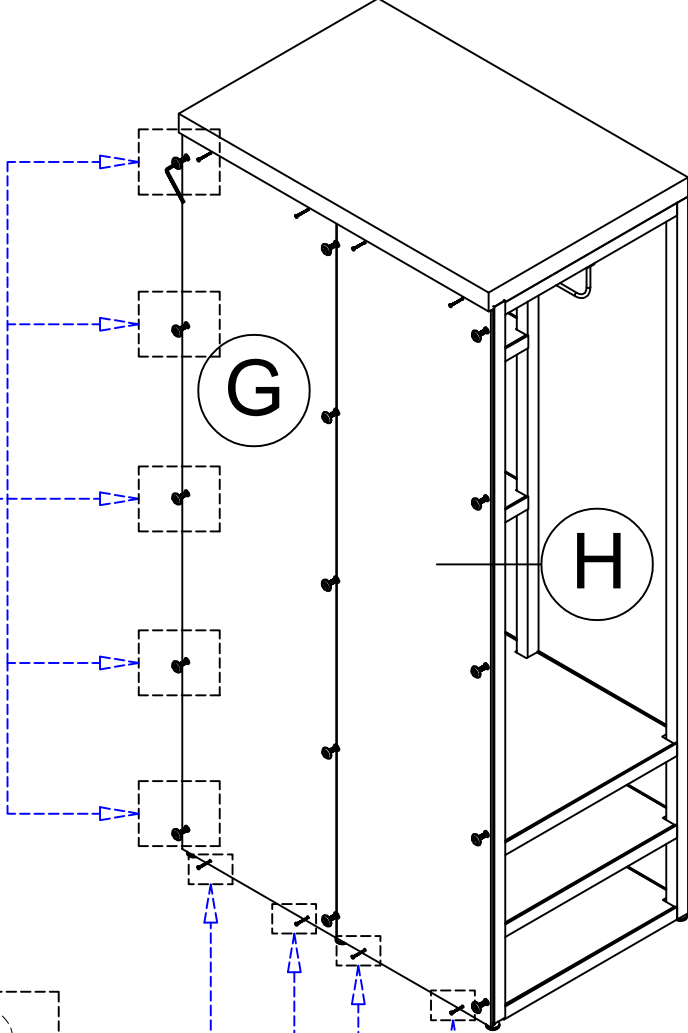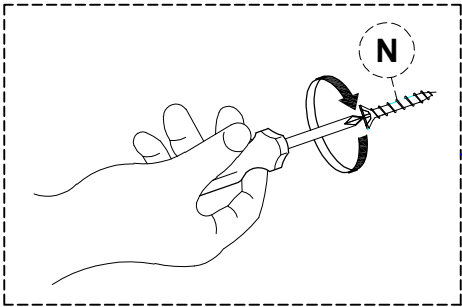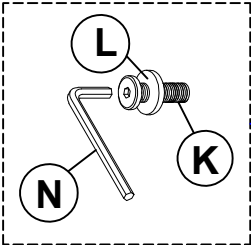

"O" Anti-Tip

A	 4x15 Screw	04	C	 Plastic wall bracket	04
B	 4x35 Screw	04	D	 Nylon strap 140mm	02

Secure to Stud behind Wallboard

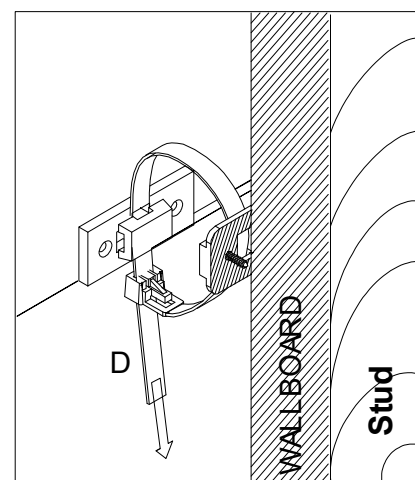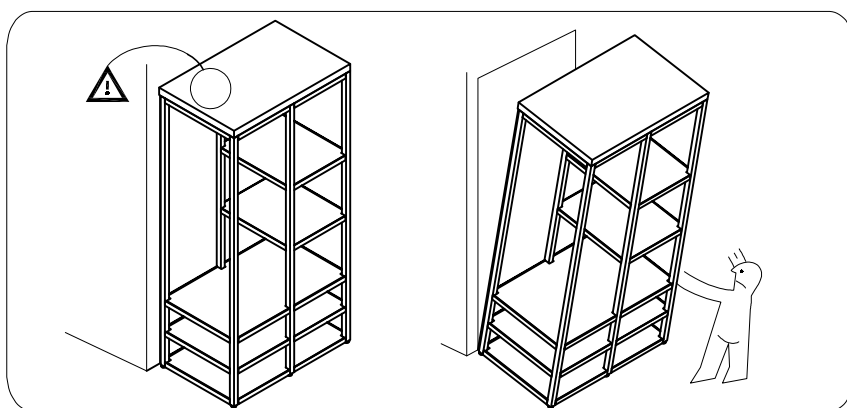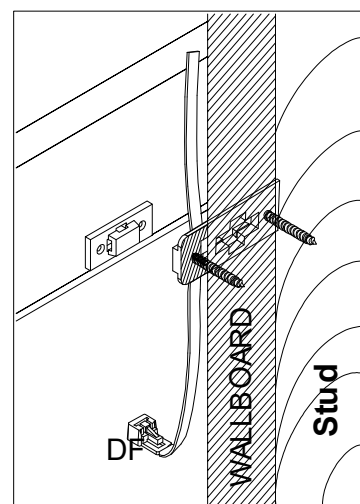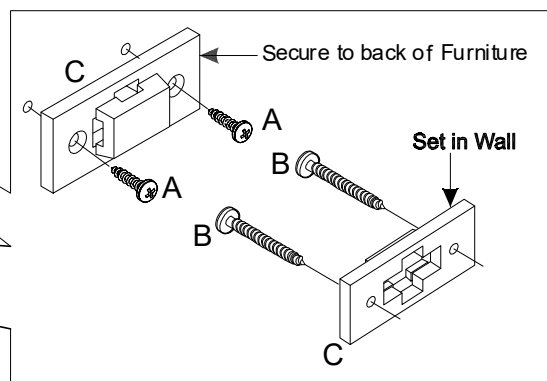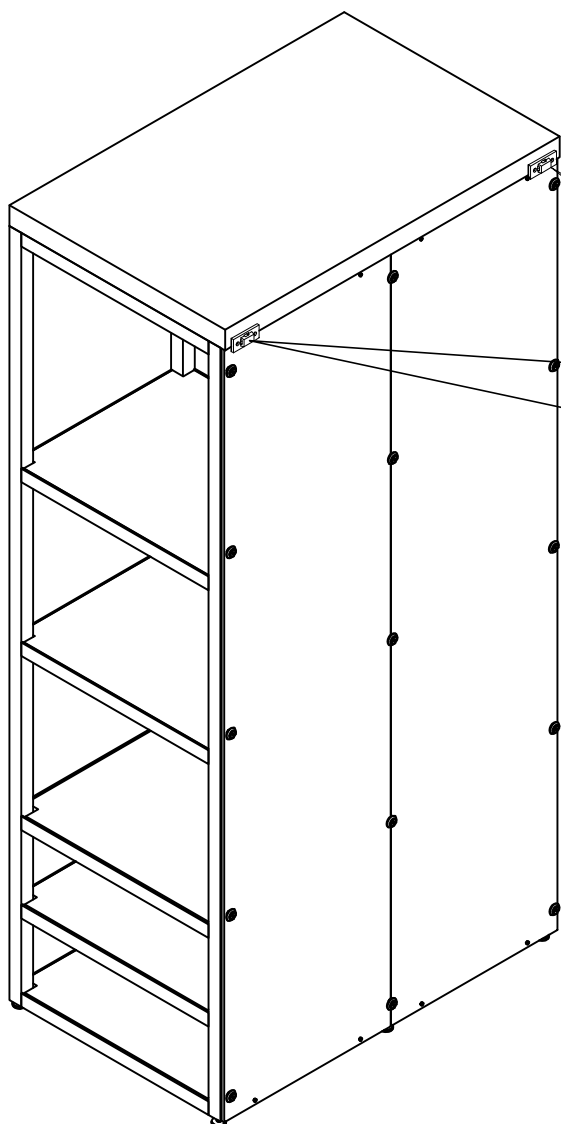

Secure to Stud behind Wallboard!