

ASSEMBLY INSTRUCTION

CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT. THESE PIECES ARE HEAVY. IN ORDER TO PREVENT PERSONAL INJURY AND ENSURE THAT THIS PRODUCT IS NOT DAMAGED DURING THE ASSEMBLY PROCESS, IT IS STRONGLY RECOMMENDED THAT YOU ENLIST THE ASSISTANCE OF ONE OR MORE PEOPLE.

ATTENTION: VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'ASSEMBLAGE DE CE PRODUIT. LES PIECES SONT LOURDES. POUR EVITER TOUTE BLESSURE ET POUR VOUS ASSURER QUE LE PRODUIT N'EST PAS ENDOMMAGE'PENDANT L'ASSEMBLAGE, NOUS VOUS RECOMMANDONS DE FAIRE APPEL A UNE OU PLUSIEURS AUTRES PERSONNES.

CUIDADO: FAVOR DE LEER TODAYS LAS INSTRUCCIONES ANTES DE ENSAMBLAR SU PRODUCTO. ESTAS PIEZAS SON PESADAS. PARA PREVENIR HERIDAS PERSONALES Y ASEGURAR QUE SU PRODUCTO NO SEA DAN ADO MIENTRAS ES ENSAMBLADO, SE RECOMIENDA LA ASISTENCIA DE UNA O MAUS PERSONAS.


WARNING:.....PROTECTIVE GLIDE IS PLACED UNDER LEGS OF FURNITURE TO RESIST SCRATCHES TO FLOOR SURFACE. SOME FLOOR SURFACES CAN BE EXTRA SENSITIVE TO MARKING. IF YOU ARE NOT SURE CONSULT WITH YOUR DEALER.

AVERTISSEMENT:... LES PIEDS DES MEUBLES SONT MUNIS DE PATINS DESTINÉS À PROÉGER LE PLANCHER. CERTAINS REVÊTEMENTS DE SOL PEUVENT ÊTRE TRÈS FRAGILES. EN CAS DE DOUTE, CONSULTER LE MARCHAND.

Important: Tighten firm but do not over tighten


STEP 1

PUT CHAIR BACK ON A SOFT AND FLAT SURFACE,
ATTACH CUSHION TO CHAIR BACK

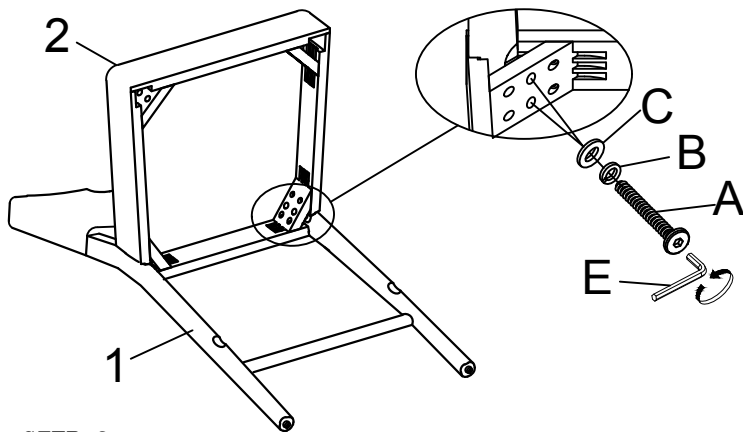


STEP 2

LOOSELY ATTACH FRONT LEGS TO THE CUSHION

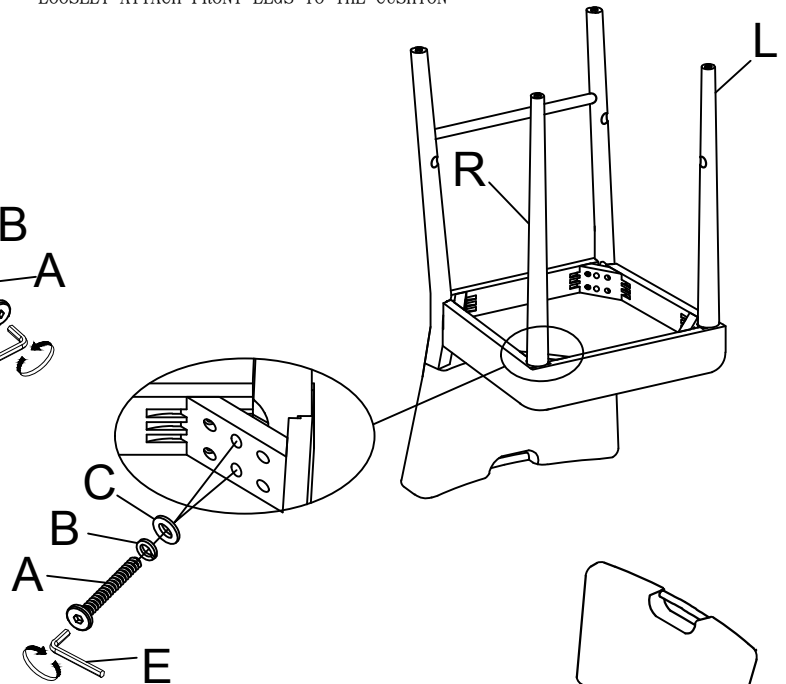


STEP 3

INSERT STRETCHERS INTO LEGS,
TIGHTEN ALL BOLTS AND SCREWS
AT THIS STEP

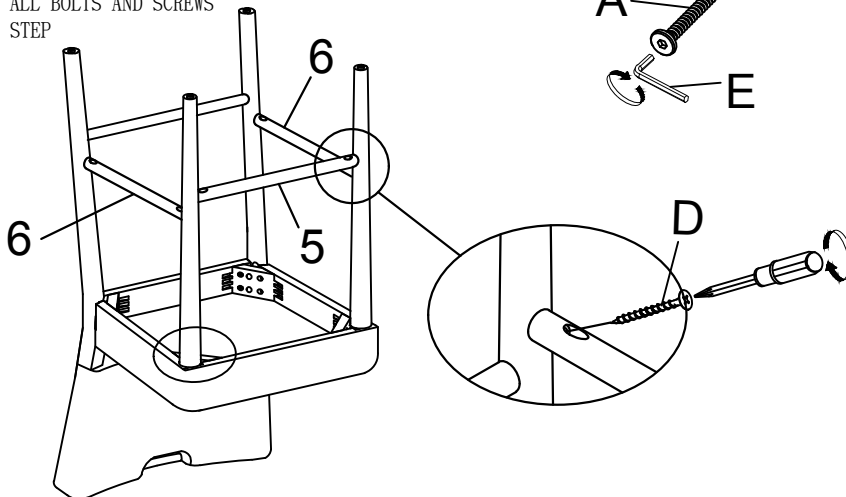

COMPLETE

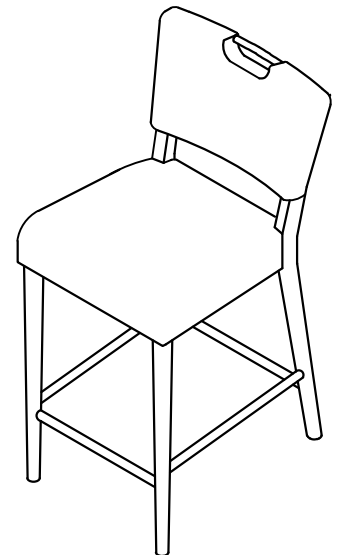

PART LIST

NO.	DESCRIPTION	Q' ty
1	CHAIR BACK	1
2	CUSHION	1
3	FACING LEFT FRONT LEGS (L)	1
4	FACING RIGHT FRONT LEGS (R)	1
5	FRONT STRETCHER (F)	1
6	SIDE STRETCHER (S)	2

HARDWARE LIST

NO.	DESCRIPTION	Q' ty
A	BOLT (Ø5/16"*2-1/4")	8
B	LOCK WASHER (5/16")	8
C	FLAT WASHER (5/16"*19mm)	8
D	WOOD SCREW (8*1-1/2")	6
E	ALLEN WRENCH (5mm)	1