

FVN8460-D VALENCIA


INSTALLATION GUIDE

CONTENTS:

Cabinet	(FCB8460-D)	PAGE 6
Sink	(FVS8042WH)	PAGE 6
Medicine Cabinet	(FMC8013)	PAGF 4






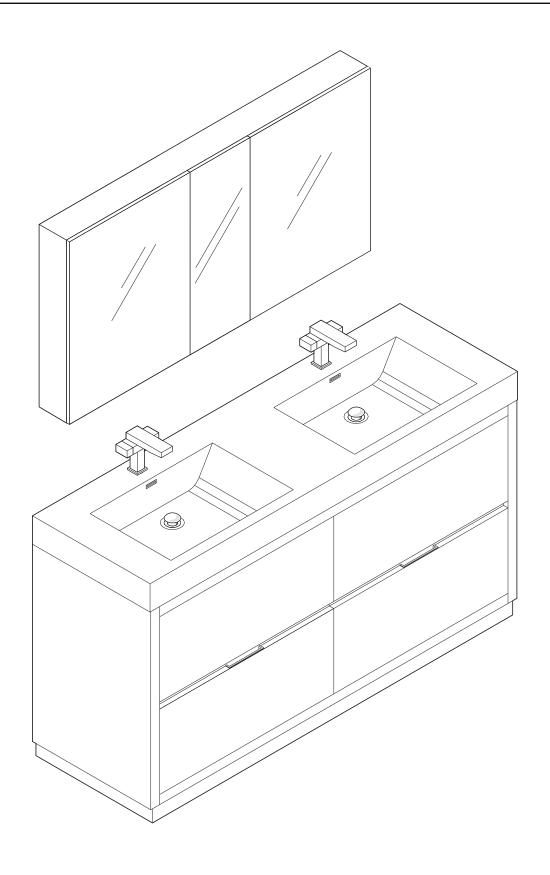





DIMENSIONS OF THE CABINET

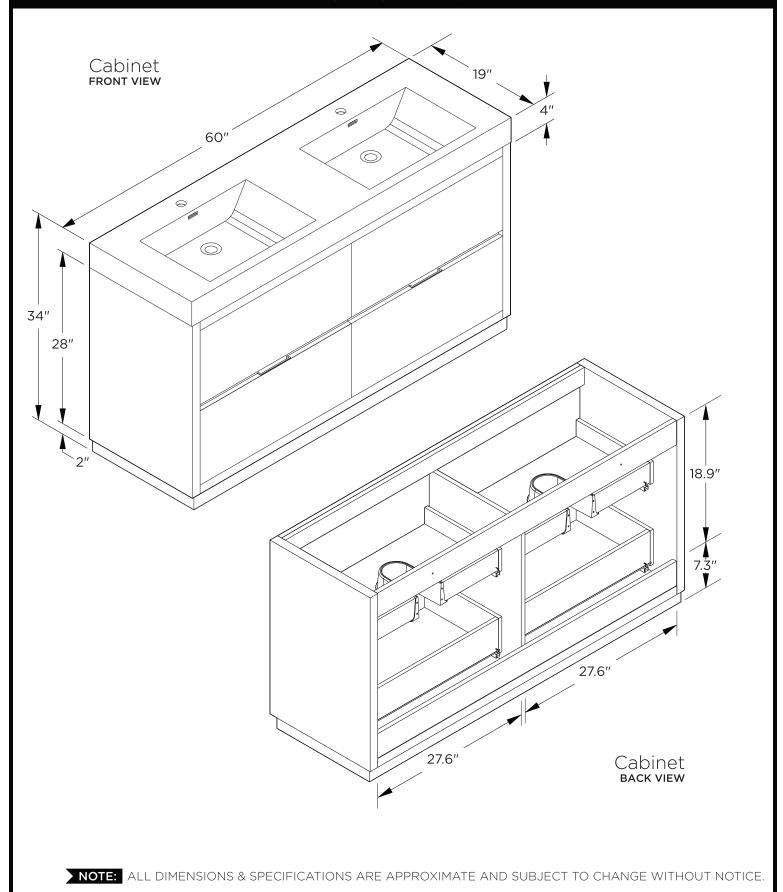

INSTALLATION GUIDE


PAGE 2

FVN8460-D






DIMENSIONS OF THE MEDICINE CABINET

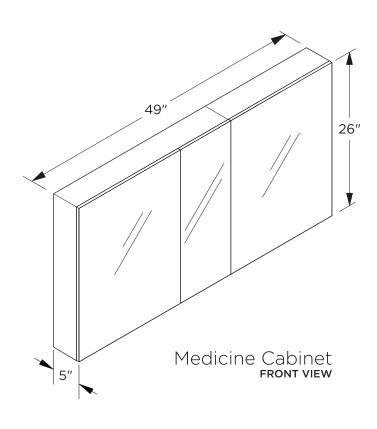

DIMENSIONS OF THE SINK

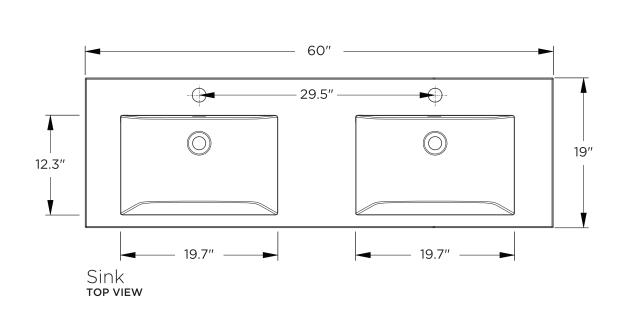


NOTE: ALL DIMENSIONS & SPECIFICATIONS ARE APPROXIMATE AND SUBJECT TO CHANGE WITHOUT NOTICE.

Ö FVN8460-D

VALENCIA


INSTALLATION GUIDE

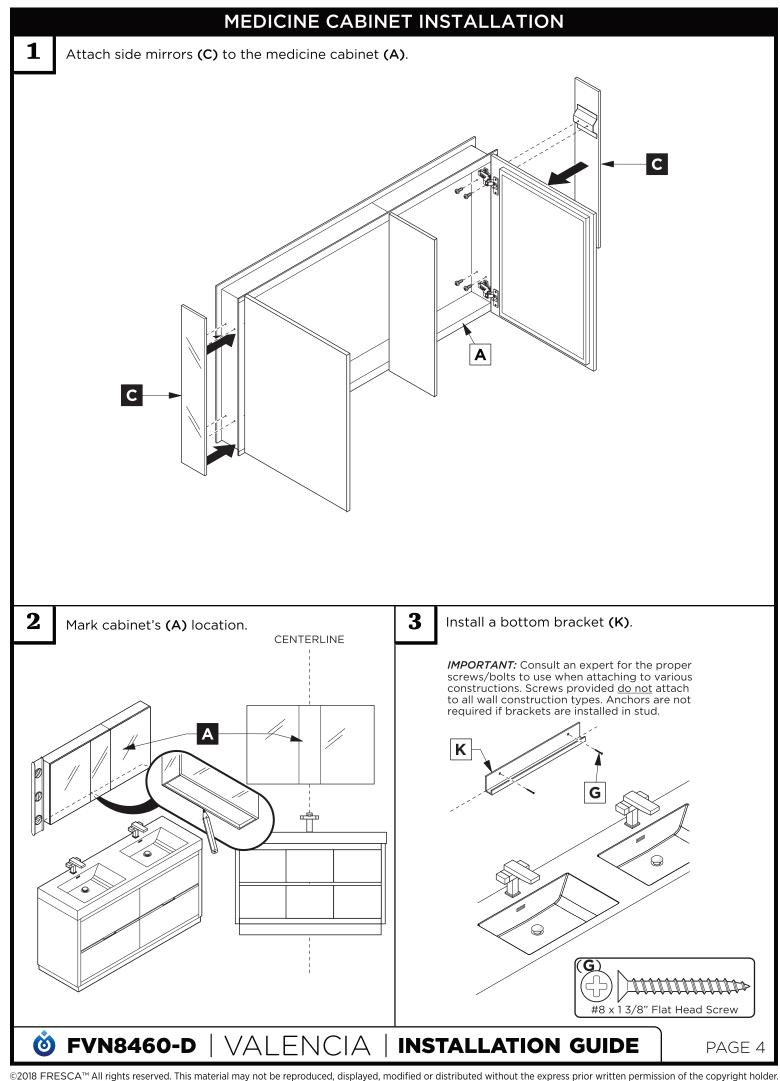


MEDICINE CABINET INSTALLATION

4

Join cabinets (A) together.

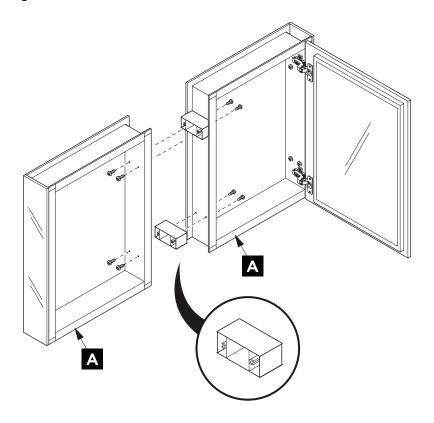

* Place cabinet (A) on the bottom bracket (K) and secure it with a top bracket (L).

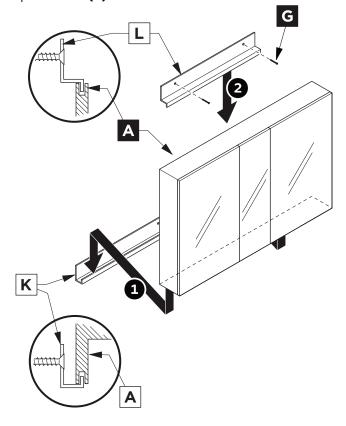



*This step requires assistance to hold cabinet in place until top bracket is securely attached.

FVN8460-D | VALENCIA | INSTALLATION GUIDE




1

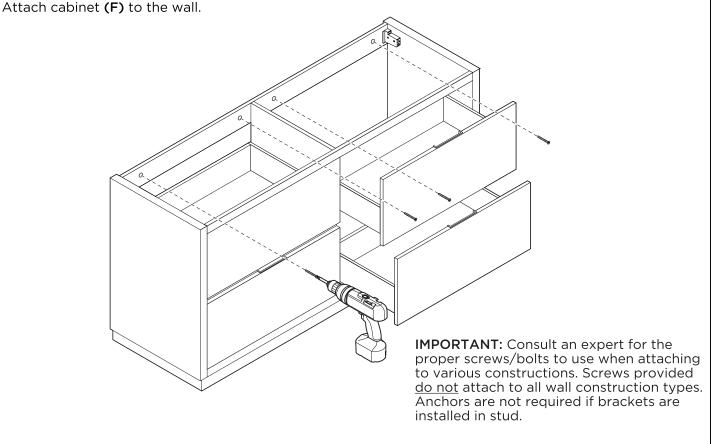

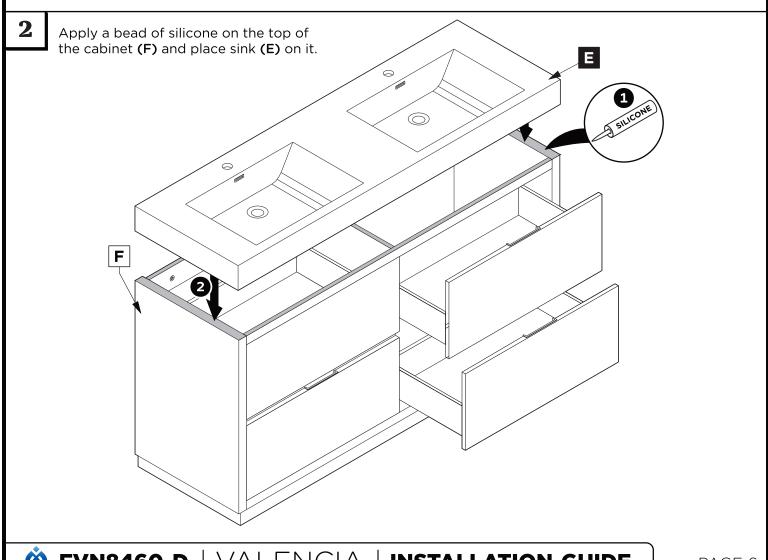


FVN8460-D | VALENCIA | INSTALLATION GUIDE

DRAWER REMOVAL

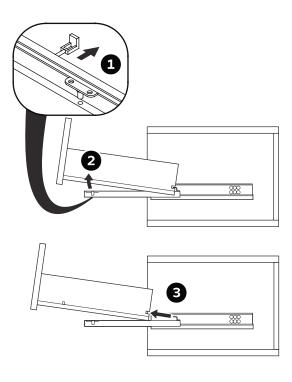

DRAWER INSTALLATION

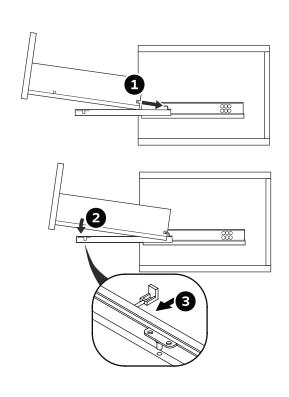

FVN8460-D | VALENCIA | INSTALLATION GUIDE

P-TRAP & POP-UP INSTALLATION INSTRUCTIONS

