


PAOLINI

EXECUTIVE DESK ONE DRW

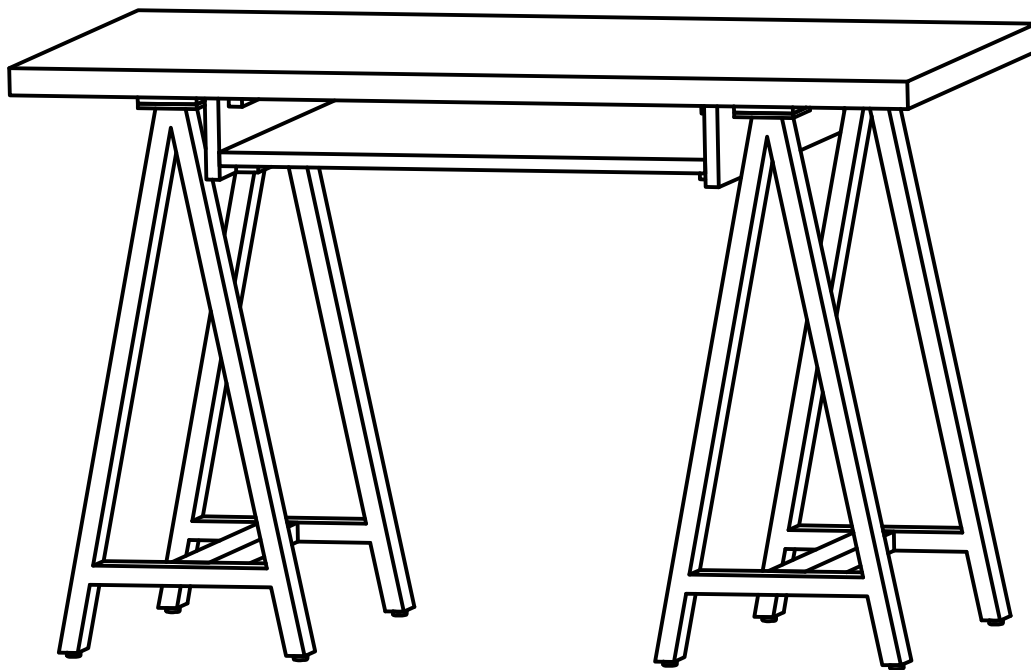


SAFETY INFORMATION

MODEL # - 22107004


PARTS DESCRIPTION

A

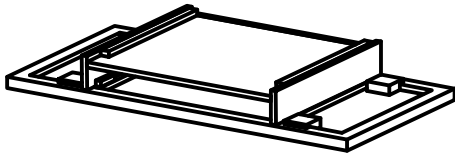


TOP
QTY - 1

B

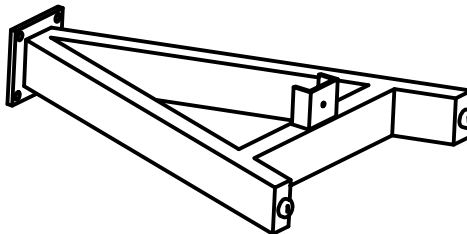

LEGS
QTY - 4

C




LEG PART
QTY - 2

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

1

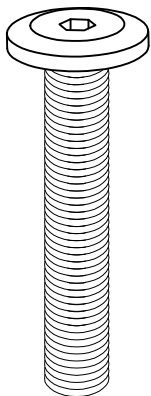


ALLEN KEY BOLT
M 8 X 30 mm
QTY - 16

2

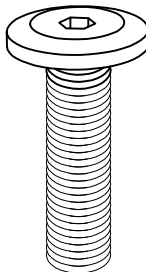


ALLEN KEY BOLT
M 6 X 20 mm
QTY - 4

3

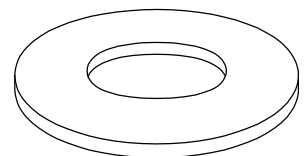


WASHER
8 X 20
QTY - 16



4

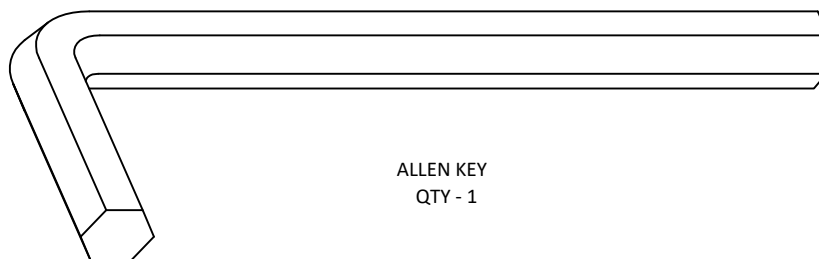

ALLEN KEY
QTY - 1


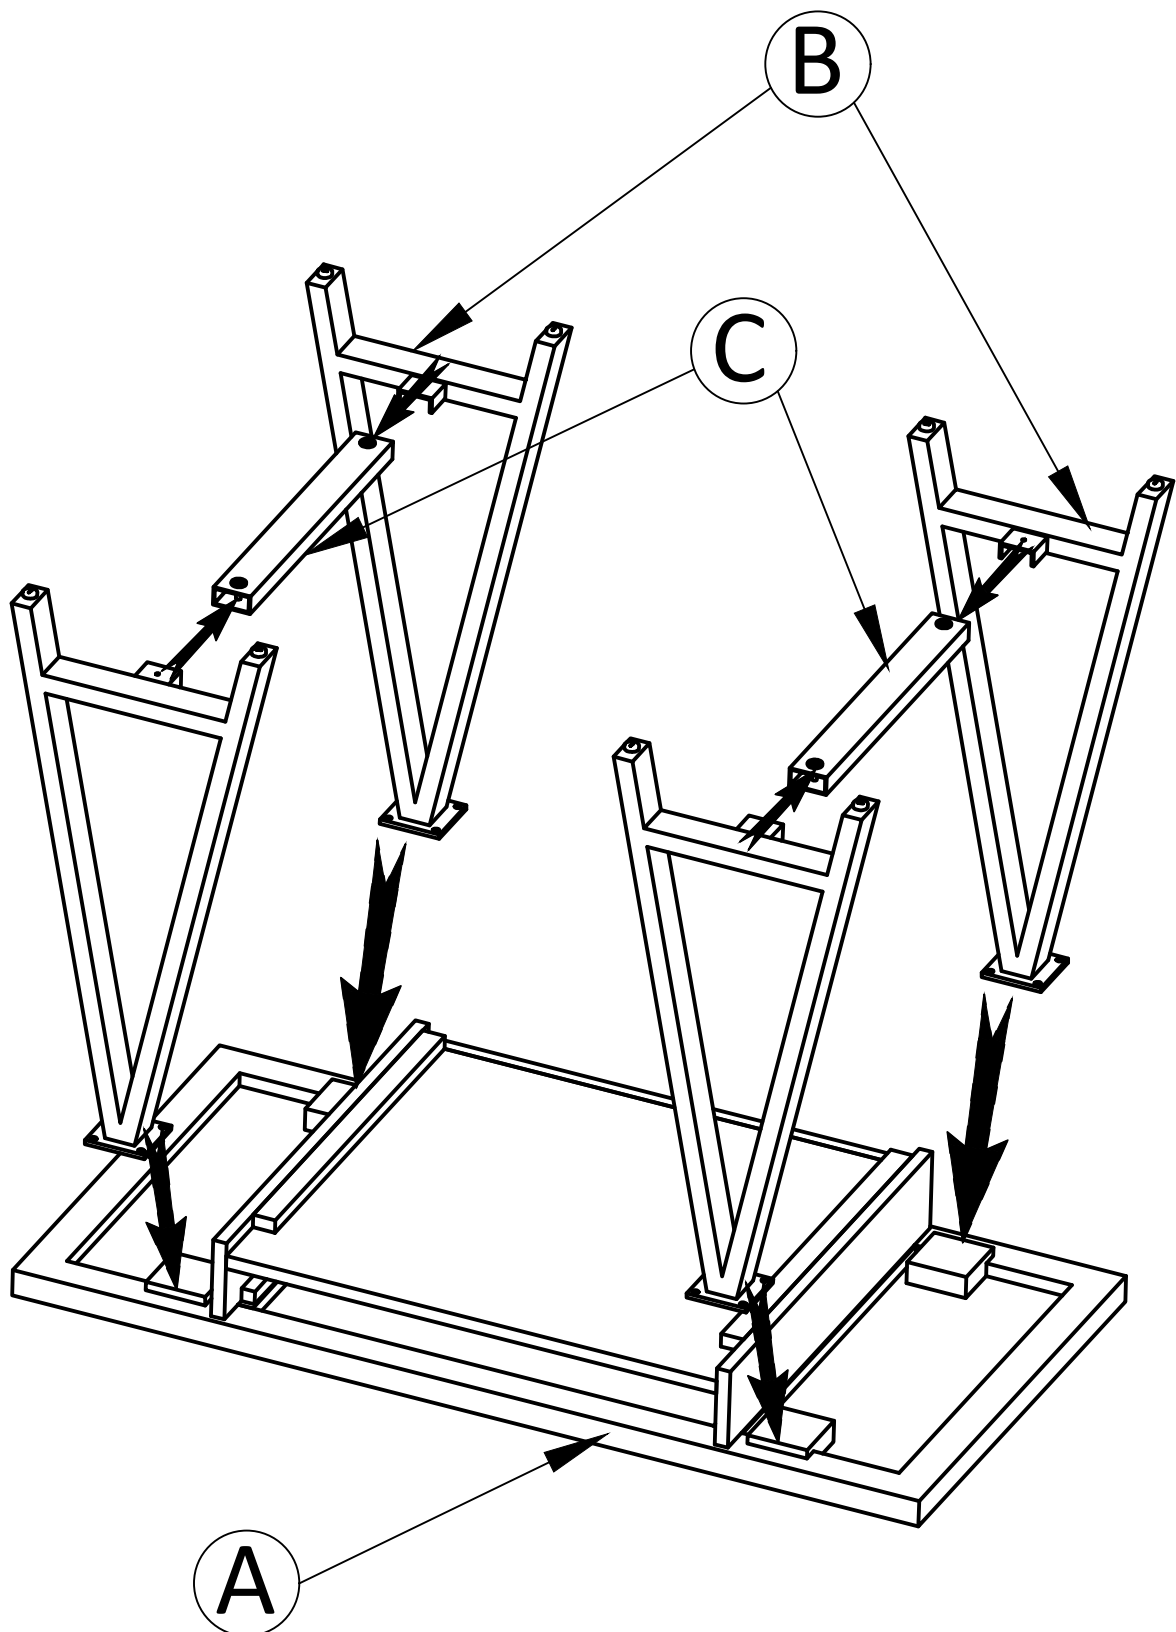


STEP - 1

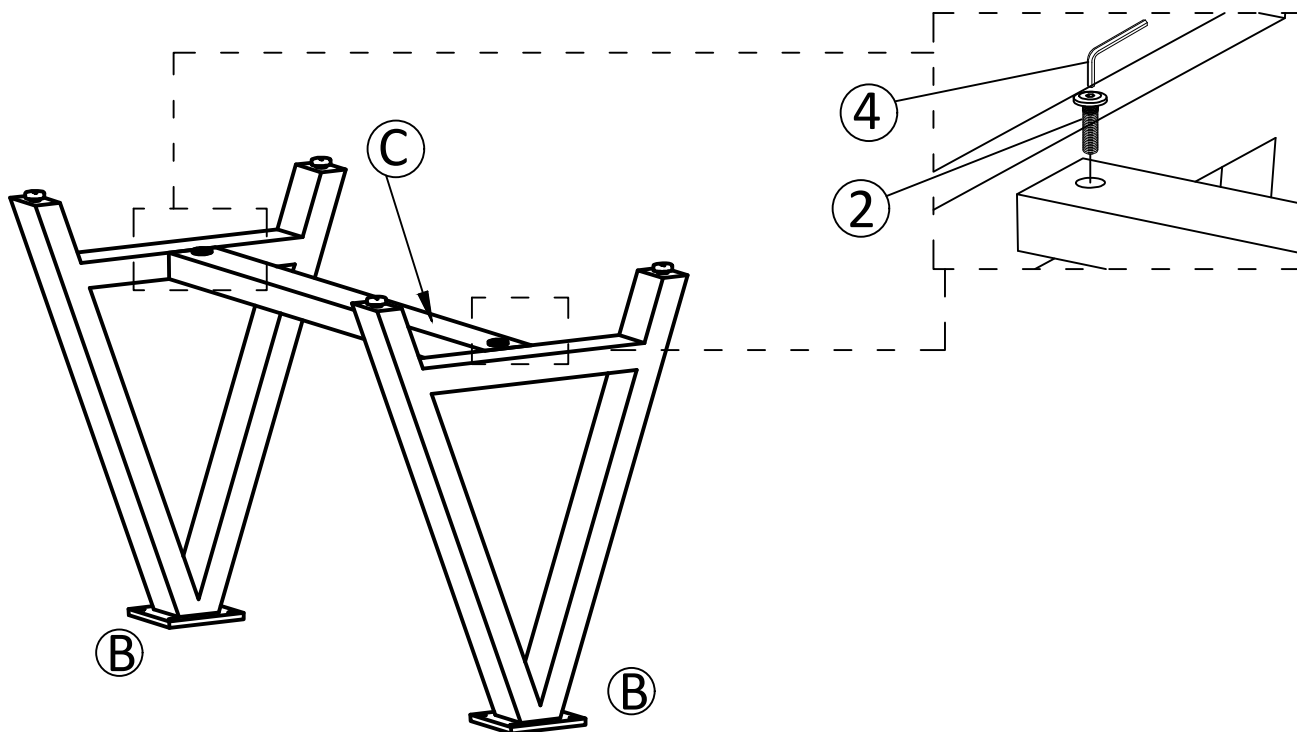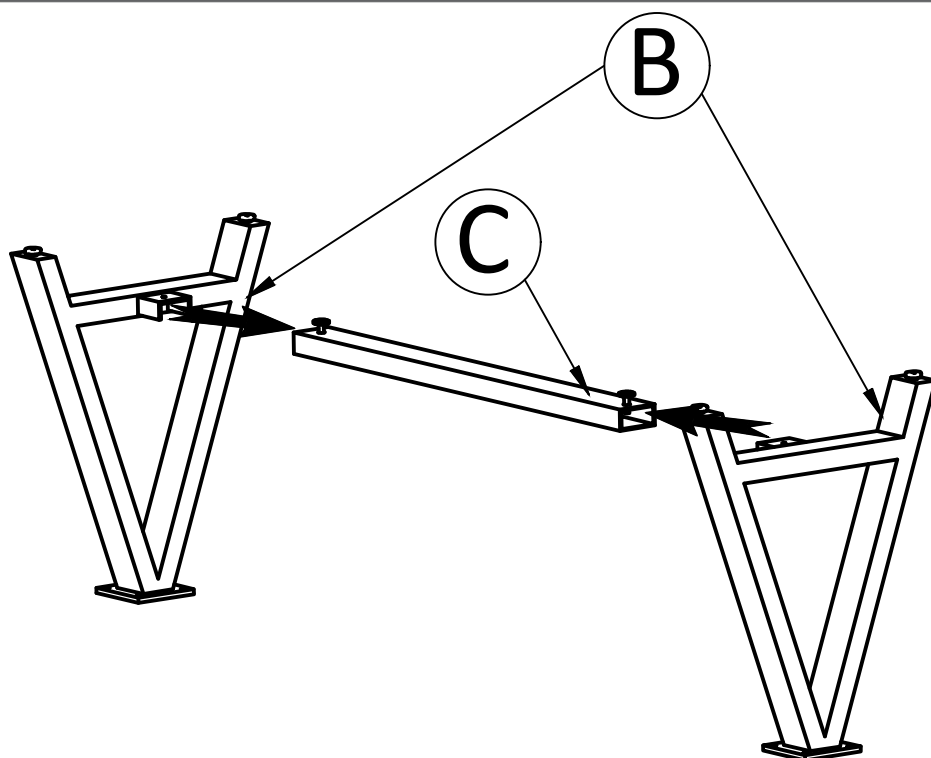


1. Attach Legs (B) to Center (C) with Allen key Bolts (2) .
2. Use Allen key (4) to tighten.

STEP - 2

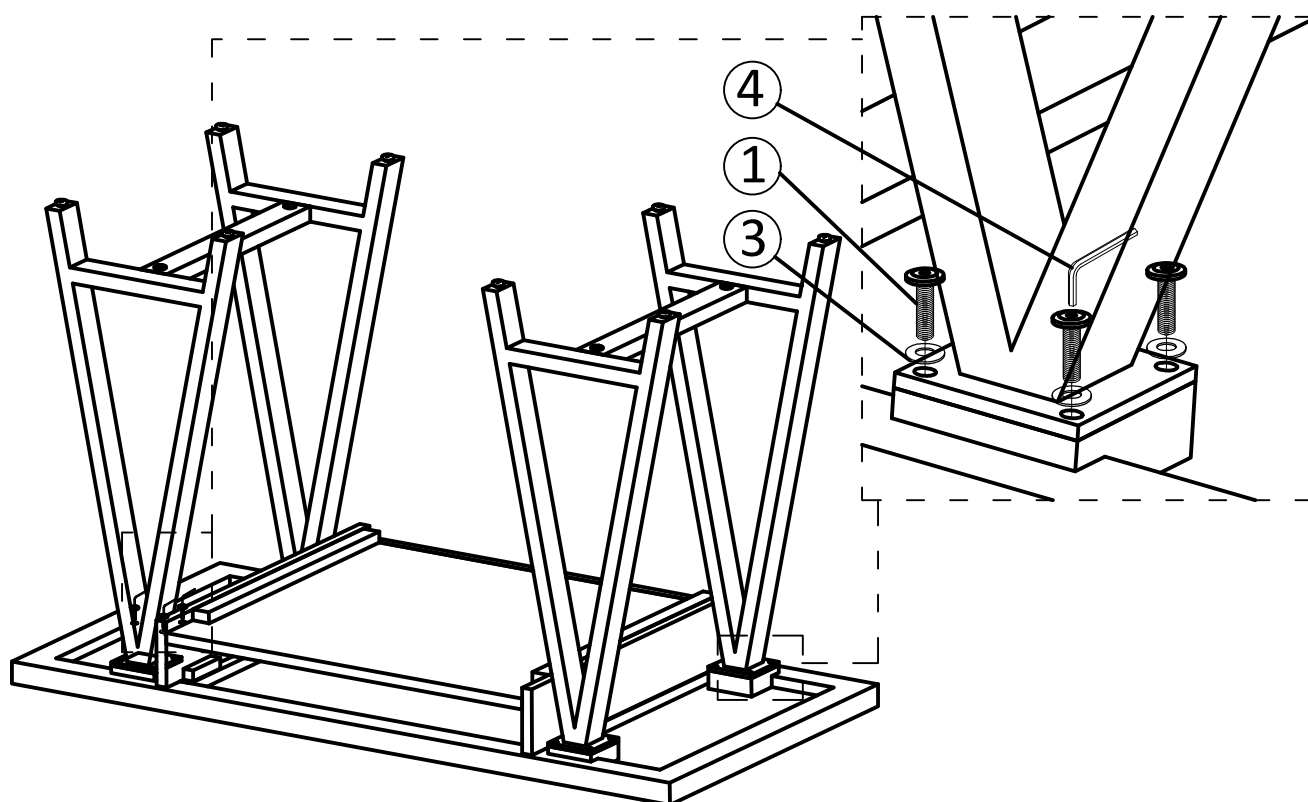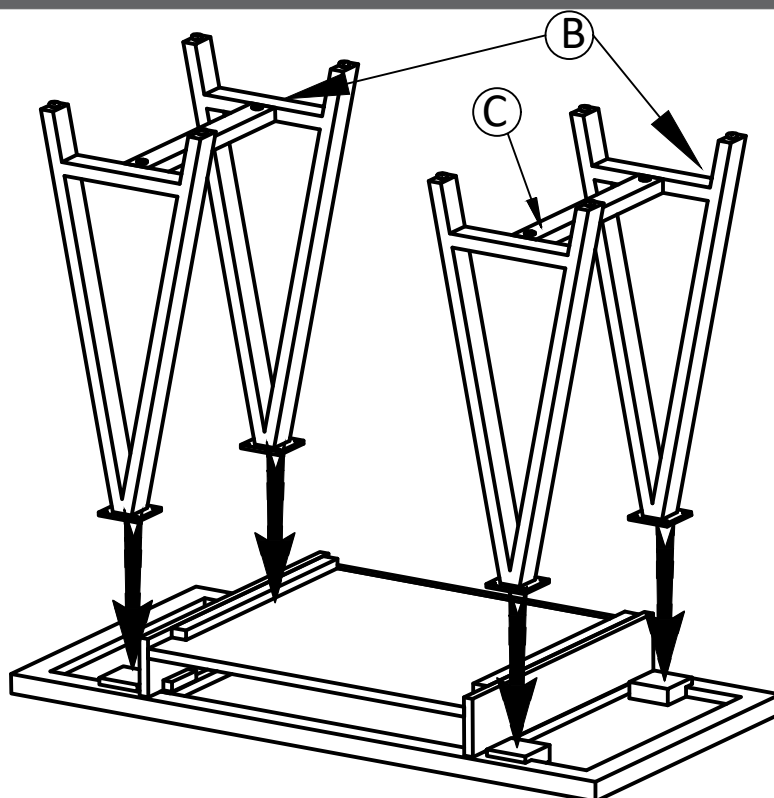

1. Attach Legs (B) & Center (C) Top (A) with Allen key Bolts (1) and Washers (3).
2. Use Allen key (4) to tighten.

STEP - 3

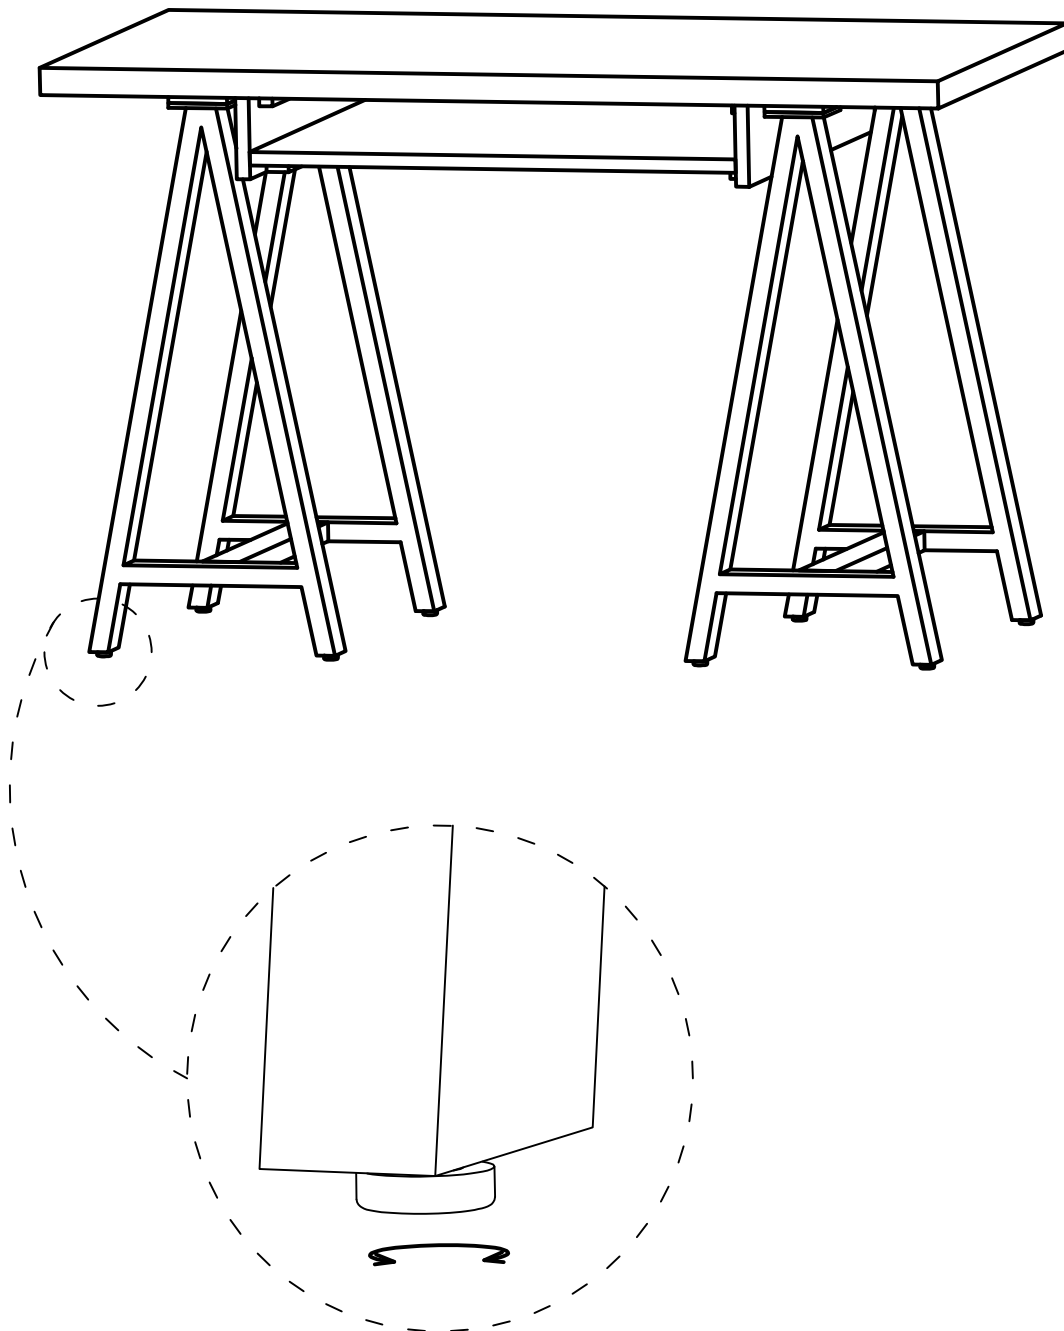

Note: Levelers on bottom of legs can be adjusted if floor is uneven