

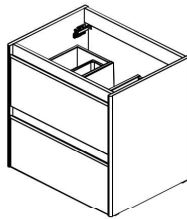
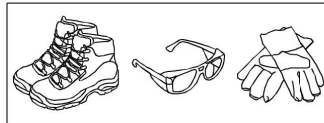



Installation Instructions

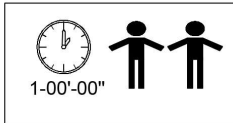


60cm; 23 5/8"
80cm; 31 1/2"
100cm; 39 3/8"

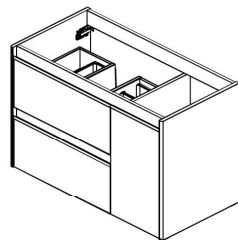



90cm; 35 7/16"

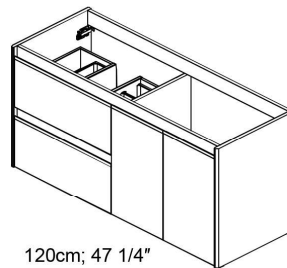

120cm; 47 1/4"

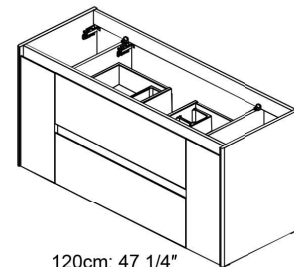


120cm; 47 1/4"

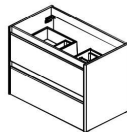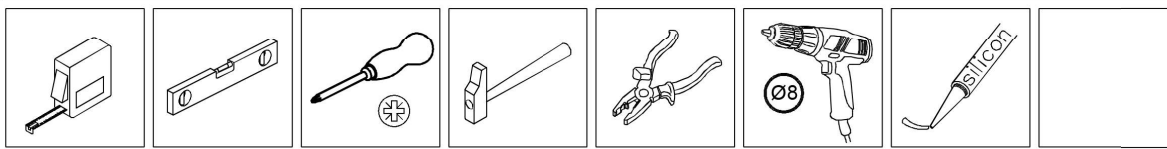


60cm; 23 5/8"
80cm; 31 1/2"
100cm; 39 3/8"



x2 x4 x4
BO-719




90cm; 35 7/16"



120cm; 47 1/4"



x3 x6 x6
BO-719


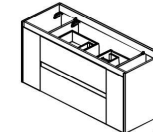


120cm; 47 1/4"



x4 x8 x8
BO-719

01.

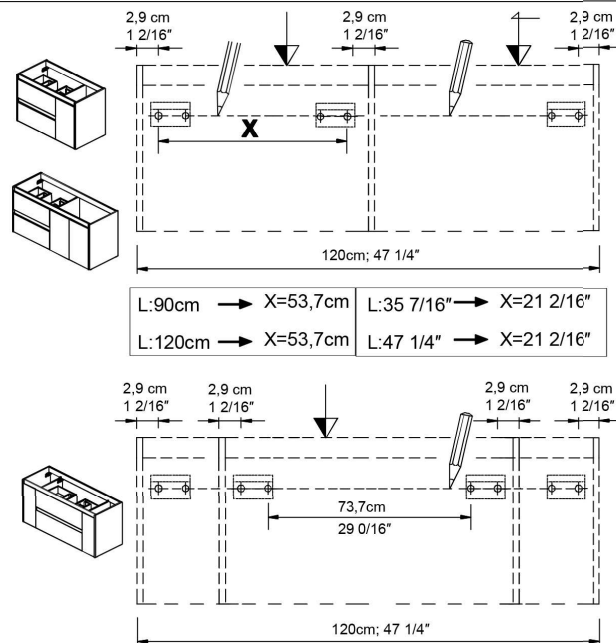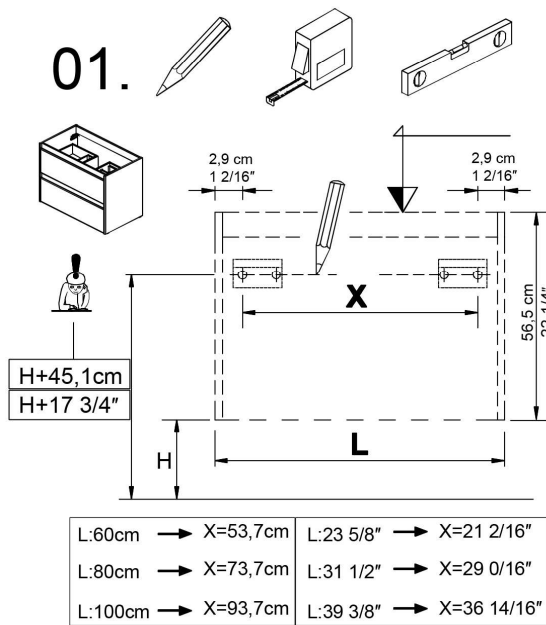

Collection
Installation
Instructions


Model |
Ambra

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegetown, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.wsbatchcollections.com - info@wsbatchcollections.com




02.

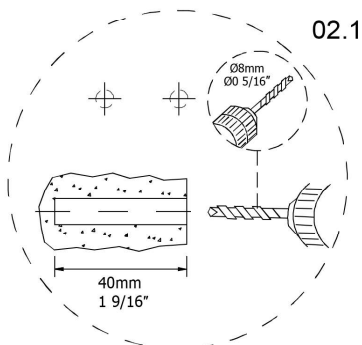

BC-719





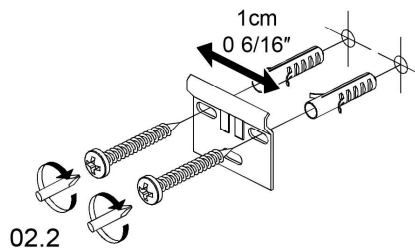


03.

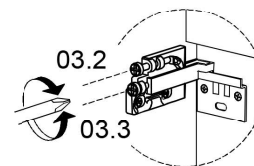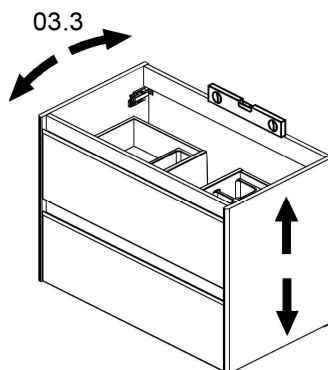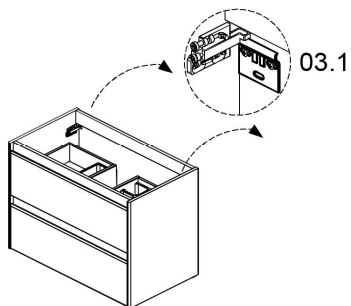

03.2
± 1cm
± 0 6/16"

04.

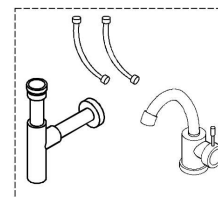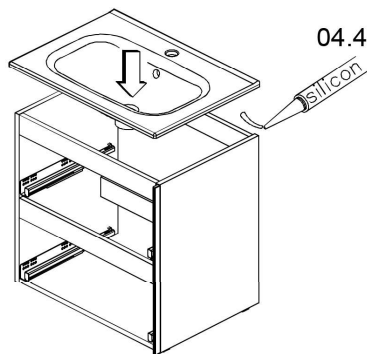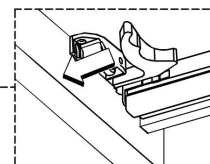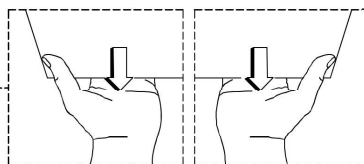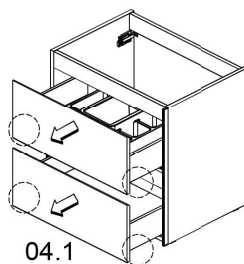

Collection
Installation
Instructions





Model |
Ambra

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm



WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Colleagueville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com

05.

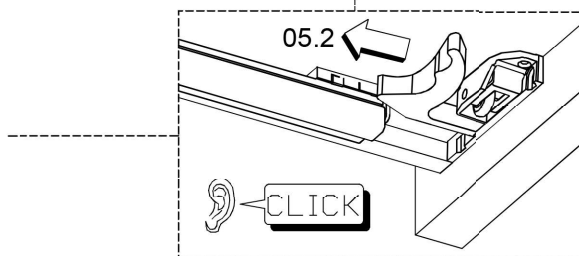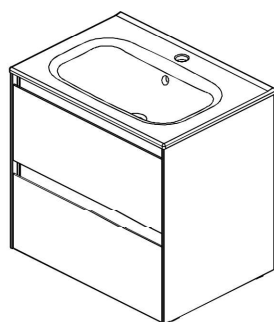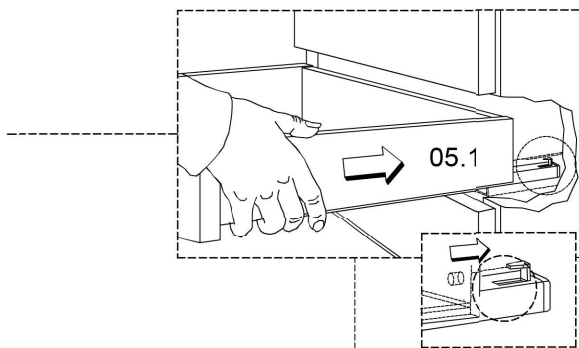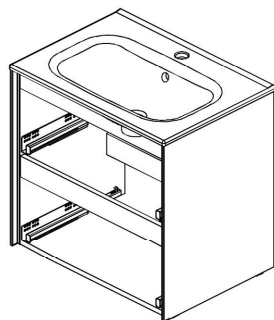

06.

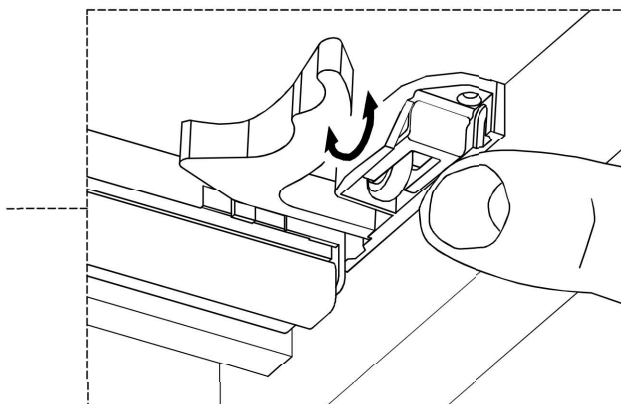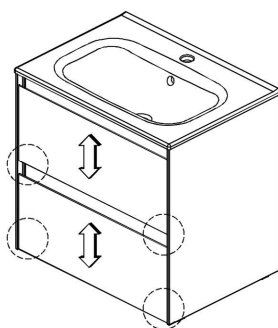

Collection
Installation
Instructions


Model |
Ambra

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com






07.

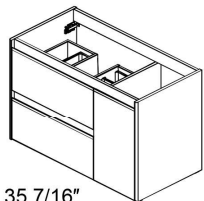

90cm; 35 7/16"

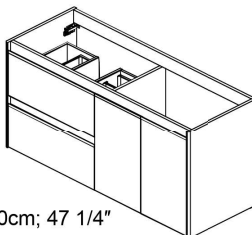

120cm; 47 1/4"

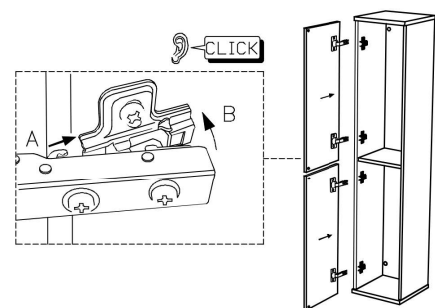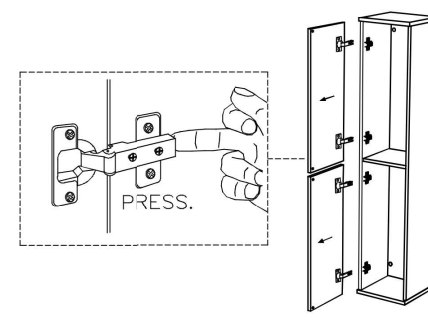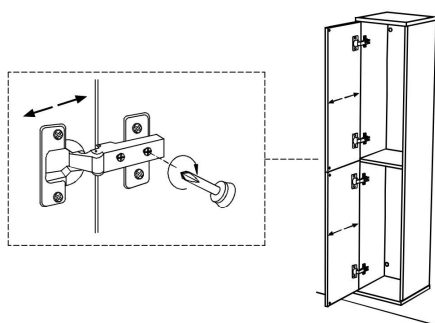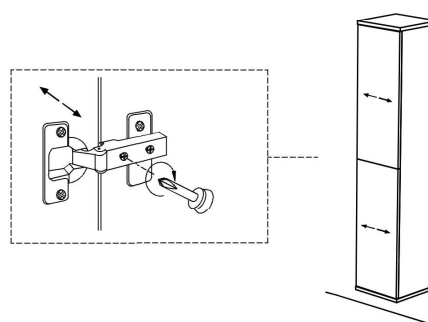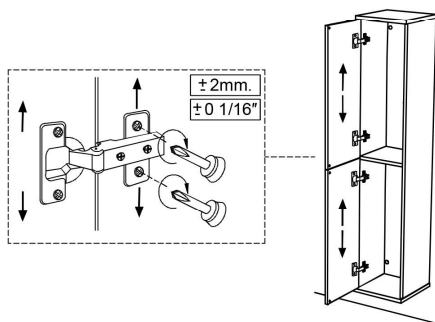

Collection
Installation
Instructions

Model |
Ambra

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com

17/05/17

ESPEJOS/MIRRORS


144373

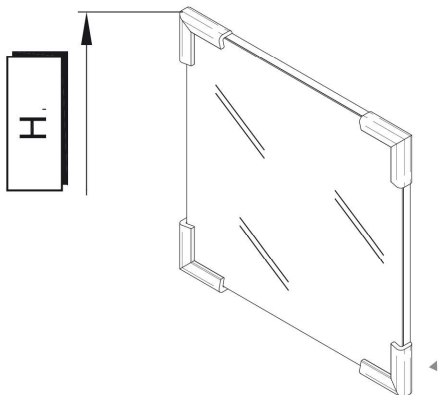


- E** No retirar protecciones hasta que el espejo esté instalado
- UK** NO TAKE OFF THE PROTECTIONS UNTIL THE MIRROR IS INSTALLED
- D** Schutz nicht zurücksiehen, bis der Spiegel ist verpackt!
- F** NE PAS RETIRER LA PROTECTION TANT QUE LE MIROIR N'EST PAS INSTALLÉ.
- GR** ΜΗΝ ΑΦΑΙΡΕΙΤΕ ΤΑ ΠΡΟΣΤΑΤΕΥΤΙΚΑ ΜΕΧΡΙ ΤΗΝ ΤΟΠΟΘΕΤΗΣΗ ΤΟΥ ΚΑΘΡΕΠΤΗ
- NL** Verwijder de protectie niet tot dat de spiegel is geïnstalleerd
- H** A VÉDŐCSOMAGOLÁST A TÜKÖR FELHELYEZÉSÉIG KÉRJÜK MEGŐRIZNI
- I** Non ritirare protezioni fino a che lo specchio sia installato
- NO** Ikke fjern beskyttelsen før speilet er montert opp
- RU** Не удалять элементы защиты до завершения установки зеркала
- PL** Nie zdejmować zabezpieczenia dopóki lustro nie będzie zamontowane!!!




01.

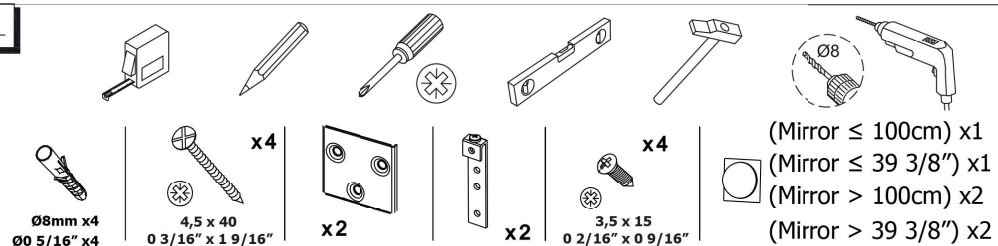

02.

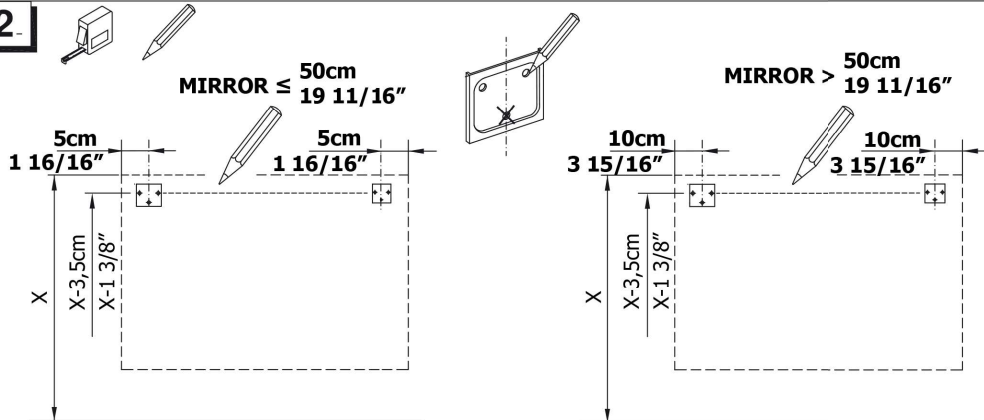

03.

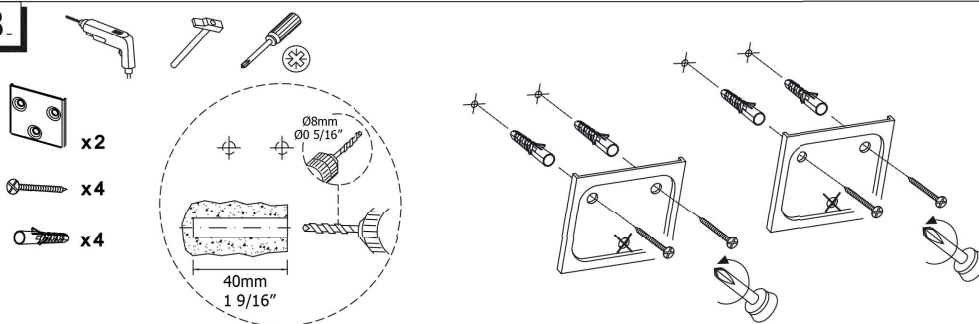

Collection
Installation
Instructions


Model |
Mirror

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Colleagueville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.wsbatchcollections.com - info@wsbatchcollections.com


04.



04.1

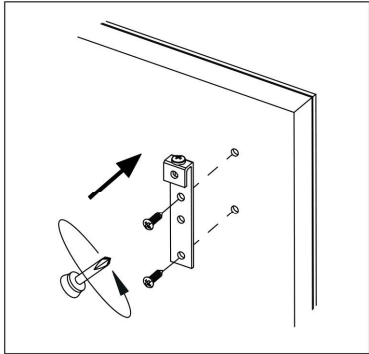


04.2

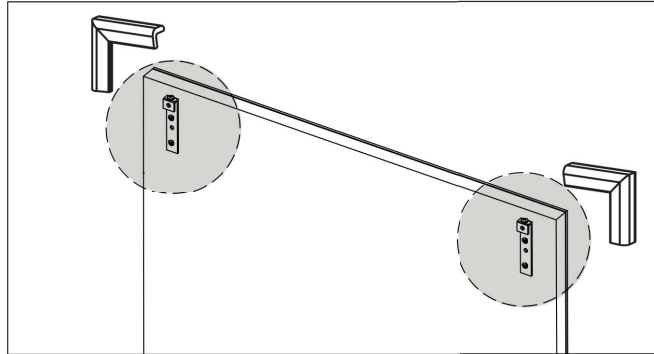


05.




MIRROR \leq 100cm
39 3/8"

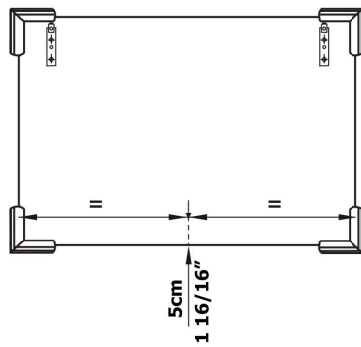


MIRROR $>$ 100cm
39 3/8"

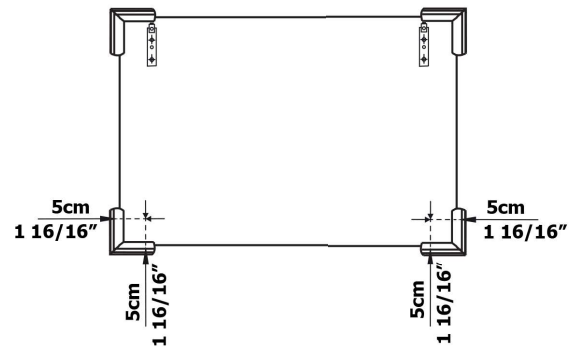

06.

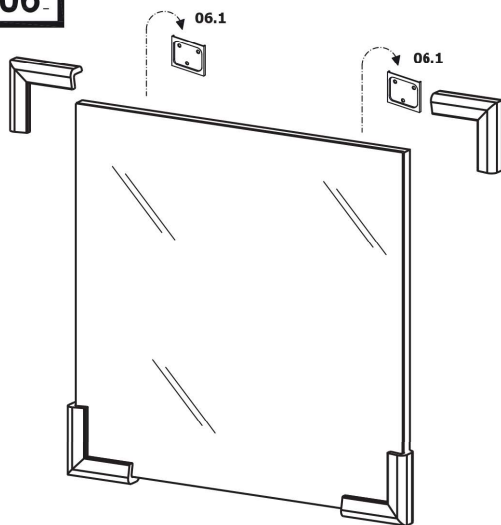

07.

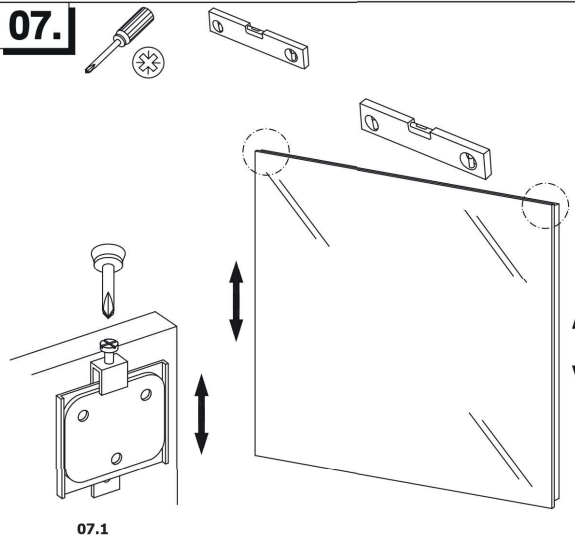

07.1

Collection
Installation
Instructions

Model |
Mirror

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm

WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegetown, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com