

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen key & Wrench.

## CARE AND MAINTENANCE

**WOOD CARE:** Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.





# SAFAVIEH

## C O U T U R E






Model# SFV2134








Product Dimensions: 46"W x 46"D x 30.25"H



  **WARNING**    
Weight capacity: 50 lbs  
Warning : Do not stand on product  
Warning : Do not over torque bolts

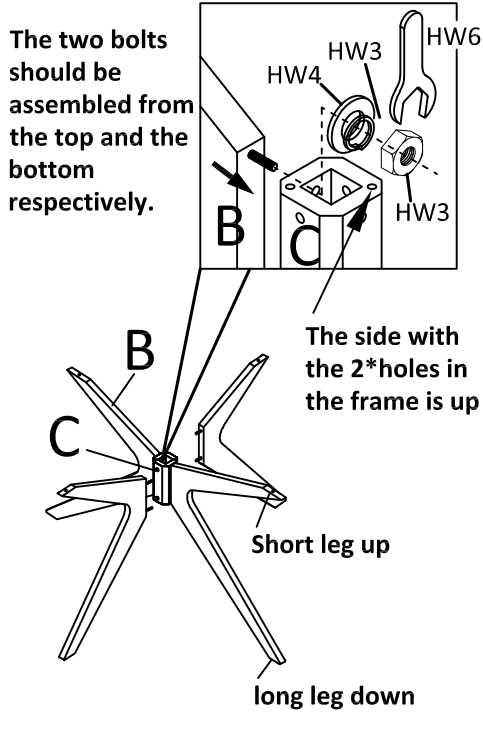
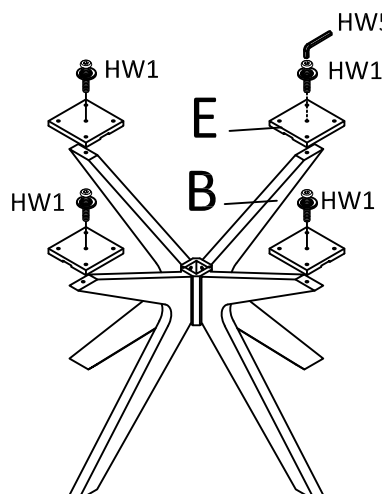
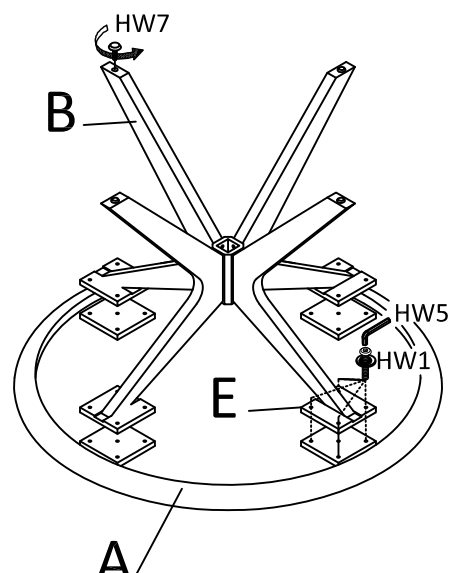
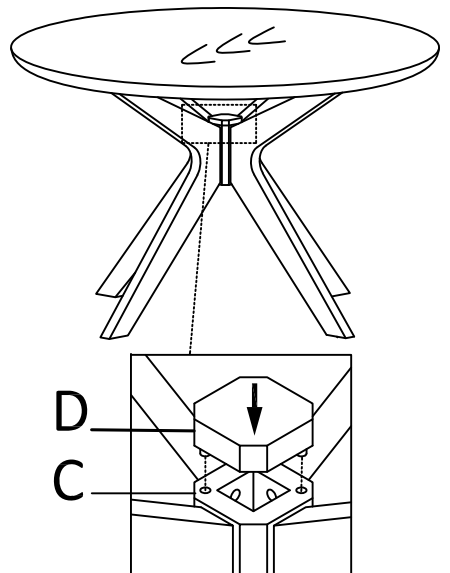
## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Table Top		1x
B	Table Leg		4x
C	Hollow Pedestal		1x
D	Cover of Pedestal		1x
E	Mounting Plate		4x

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt	 5/16"-18 x 1.25"	20x
HW2	Hex Nut	 5/16"-18	8x
HW3	Split Lock Washer	 5/16"	8x
HW4	Flat Washer	 5/16" x 3/4"	8x
HW5	Allen Key	 4mm	1x
HW6	Wrench		1x
HW7	Levelers		4x

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen key & Wrench.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

<p><b>1</b></p>  <p>The two bolts should be assembled from the top and the bottom respectively.</p> <p>The side with the 2*holes in the frame is up</p> <p>Short leg up</p> <p>long leg down</p>	<p><b>2</b></p>  <p>HW1</p> <p>HW5</p> <p>B</p> <p>E</p>	<p><b>3</b></p>  <p>HW7</p> <p>B</p> <p>HW5</p> <p>HW1</p> <p>E</p> <p>A</p>	<p><b>4</b></p>  <p>After properly adjusting the levelers, make sure all bolts are fully tightened.</p>
<p><b>Step 1</b></p> <p>Insert the bolts on the Table Leg (B) into the screw holes of Hollow Pedestal (C). Place the Flat Washer (HW4) then Split Lock Washer (HW3) onto the bolt. Use the Wrench (HW6) to screw on the Hex Nut (HW2) to the bolt. Repeat the process for the 7 remaining bolts.</p>	<p><b>Step 2</b></p> <p>Attach the 4*Mounting Plates (E) to the top of the Table Legs (B) by using Allen key (HW5) to screw in the Hex Socket Bolts (HW1).</p>	<p><b>Step 3</b></p> <p>Align the screw holes on the assembled table base to the screw holes on backside of the Table Top (A). Use the Allen key (HW5) to screw in the Hex Socket Bolts (HW1) to attach the Table Base to the Table Top(A). Screw in the Levelers (HW7) to the bottom of the Table Legs (B).</p>	<p><b>Step 4</b></p> <p>Turn the assembled table upright. Use the levelers to make sure the table is level if needed. Align the tenon on the Cover of Pedestal (D) to the holes on the top of the Hollow Pedestal (C). Press it down firmly. Assembly is now complete.</p>