



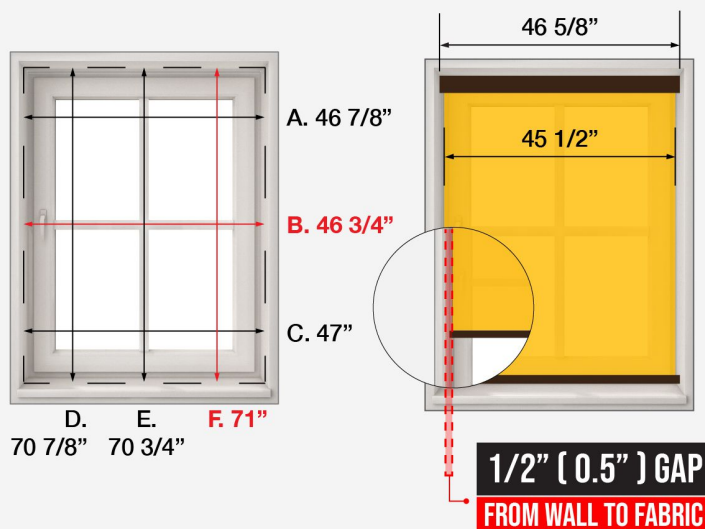

WINDOW MEASUREMENT GUIDE - 1

HOW TO MEASURE FOR WINDOW BLINDS AND SHADES

INSIDE MOUNT

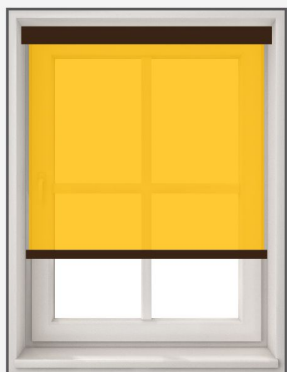

1. WIDTH

MEASURE WINDOW WIDTH AT TOP(A), MIDDLE(B), AND BOTTOM(C).

USE THE NARROWEST MEASUREMENT (B. 46 3/4").

2. HEIGHT

MEASURE WINDOW HEIGHT AT LEFT(D), MIDDLE(E), AND RIGHT SIDE(F).

USE THE LONGEST MEASUREMENT (F. 71").

3. FABRIC COVERING

1 1/4" SHORTER THAN THE FRAME WIDTH.


FOR EXAMPLE,

IF YOU ORDER 46 3/4", THE BLIND WIDTH WILL BE 46 5/8" AND FABRIC COVERING WILL BE 45 1/2".

TIP!

1. WHEN YOU PLACE AN ORDER, MEASURE THE WINDOW ITSELF, NOT THE OLD BLINDS.
2. DO NOT ADJUST ANY BRACKETS OR ROLLER MECHANISM.

OUTSIDE MOUNT

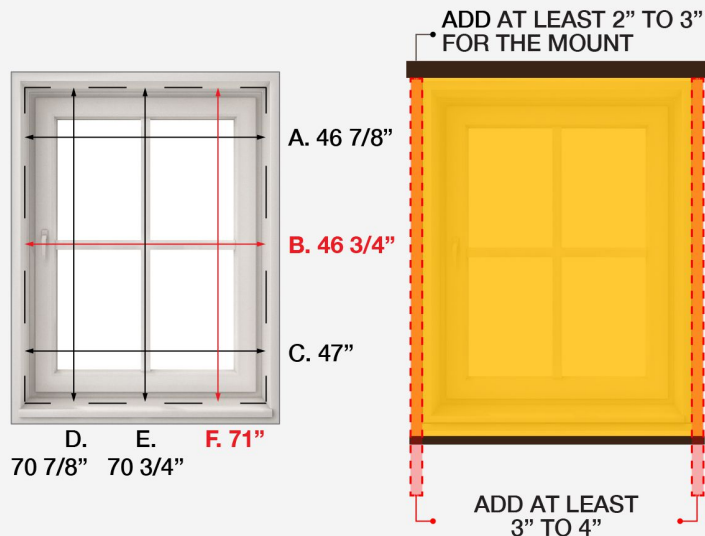

1. WIDTH

MEASURE WINDOW WIDTH AT TOP(A), MIDDLE(B), AND BOTTOM(C).

USE THE LONGEST MEASUREMENT (C. 47").

ADD AT LEAST 3" TO 4" FOR OPTIMUM LIGHT CONTROL AND PRIVACY.

2. HEIGHT

MEASURE WINDOW HEIGHT AT LEFT(D), MIDDLE(E), AND RIGHT SIDE(F).

USE THE LONGEST MEASUREMENT (F. 71").

ADD AT LEAST 2" TO 3" ABOVE THE TOP OF THE WINDOW FOR THE MOUNT.