



# ASSEMBLY INSTRUCTION

## 2 Drawer Bedside Nightstand



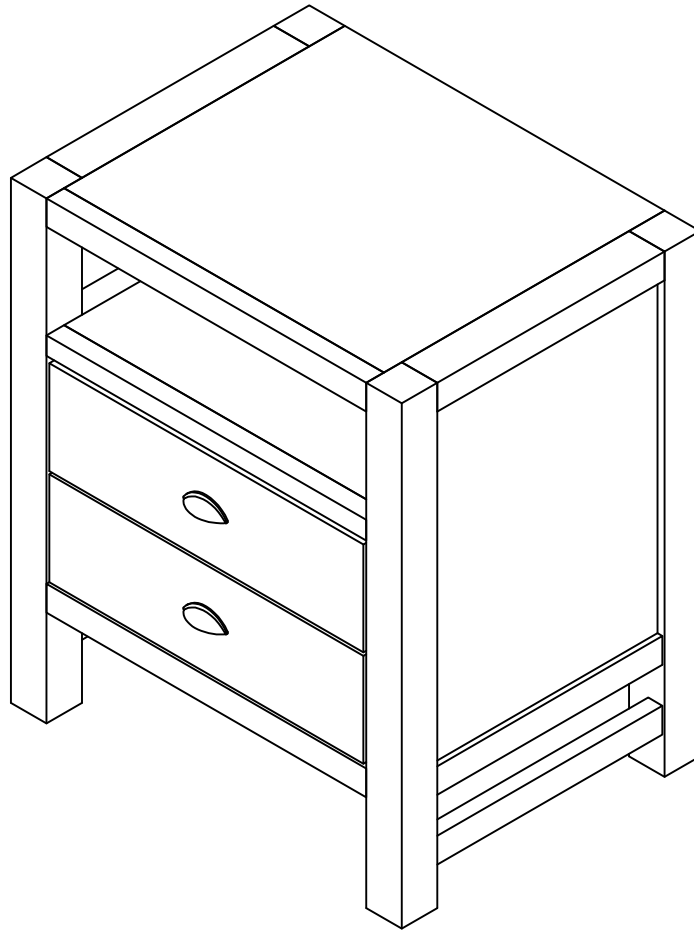


### REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.  
Order replacement parts and hardware at " [www.boltonfurniture.com](http://www.boltonfurniture.com) "

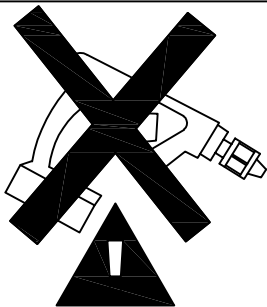

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!  
. Please assemble on a clean soft surface to avoid damage.

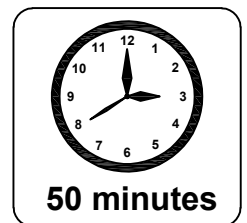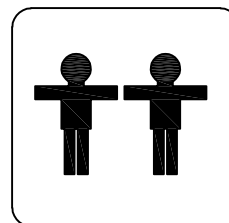


### Tools Required

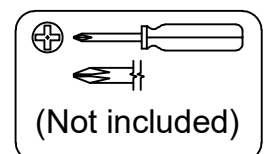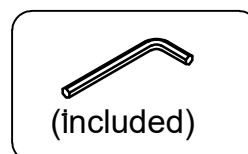


[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Part list - 2 Drawer Bedside Nightstand

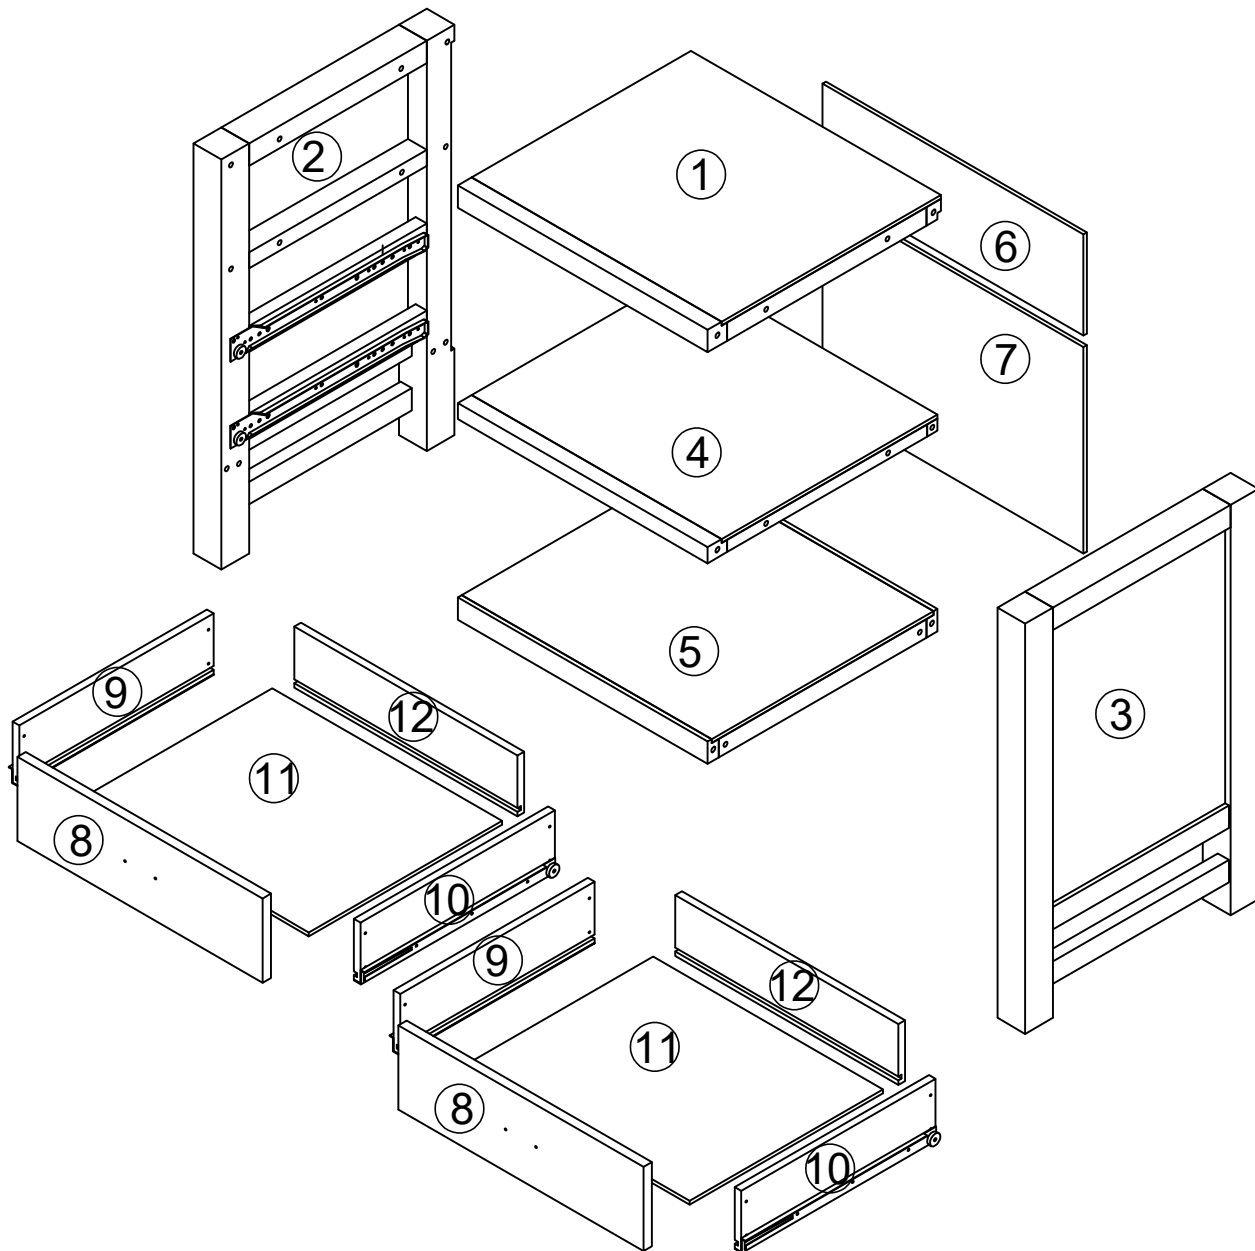


Identifying the hardware-Identify the hardware using the illustrations below

**A**  **12**  
Ø10x35

**B**  **12**  
M6x35mm Bolt

**C**  **16**  
M4 x 25mm Screw

**D**  **04**  
M4 x 13mm Screw

**E**  **02**


**F**  **18**  
M3 x 15mm Screw


**G**  **01**

**H**  **01**  
ANTI-TIP


[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Step 01


**A**  **Ø10x35 12**

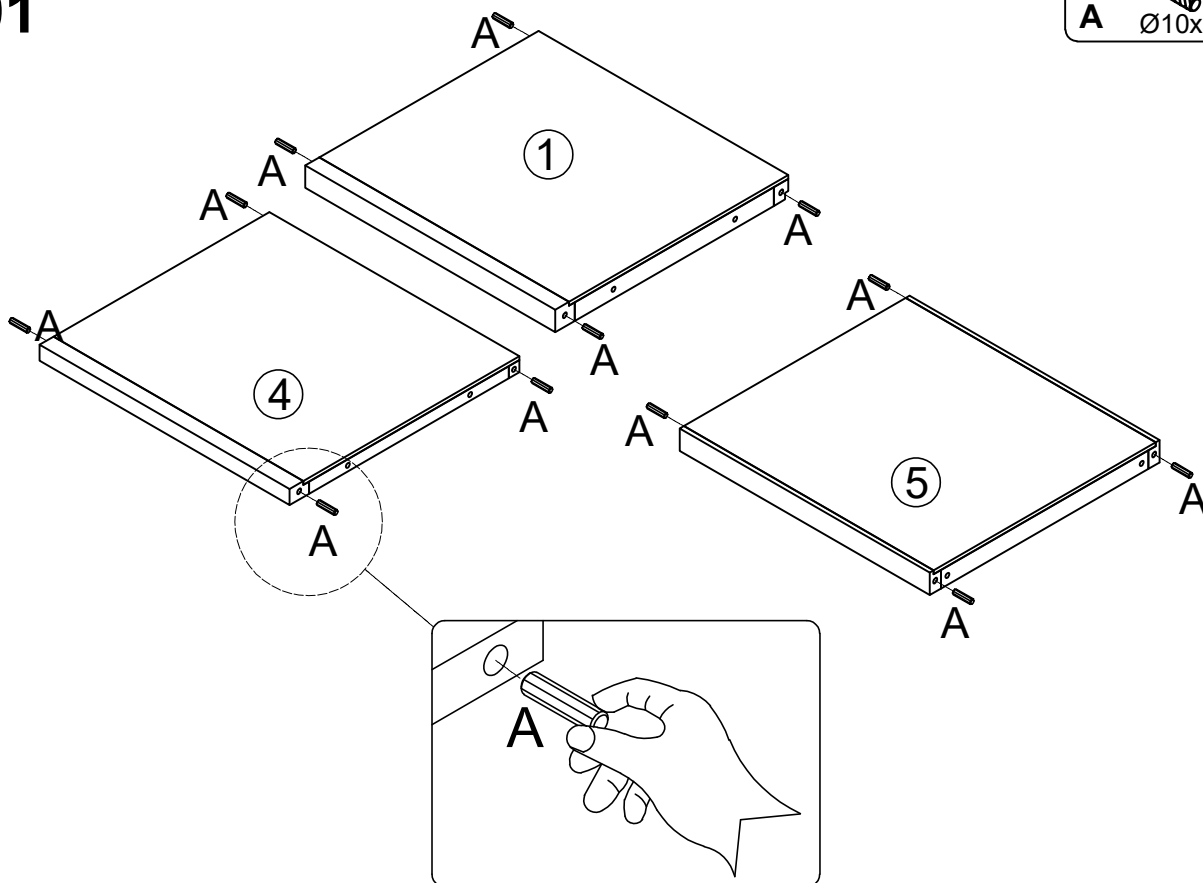


# Step 02

**B**  **06**  
M6x35mm Bolt



**G**  **01**

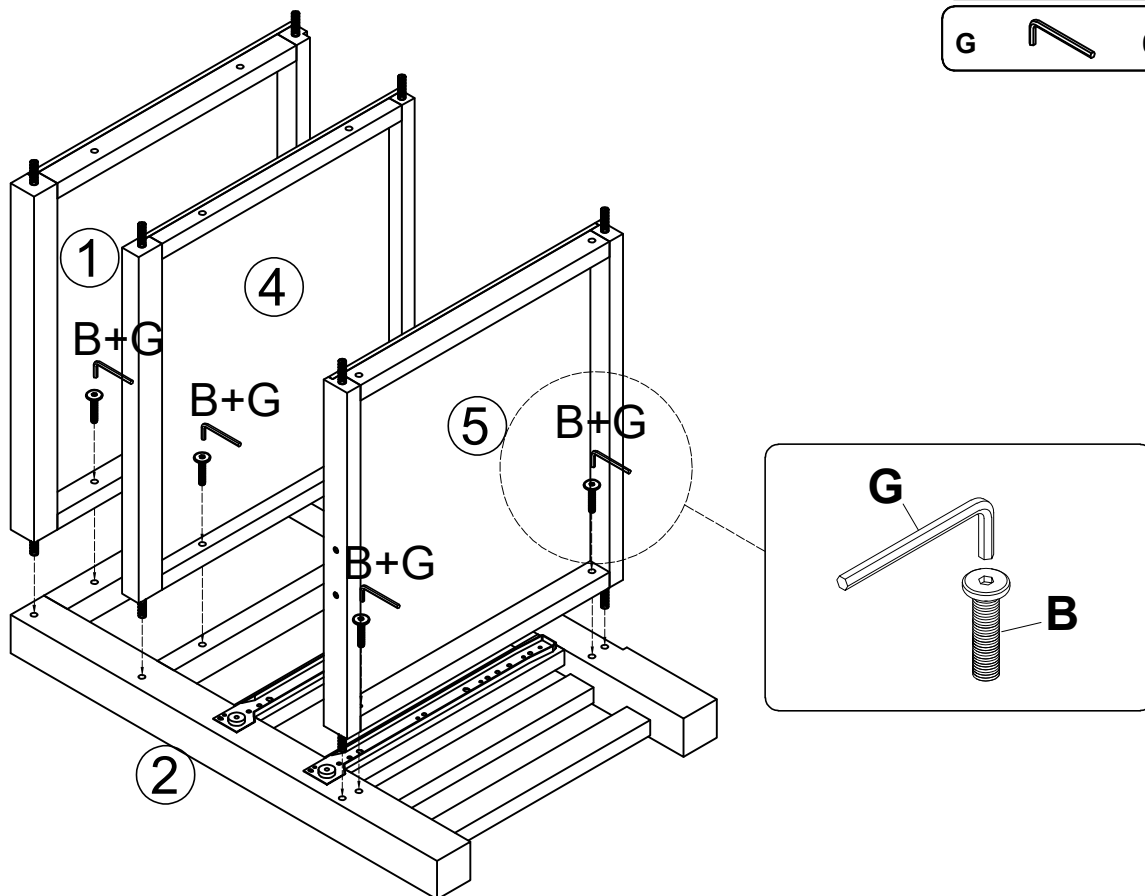

## Step 03

B  06  
M6x35mm Bolt

G  01

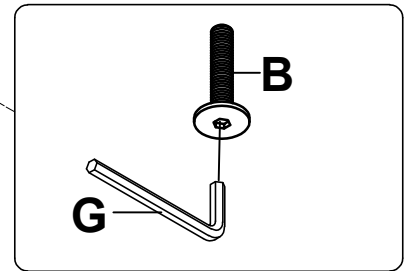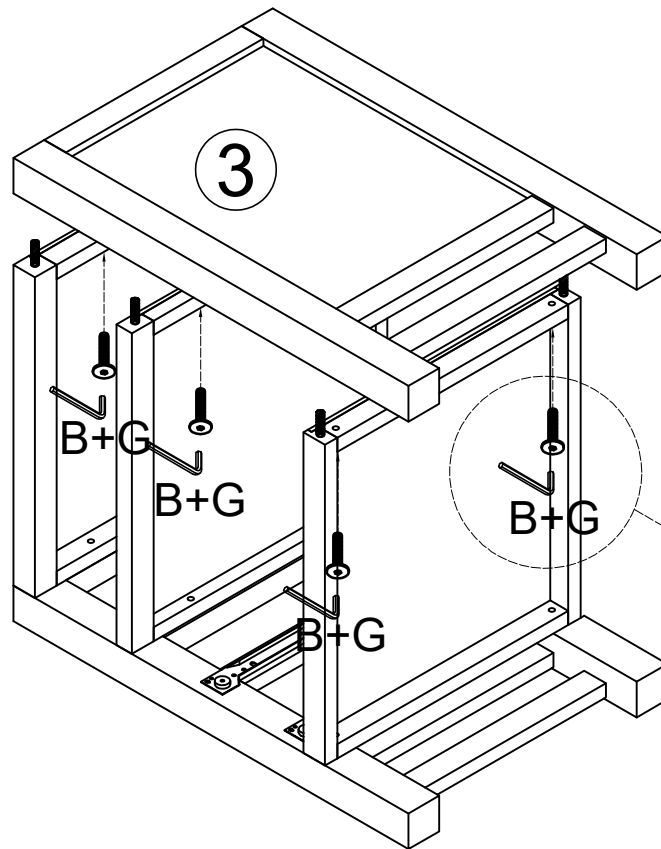






## Step 04

C  16  
M4 x 25mm Screw

D  04  
M4 x 13mm Screw

E  02


 01  
(Not included)

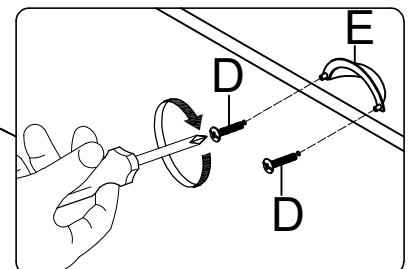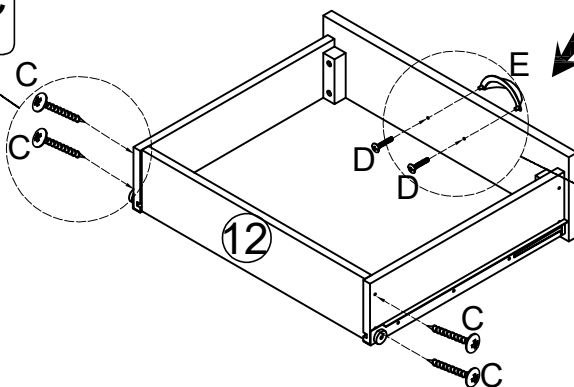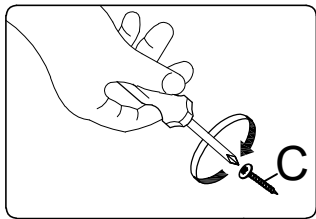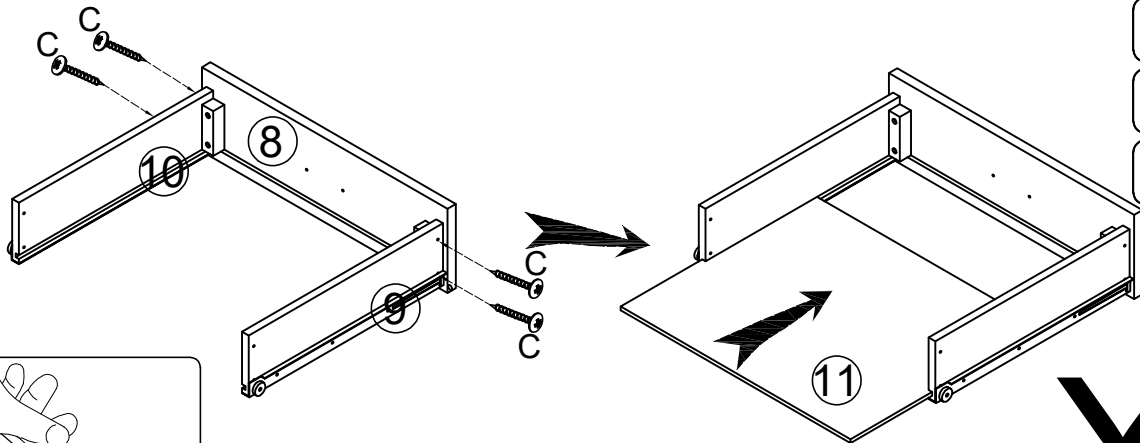


**X 2**

## Step 05

F M3x15mm Screw 18  
01  
(Not included)

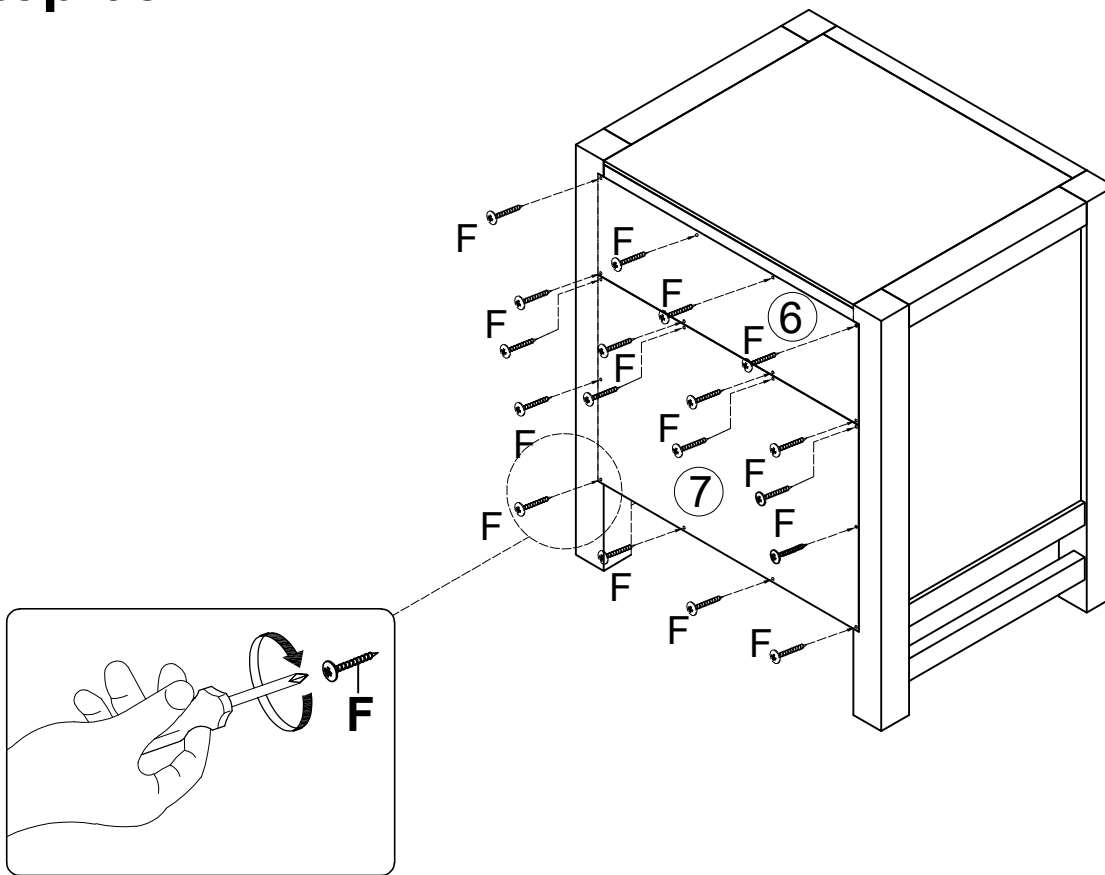

## Step 06

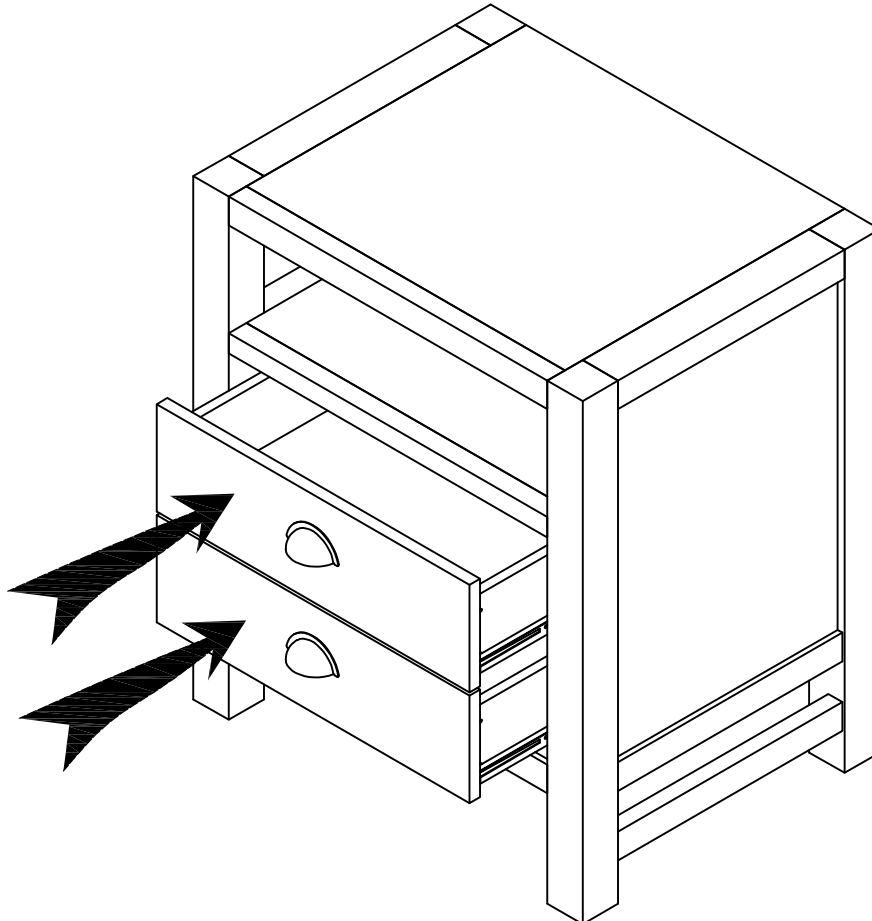

**⚠ WARNING**



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

.ALWAYS install tipover restraint provided.

.NEVER put a TV on this product.



.NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

.NEVER open more than one drawer at a time.

.Place heaviest items in the lowest drawers.





***This is a permanent label.***

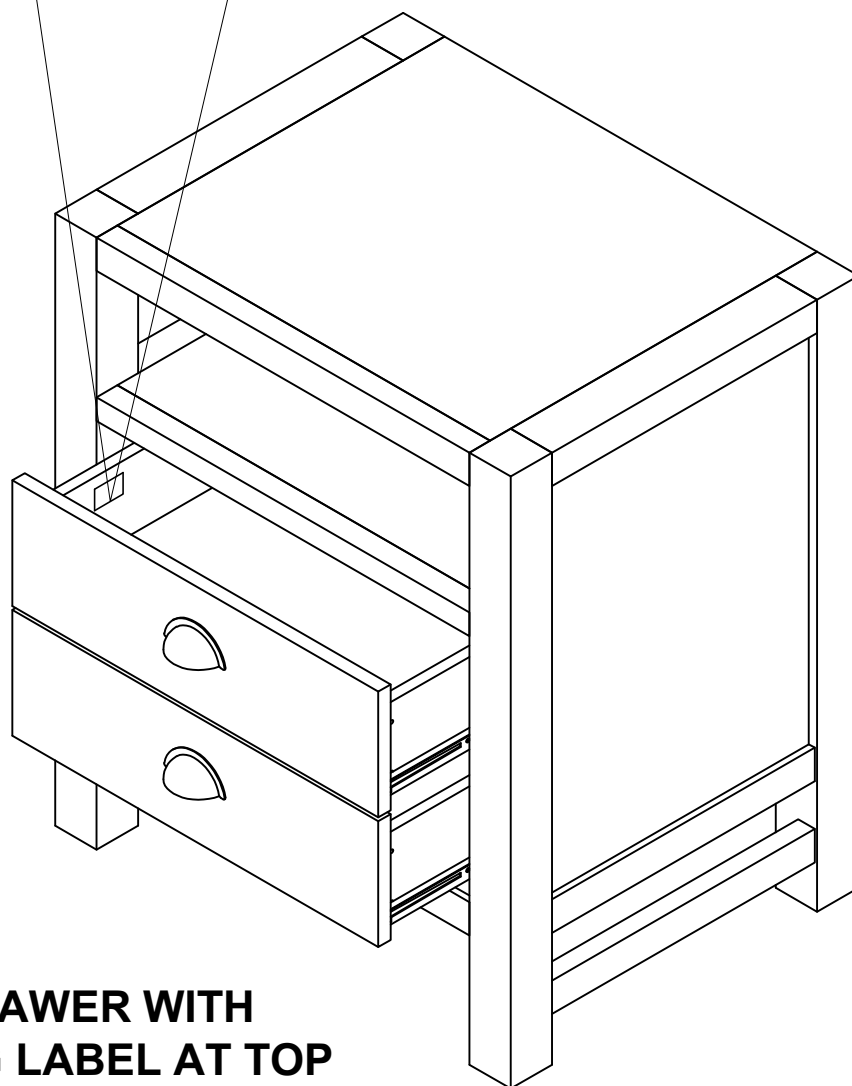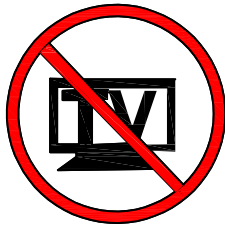***Do not remove!***








**PLACE DRAWER WITH  
WARNING LABEL AT TOP**

"H" Anti-Tip

<b>A</b>	 4x14 Screw	<b>02</b>	<b>C</b>	 Plastic wall bracket	<b>02</b>
<b>B</b>	 4x35 Screw	<b>02</b>	<b>D</b>	 Nylon strap 140mm	<b>01</b>

Secure to Stud behind Wallboard

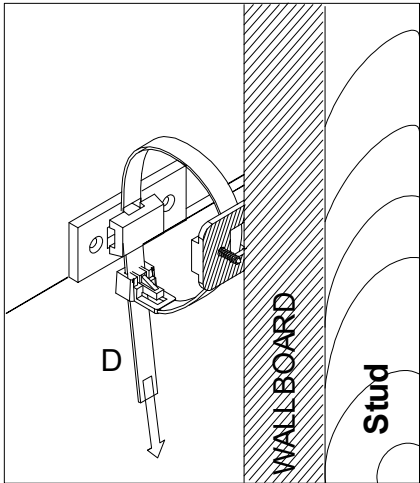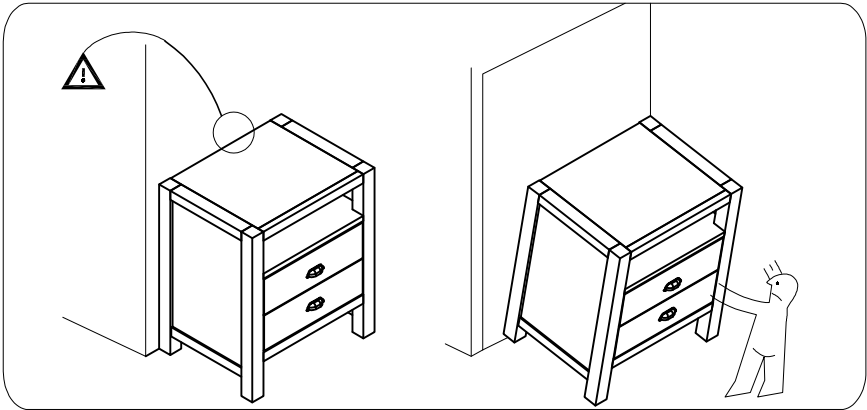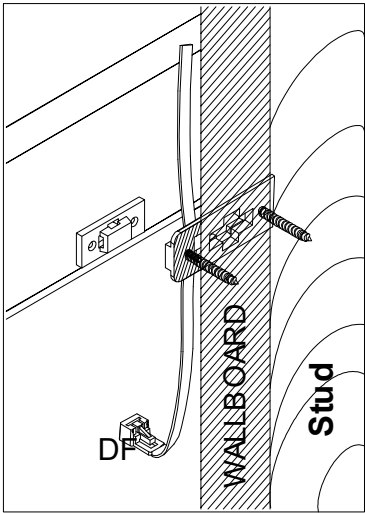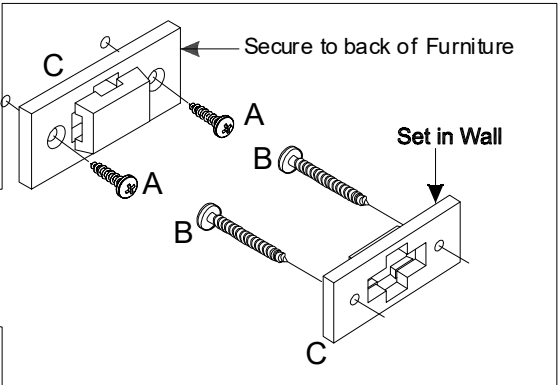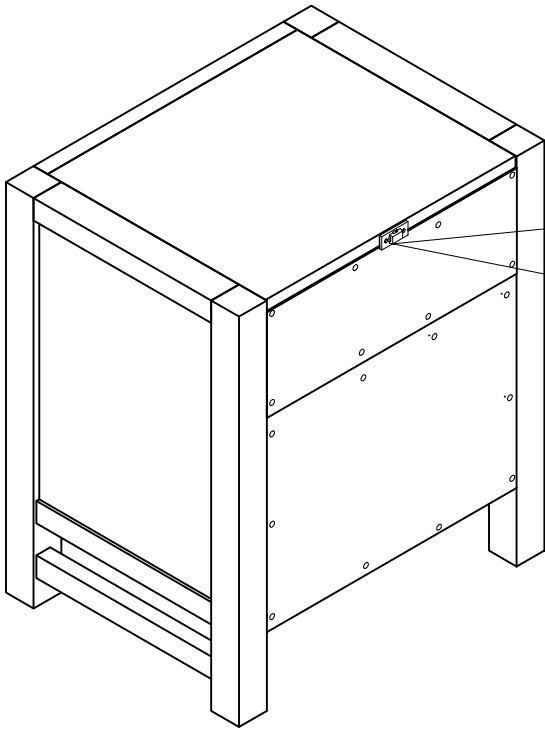

Secure to Stud behind Wallboard!