

B6 Anchor Mount Base Installation

Contents:

Steel Tube, 3 Knobs

Needed:

Installation Hardware & Tools (Varies by Surface)

(This is a suggestion, not guaranteed

to work for your individual situation.)

Deck Surfaces

1. Determine Surface & Prepare

Measure the thickness of the deck.

Deck Thickness" + 1.5" = Bolt Length Minimum

Purchase four hardware sets. (4 bolts, 8 washers, and 4 nuts.)


Purchase/rent tools including wrenches & drill. (You may need a hammer drill.)




2. Drill Holes in Surface

Use the drill to pre-drill four quantity 0.5" holes into deck.


Be sure to space out and align properly.



3. Bolt Anchor Mount In

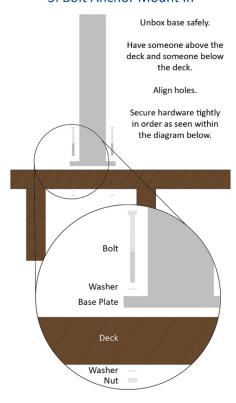

4. Ready Base for Umbrella

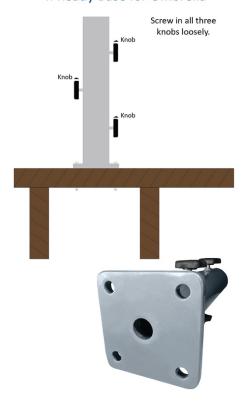

greencorner.com 407-851-7018 info@greencorner.com



B6 Anchor Mount Base Installation

Concrete Surfaces

1. Determine Surface & Prepare

Measure the depth of the concrete, if possible.

Typically 5.5" - 8" long wedge anchor bolts work, depending on concrete depth.

(This base is not suggested for concrete thinner than 5".)

Purchase four hardware sets. (4 wedge anchor bolts, 4 washers, and 4 nuts.)

Purchase/rent tools including a wrench & drill. (You will very likely need a hammer drill.)


Depth in Inches"

(This is a suggestion, not guaranteed to work for your individual situation.)


2. Drill Holes in Surface

Use the drill to pre-drill four quantity 0.5" holes into deck.


Be sure to space out and align properly.



3. Bolt Anchor Mount In

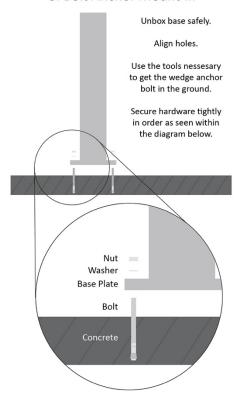

4. Ready Base for Umbrella

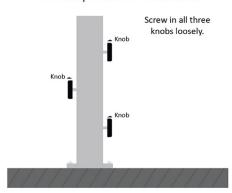



CAUTION: We are not liable for improper installation nor any injuries during installation.

greencorner.com 407-851-7018 info@greencorner.com