

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.**

ASSEMBLING THE FIXTURE (Fig.2).

1. Attach the loop (A) to center of the part (B) by turning it clockwise until tight.
2. Feed fixture wires through center tube (B). Connecting center part (B) to top of the frame (H) and turn clockwise until firmly tightened.
3. Hook the end of arms (E) to the hook on the part (B) and the frame (H).
4. Hook the end of arms (N) to the hook on the part (B) and the frame (H).
5. Thread the nipple (J) into coupling located on bottom of the frame (H) and secure it with the hex nut (I). Raise the finial base (K) and the decorative arm (L) over the nipple (J) and thread the finial (M) onto the nipple (J).
6. Place the socket sleeve (F) over the socket (G) of the fixture body (H). Install the light bulbs and clip the cloth shades (D) on to the bulbs, then screw the finial (C) onto shades (D).
7. Install the light bulbs in accordance with the fixture specifications. **NOTE: DO NOT EXCEED THE SPECIFIED WATTAGE!**

HANGING THE FIXTURE (Fig.1 Please see the Page.2)

IMPORTANT: For a safe and secure installation, this fixture must be installed by means of support that is independent of the junction box.

1. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old crossbar.
2. Provide a 1/4" IPS pipe screw with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the junction box as shown. **The junction box is not included.**
3. Assemble the hex nuts, lock washer, hex coupling, pipe screw and ceiling loop (product shall prevail) to center 1/4" IPS support pipe and adjust overall length to allow the lock ring to hold the canopy flush to the ceiling. When the adjustments have been completed, secure the three (3) hex nuts, as shown.
4. Attach the chain to the fixture loop. Slip the lock ring and canopy over the upper end of the chain. Open the open link of the chain and lift the fixture to attach to the ceiling loop and close the open link.
5. Lace the fixture wires, ground wire and safety cable through the chain and loop, exiting through the side of the hex coupling.
6. **IMPORTANT: you must, run the safety cable through the two clamp bolts, then through the top of the junction box and secure to structural member. NOW, fasten the end of safety cable through the two clamp bolts (see fig.1), lock them securely with the four small hex nuts until tight.**

CONNECTING THE WIRES (Fig.3)

1. Take the black wire from the ceiling junction box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug.
2. Repeat same process with white junction box wire and ribbed wire leg of fixture wire. **NOTE:** Twist wires together in the same direction you twist the wire connector onto wires.
3. If your junction box has a grounding wire (green or bare copper), attach this wire and the bare copper wire from the fixture together as **step 1.**
4. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the lock ring to the bottom of canopy, screw it with until tight.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.2



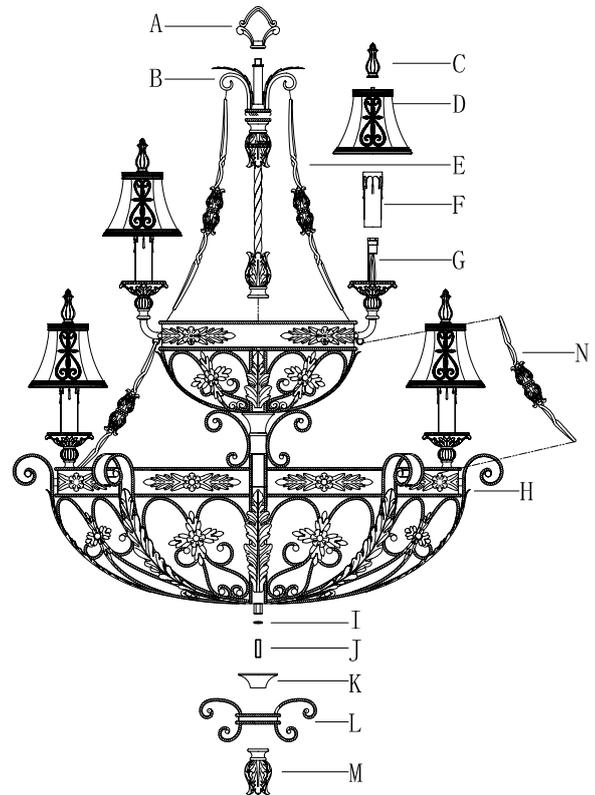


Fig.3



Canopy

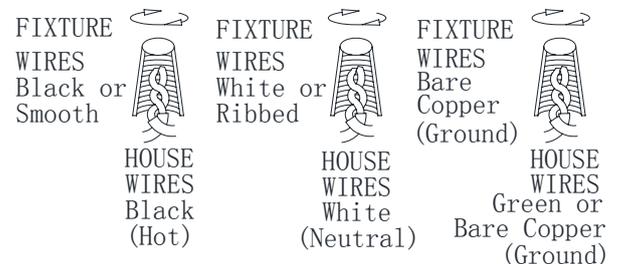

Clamp
Bolt



Hex
Coupling

ASSEMBLING & INSTALLATION INSTRUCTIONS FOR HEAVY MOUNTING FIXTURE

Fig.1

