

ASSEMBLING & INSTALLATION INSTRUCTIONS PRODUCT# 8675 8676 8678 86795 86796 86798

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .
ATTENTION! COUPER LE COURANT AU FUSIBLE OU LE DISJONCTEUR.**

ASSEMBLING THE FIXTURE (Fig.2)

1. Carefully unpack new fixture and lay all the parts on a clear surface.
2. Attach the center tube(H) to the coupling of lamp holder(F) and by turning it clockwise until tight. Attach the cloth shade(D) onto the tube(H) and lock it securely with the knurl nut(I).
3. Attach the center tube (B) and column (A) to the protruding pipe nipple of the shade , by turning it clockwise until tight.
4. Hook in end of arm(C) to the column's loop and steel shade's loop(G).
5. Place the candle sleeve (E) over the lamp holder.

HANGSSING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old crossbar.
2. Thread nipple (C) into loop (F) until snug.
3. Thread other end of nipple (C) with loop attached into crossbar (D) until snug.
4. Place lock washer (B) over end of nipple protruding through crossbar and thread hex nut (A) onto nipple until tight.
5. Take this crossbar assembly and mount to ceiling junction box with junction box screws (E). Tighten screws securely with screwdriver.

The junction box is not included.

6. Using proper chain pliers to open one end link of the chain provided and connect to the fixture loop (I). Close the link. Lace the fixture wires through the chain.
7. Lace the fixture wires through the chain.
8. By measuring, determine correct number of links needed for proper hanging height. Using proper chain pliers disconnect and discard remaining chain.
9. Slip loop collar (H) over the chain, then do the same with the canopy (G).
10. Open the other end link of the chain and hang the fixture on the loop at the ceiling. Close the link.
11. Feed the fixture wires through the loop (F) and nipple (C) and pull until taut.
12. **Install the light bulbs in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

CONNECTING THE WIRES (Fig.3)

1. Take the black wire from the ceiling junction box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug.
2. Repeat same process with white junction box wire and ribbed wire leg of fixture wire. NOTE: Twist wires together in the same direction you twist the wire connector onto wires.
3. If your junction box has a grounding wire (green or bare copper), attach this wire and the bare copper wire from the fixture together as step 1.If junction box has no ground wire, attach the bare copper fixture wire to the green ground screw on the crossbar.
4. Tuck these wire connections neatly into the ceiling outlet box and then raise the canopy (G) all the way to the ceiling. Raise the loop (H) and thread onto ceiling loop protruding through canopy

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1

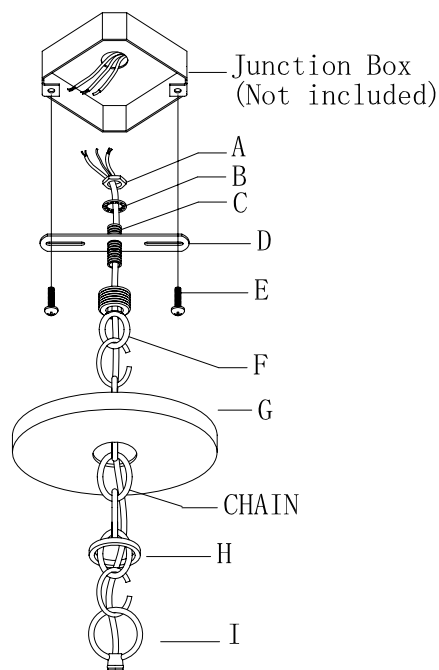


Fig.2

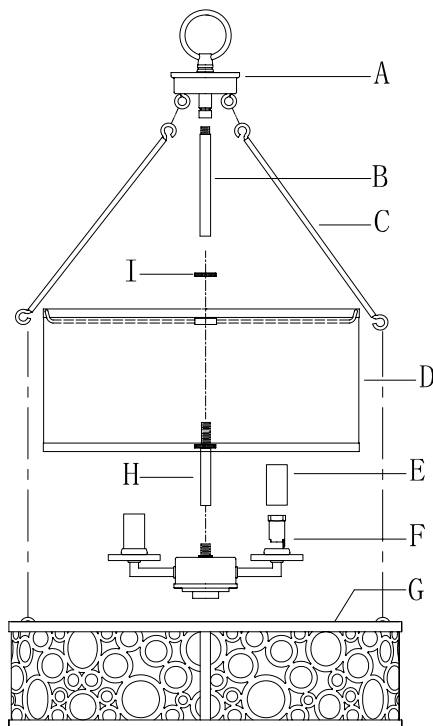


Fig.3

FIXTURE WIRES Black or Smooth	 HOUSE WIRES Black (Hot)	FIXTURE WIRES White or Ribbed	 HOUSE WIRES White (Neutral)	FIXTURE WIRES Bare Copper (Ground)	 HOUSE WIRES Green or Bare Copper (Ground)
---	---	---	---	--	---