



MAINTENANCE AND CARE INSTRUCTIONS

Olympia products are designed and engineered under strict quality standards. Regular and proper care of our products will ensure years of trouble free service. To clean, simply wipe with a damp, soft cloth. Do not use abrasive or harsh cleaners as they may result in finish damage. Regularly remove the aerator and clean any debris inside it.

TROUBLE SHOOTING

A. If water leaks from the spout outlet:	1. Shut off both hot and cold water supplies.
	2. Remove handles (A1-A5), bonnet nuts (B), and cartridges (C).
	3. Check and replace springs and seats (D). If there are damaged.
	4. Reassemble handles (A1-A4), bonnet nuts (B), and cartridges (C). Note: Make sure cartridge stops face toward spout (J).
	5. If seepage still occurs, replace cartridges (C).
B. If faucet has low flow:	1. Remove aerator (7), clean all internal debris and tighten aerator (7) back.
	2. Repeat Trouble Shooting "A" and clean any debris trapped in the seats and springs.
C. If handles do not stop turning:	1. Shut off both hot and cold water supplies.
	2. Remove handles (A1-A5) and bonnet nuts (B).
	3. Check stops on cartridges (C) or inside handles (A1-A5) for damages.
	4. Replace necessary parts.
D. If spray does not function properly:	1. Shut off both hot and cold water supplies.
	2. Remove spray head (N), clean debris, and reassemble.
	3. Remove cap (I) and spout (J) and clean or replace diverter piston (M).
	4. Reassemble cap (I) and spout (J).

OLYMPIA FAUCETS, INC. LIMITED LIFETIME WARRANTY *

Olympia Faucets, Inc. warrants its products to the original consumer purchaser to be free from defects in material and workmanship as long as the consumer purchaser owns it. Dated proof of purchase must accompany all warranty claims. PVD finishes carry a lifetime warranty in residential service.

Olympia Faucets, Inc. will replace, free of charge, to the original consumer purchaser, any and all parts that prove defective under normal installation, use, and service. Damage as a result of misuse, abuse, accident, or improper installation, will consequentially void this warranty. Replacement parts can be obtained from your local dealer or directly from Olympia Faucets. Olympia Faucets, Inc. recommends using a certified plumber for all faucet installation and repair.

This warranty is limited to replacement of defective parts only. Incidental and consequential damages, labor charges, repair, or replacement costs are expressly excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, as you may have other rights of which vary from state to state.

Installation or maintenance and cleaning must be in compliance with instructions furnished with every Olympia product. If you find a problem with your product, please immediately contact your nearest Olympia Faucets, Inc. dealer or sales representative.

* 2 year limited warranty on commercial and multi-family projects.



INSTALLATION AND MAINTENANCE INSTRUCTIONS FOR TWO HANDLE KITCHEN FAUCETS

THIS PRODUCT MEETS THE FOLLOWING STANDARDS: ASME A112.18.1 ~ ANSI A117.1 ~ ANSI / NSF 61, SECTION 9 ~ UPC / IAPMO LISTED / ADA COMPLIANT ~ COMPLIES WITH CALIFORNIA LEAD PLUMBING LAW


PRODUCT NUMBERS

- #K-5120 Acrylic Handles ~ Less Spray**
- #K-5130* Mini Blade Handles ~ Less Spray**
- #K-5121 Acrylic Handles ~ With Spray**
- #K-5150* ADA Wrist Blade Handles**
- #K-5160* Lever Handles ~ Less Spray**
- #K-5161* Lever Handles ~ With Spray**
- #K-5170* Lever Handles ~ Less Spray**
- #K-5171* Lever Handles ~ With Spray**





Thank you for purchasing this quality product. Olympia products are rigorously tested to provide long service under normal conditions. Prior to installation, familiarize yourself with this parts diagram. Make sure that you have all of the illustrated parts for your Olympia product before installation.

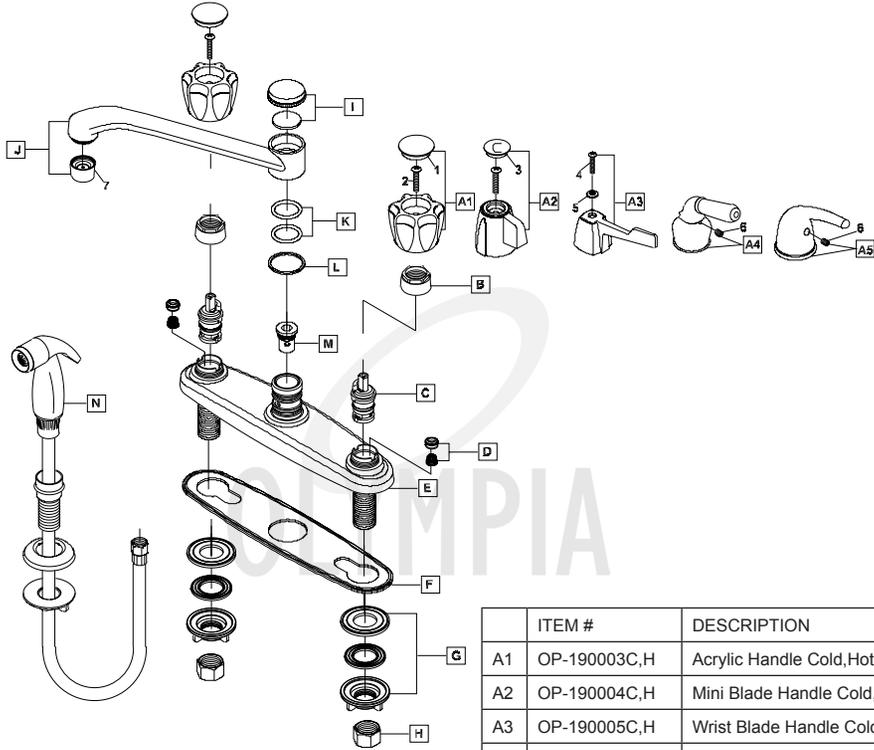

ITEM #	DESCRIPTION
1	OP-490012C,H Acrylic Handle Button Cold, Hot
2	OP-490014 Screw
3	OP-490013C,H Mini Blade Button Cold, Hot
4	OP-490015 Handle Screw
5	OP-490016C,H Wrist Blade Button Cold, Hot
6	OP-490029 Allen Screw
7	OP-490035 1.5 GPM Aerator

ITEM #	DESCRIPTION
A1	OP-190003C,H Acrylic Handle Cold,Hot
A2	OP-190004C,H Mini Blade Handle Cold, Hot
A3	OP-190005C,H Wrist Blade Handle Cold, Hot
A4	OP-190010C,H Lever Handle Cold, Hot
A5	OP-190015C,H Lever Handle Cold, Hot
B	OP-490040 Bonnet Nut
C	OP-390004 Cartridges-Brass Post OP-390005 Cartridges-Plastic Post
D	OP-490041 Spring and seats
E	OP-420025 Deck Plate
F	OP-420026 Base Gasket
G	OP-520009 Mounting Locknut & Washers
H	OP-590001 Supply Nut
I	OP-420018 Spout Cap & Washer
J	OP-220002 Spout
K	OP-420019 O-rings
L	OP-420020 Gasket
M	OP-420024 Diverter Piston
N	OP-420051 Side Spray Assembly



For more care information or trouble shooting inquiries about your Olympia product, please call:
OLYMPIA FAUCETS, INC. (888) 772-7701
 Central Standard Time: 8:00am ~ 7:00pm
www.olympiafaucets.com

INSTALLATION INSTRUCTIONS

Tools you will need:

- Plumbers Putty
- Screwdriver
- Pipe Wrench
- Basin Wrench
- Teflon Tape
- Flexible Supply Lines
- Adjustable Wrench
- Soft Cloth

FAUCET INSTALLATION:

1. Carefully shut off both hot and cold water supplies from under the sink. Plug the sink drain with a soft cloth to prevent intrusion of debris or the loss of any faucet parts. If this installation is for a replacement, carefully remove the existing faucet and clean the entire surface of the sink mounting holes.
2. Apply adequate Plumbers putty along the boundary of the bottom of the base gasket (F).
3. Gently align the faucet with the sink mounting holes and place the faucet on the sink. Use caution to lead brass waterways through the sink mounting holes.
4. Thread friction washers (G) and mounting locknuts (G) along the brass waterways. Carefully hand tighten the mounting locknuts. **CAUTION:** Do not overtighten.
5. Connect both hot (LEFT INLET) and cold (RIGHT INLET) waterways to water supply lines. **NOTE:** If additional adapters or supply lines are required, they may be purchased from the same location where this faucet was purchased. Use with teflon tape when attaching supply lines to waterways.

SPRAY ASSEMBLY INSTALLATION:

1. Place spray hose guide in far right hole of sink and then attach both the washer and locknut from underneath the sink.
2. Insert the compression nut end of spray hose down through the hose guide. Pass hose through the center hole in base gasket and attach to the center faucet outlet, hand tightening securely. Note: Use teflon tape on this connection.

FINAL PRODUCT INSTALLATION:

1. Turn on the hot and cold water supplies. Check all around for any minor joint leaks. **NOTE:** Inspect for any leaks around the connections to both the supply lines and the spray hose assembly.
2. Remove aerator from end of spout. Turn on both side of handles to flush water lines by allowing water to run through for one minute. Replace aerator.
3. For faucets with side spray check if water diverters fully from spout to side spray and from side spray to spout.

CAUTION: MAKE SURE TO TIGHTEN THE AERATOR SECURELY AFTER FLUSHING THE WATER LINES.