


Single Hole Pull-Out Kitchen Faucet Installation

INSTALLATION MANUAL Tools You Will Need:

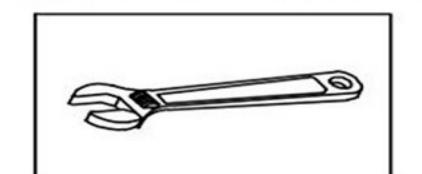

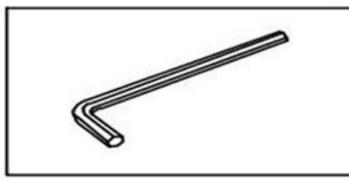

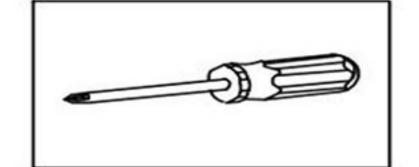

Adjustable Wrench

Hexagon wrench

Philips Screwdriver


Before the Installation

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance


- 1. Rinse with clean water and dry with a soft cloth.
- 2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.

Parts List

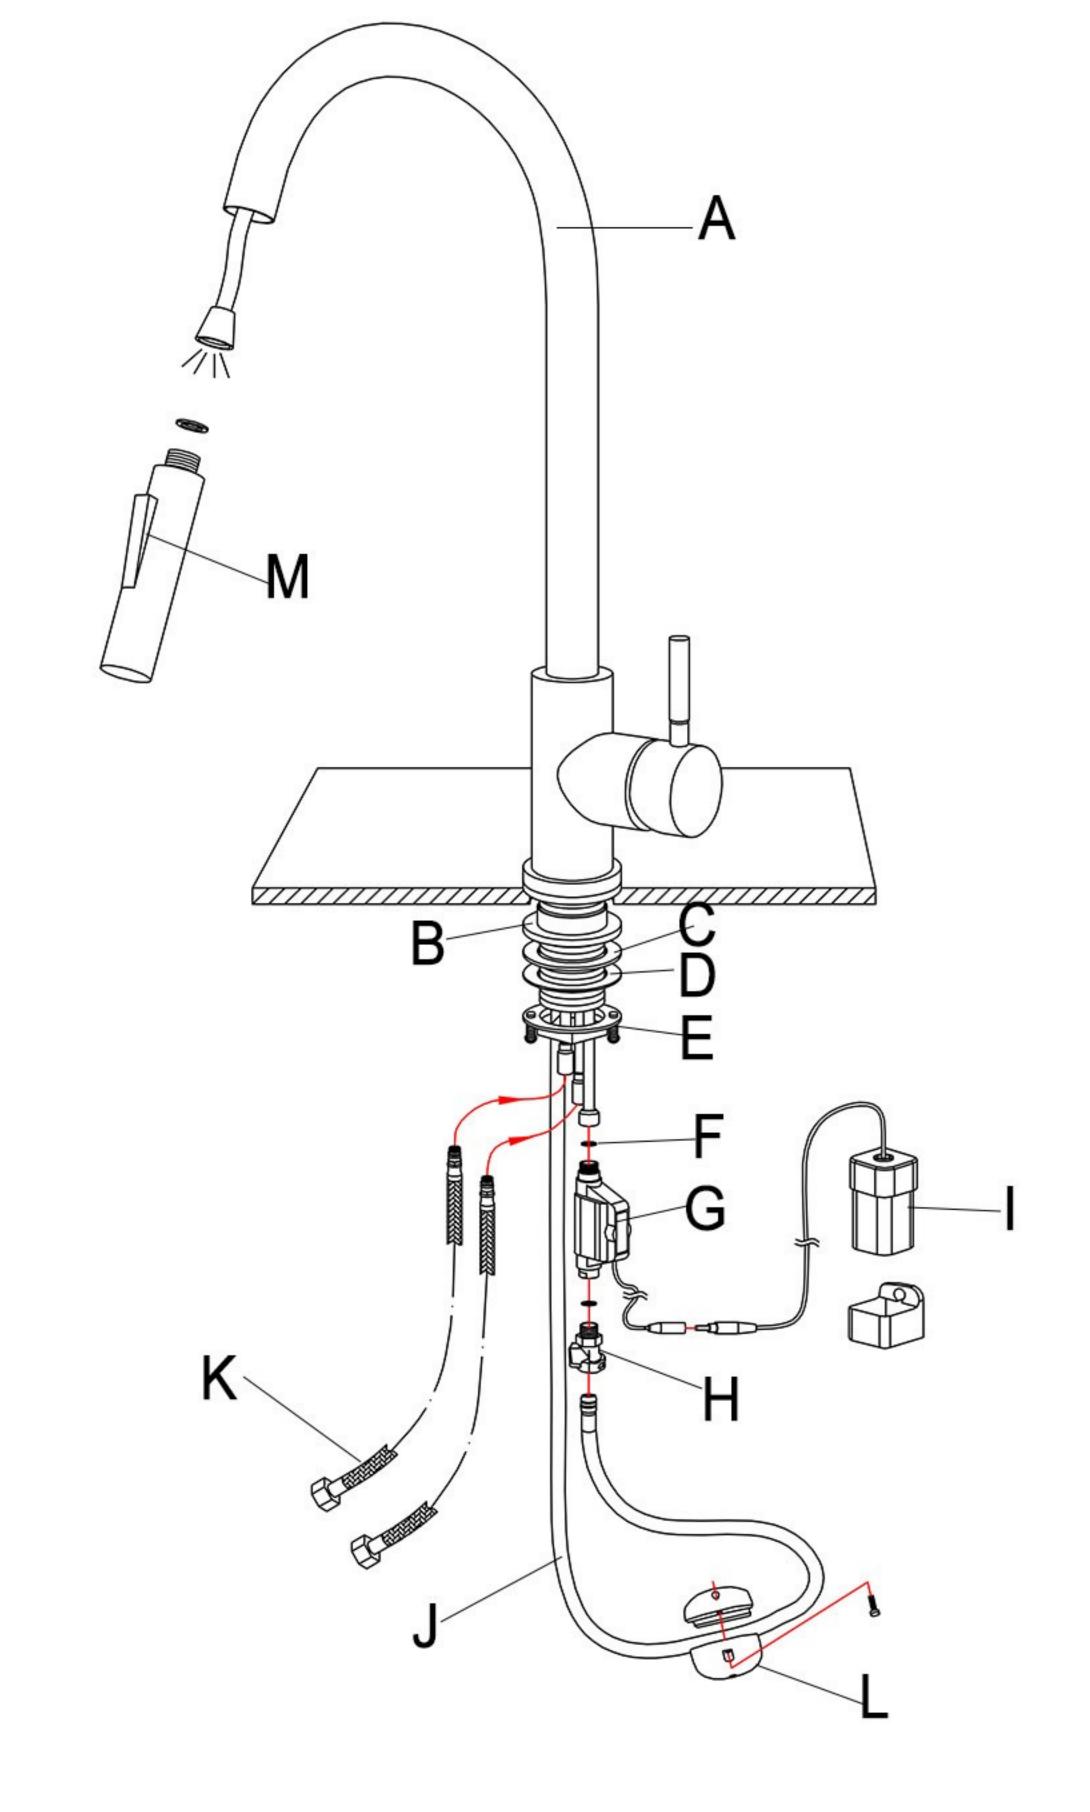


Part	Name	Quantity
Α	faucet body	1
В	plastic ring	1
С	rubber washer	1
D	metal washer	1
E	mounting nut	1
F	washer	3
G	induction-box	1
Н	pull-out pipe joint	1
	battery holder	1
J	pull-out pipe	1
K	water inlet	2
L	weight ball	1
М	spout	1


Installation Guide

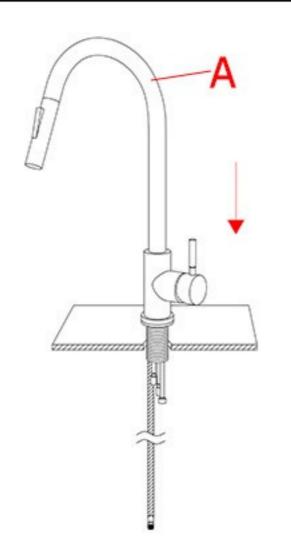


 Remove the plastic ring, rubber washer, metal washer and mounting nut from the threaded part of the faucet body (A) and insert the threaded part of faucet body (A) into the hole on the deck.

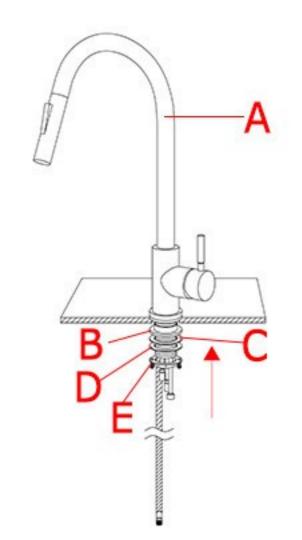


 Fix the faucet body (A) by screwing back the plastic ring (B), rubber washer (C), metal washer (D) and mounting nut (E) onto the threaded part.

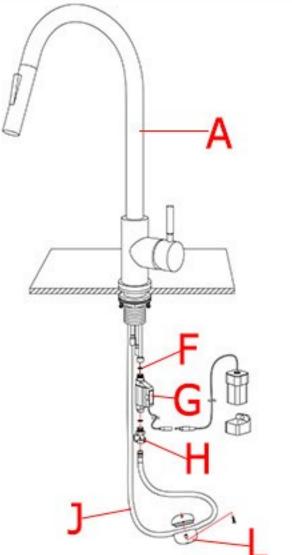


3. Connect the other end of the pull-out pipe (J) to the pull-out pipe joint (H). Fit the washer (F) to the pull-out pipe joint (H) and screw them with the induction-box (G). Fit the washer (F) to the induction-box (G) and screw them into the corresponding pipe on the bottom of the faucet body (A). Screw the weight ball (L) on the pull-out pipe (J).

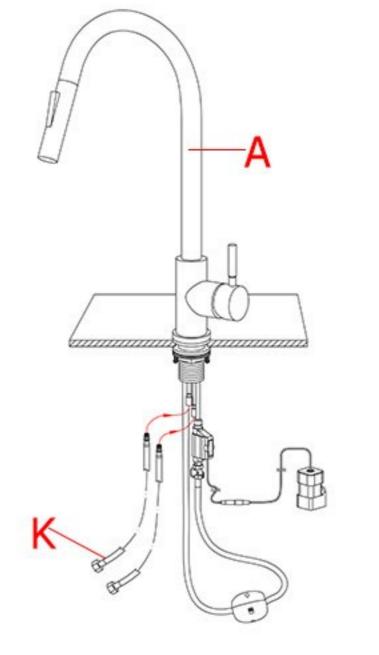

 Screw on the water inlets (K) into the corresponding pipes on the bottom of the faucet body (A).

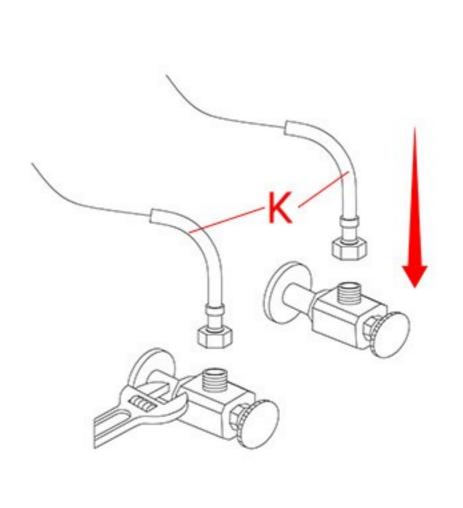

Connect the other ends of the water inlets (K) to the water inlet joints (not included).

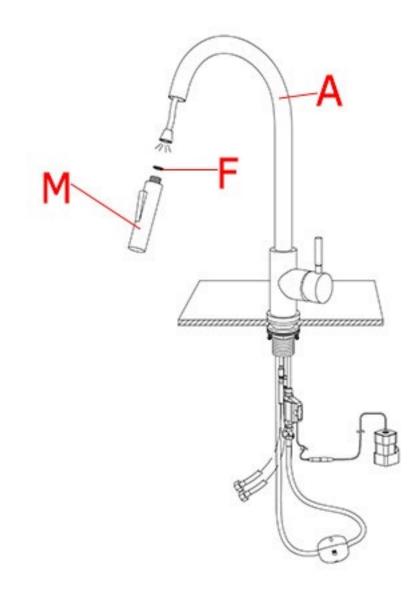

 Fit the washer (F) to the spout (M) and screw the spout (M) up to the faucet body (A).

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off	O-ring is not seated correctly or worn.	Reseat or replace O-ring.
completely.	2. Cartridge may be defective.	2. Replace cartridge.
Leaks at waterline connection.	Worn or broken washer.	1. Replace washer.
	2. Faucet body may be defective.	Replace faucet (contact us for the replacement).
Leaks from handle.	Cartridge may come loose.	Reseat cartridge tight.
	2. Cartridge may be defective.	2. Replace cartridge.
Leaks at hose connection.	Hose connection is loose.	1. Tighten hose.
		2. Replace hose.
Leaks at shower valve	Connection may come loose or not sealed completely.	1. Check connections.
connection.	Defective shower valve inlet or outlet connector.	2. Replace valve body.
Diverter knob does not work.	Diverter cartridge may be defective.	Replace cartridge.
LED light does not Light or noisy LED showerhead.	Defective LED generator.	 Replace LED spray head (for kitchen faucet).
		Replace LED threaded pipe (for seperate faucet spout).
		3. Replace LED generator (for others).
Low flow.	Check for water pressure problems. Aerator may be dirty or clogged.	Clean or replace the aerator.
		2. Remove waterflow restrictor if available.
		3. Install booster or pump (if applicable).