
BEFORE INSTALLATION

Unpack your fan and check the contents. You should have followings:

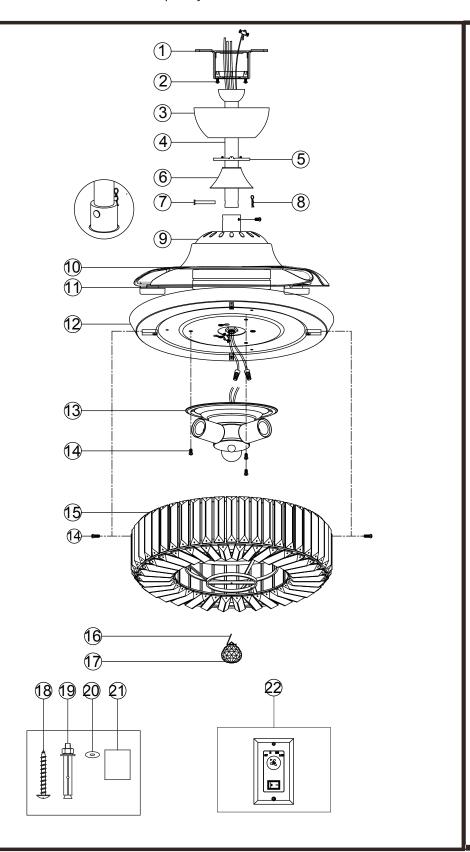

- 1. Mounting Bracket
- 2. Canopy screws
- 3. Canopy
- 4. Downrod&hanger ball
- 5. Canopy cover
- 6. Coupling cover
- 7. Bolt
- 8. Lock pin
- 9. Top housing
- 10. Blades
- 11. Fan motor assembly
- 12. Base plate
- 13. Light kit
- 14. Light and Lampshade screws
- 15. Lampshade
- 16. Crystal hook
- 17. Crystal bead
- 18. Wood screws
- 19. Expansion screws
- 20. Screw washesr
- 21. Balance tapes
- 22. Wall control

F3507A

Installation & Operating Instructions for the Owner's Installation, Manual

WARNING:SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

CAUTION

READ INSTRUCTIONS CAREFULLY FOR SAFE INSTALLATION AND FAN OPERATION. IF UNSURE CONSULT A QUALIFIED ELECTRICIAN

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing this quality product. To ensure correct function and safety, please read and save all instructions before using the product



SAFETY RULES

- 1. To reduce the risk of electric shock, insure electricity has been turned off at the circuit breaker or fuse box
- 2. All wiring must be in accordance with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- 3. WARNING: To reduce the risk of electrical shock and fire, do not use this fan with any solid-state fan speed
- WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked "Acceptable for Fan Support of 45kg (99.12 lbs.) Or Less" and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of light fixtures are not acceptable for fan support and may need to be replaced. Due to the complexity of the installation of this fan, a qualified licensed electrician is strongly recommended
- 5. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 45KGS. Use only UL Listed outlet boxes marked FOR FAN SUPPORT.
- 6. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor 7. Avoid placing objects in the path of the blades.
- 8. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning
- 9. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
- 10. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipmentgrounding conductor on one side of the outlet box.
- 11. Electrical diagrams are for reference only.
- 12. The fan is suitable for indoor use only.
- 13. Please do not use the tan in a specific environment like high temperature environment, high radiation environment.lampblack or other abnormal use environments.

TECHNICAL INFORMATION

SKU	Rated Voltage	Rated power(motor)	Light CCT.	
F3507A	110-120V AC	34W	E26 3*25W(MAX.) EXCLUDE	

BEFORE INSTALLATION Unpack your fan and check the contents. You should have followings (3) E 18 19 20 21 Mounting Bracket 9. Top housing Canopy screws 10. Blades 17. Crystal bead 18. Wood screws 11. Fan motor assembly L Downrod&hanger ball 12. Base plate 13. Light kit 19. Expansion screws . Canopy cover 20. Screw washers 3. Coupling cove 7. Bolt 14. Light and 21. Balance tapes Lampshade screws

INSTALLING THE FAN


Tools Required: Phillips screwdriver, Pair of pliers, straight slot screwdriver, adjustable wrench, step ladder, and wire cutters.

INSTALLING THE MOUNTING BRACKET

The ceiling fan must be installed in a location so that the blades are 300mm spacing from the tip of the blade to the nearest objects or walls. When hanging the Fan REMEMBER to turn off the power. Follow the instruction below to hang your fan properly:

8. Lock pin

1. For the concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two Φ8(distance between the two holes should be appropriate) expansion screws, flat washers, nuts provided and tighten with a spanner.



- 2. For the wood ceiling, Secure the mounting bracket to the ceiling is capable of carrying a load of at least 45KGS with two long mounting screws and washers provided. Be sure at least 30mm of the screw is threaded into the support.
- 3. Refer to the Fig. in right for mounting when the ceiling is angled max, 15 degree angle

22. Wall control



NOTE: Hanger after the installation must be able to withstand the weight of 45kg or more.

All rights reserved. Made in China All rights reserved. Made in China Installation & Operating Instructions for the Owner's Installation, Manual WARNING:SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

INSTALLING THE DOWNROD


When hanging the Fan REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

- 1)Remove the bolt, lock pin and set screws from the top of the housing
- 2) Route wires exiting from the top of the fan motor through the bolt&pin, canopy and then through the ball / downrod.
- 3)Align the holes at the bottom of the downrod with the holes in the coupling on top of the top housing a
- 4)Carefully insert the Bolt through the holes in the Coupling and downrod Be careful not to jam the Bolt against the wiring inside the downrod. Insert the locking pin through the hole near the end of the Bolt until it snaps into its locked position.
- 5) Tighten two set screws on top of the fan housing firmly

CHANGING THE DOWNROD (OPTIONAL)


NOTE: Your fan comes with a 25cm downrod attached to the hanger ball. In addition, a 10cm downrod has been provided to be used in case the ceiling is lower.In this case, perform the following steps for correct installation:


- 1. Remove the hanger ball from downrod by loosening the setscrew at the top of the downrod which holds the hanger ball to the downrod.
- 2. Slide the hanger ball down the downrod and remove the support pin.
- 3. Insert the support pin in the holes at the top of the 10cm downrod and slide the hanger ball up the 10cm downrod. Make sure the support pin is properly seated in the grooves in the top of the hanger ball.
- 4. Tighten the set crews firmly.

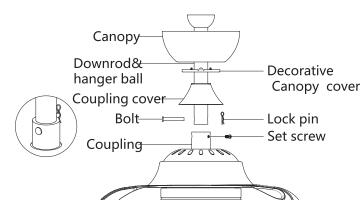

SAFETY CABLE INSTALLATION

For Canadian installation and for USA fan and light kit combinations over 35 lbs, the safety cable must be installed into the house structure beams. Make sure that when the safety cable is fully extended the lead wires are longer than the cable and no stress is placed on the lead wires. Note: If Installing The Secondary Support Safety Cable in the U.S., Do Not Remove Knockouts In The Outlet Box






INSTALLING THE FAN TO MOUNTING BRACKET ON CEILING

WARNING:To avoid possible electrical dhock be sure electricity is turned off at the main fuse box before wiring.

- 1.Install ball end of downrod into mounting bracket opening. Align (engage) slot on ball with tab on mounting bracket. Warning: Failure to align slot on ball with tab may result in serious injury.
- 2.Slide the canopy up to ceiling and align the keyhole slots on the canopy with the preassembled screws on the hanger bracket. Twist clockwise untill locks. Tighten two screws securely.
- 3. Attach the decorative canopy cover to the bottom of the canopy by pressing it until it locks.

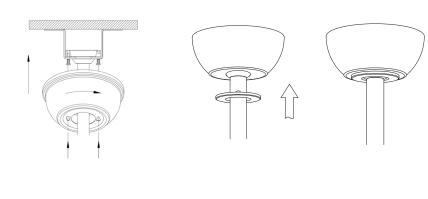


USING YOUR CEILING FAN

WALL CONTROL

Turn on the power and check the operation of the fan

- 1- Fan Shutdown
- 2- Speed Controlle
- 3 Lamp Switch

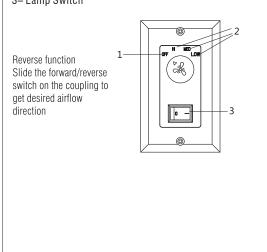

All rights reserved. Made in China


F3507A

Installation & Operating Instructions for the Owner's Installation ,Manual WARNING:SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

MAKE THE ELECTRIC CONNECTIONS

WARNING:To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.

- 1. Light kit to motor wires Electrical Connections:Connect the white wires from light pan to the white N wire from the fan.Connect the blue wires from light pan to the blue LIGHT L wire from the fan.Secure the wire connections with the wire nuts provided.
- 2. Motor to Wall control Connections:Connect the Black wire from the FAN L to FOR FAN L wire from the Wall control.Connect the Blue wire from the LIGHT L to the FOR LIGHT L wire from the Wall control.Secure wire connections with the wire nuts provided.
- 3.Wall control to House supply wires Electrical Connections:Connect the white(Neutral) wire from the ceiling to the white N wire from the fan.Connect the black(Hot) wire from the ceiling to the black wire from the wall control.Secure wire connections with the wire nuts provided.

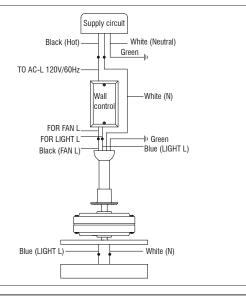


INSTALLING THE LIGHT KIT

- 1.Remove the 7 Light and Lampshade screws preassembled from the screws on the base plate. Connect white and blue wires from light kit and Lampshade to the white and blue wires from fan, using wire nuts provided. Attach the light fixture onto the base plate. Aligning the
- 3 holes on the light fixture with and the 4 holes on the the Lampshade fixture with There are 7 screw holes in the bottom plate. Reinstall the 7 Light and Lampshade screws that were just removed. And tighten all nuts and screws securely.
- 2. Install 3 X Max.25 watt bulbs (bulb not included)
- 3.Attach the crystal bead 19 pcs to the lampshade with a crystal Hook.

WARNING: Over lamping the fan will result in the fan lights shutting down until the proper wattage of bulbs are installed. Replace bulbs with the correct wattage bulbs: turn the power on.

WARNING: Do not replace bulb until it cools down.

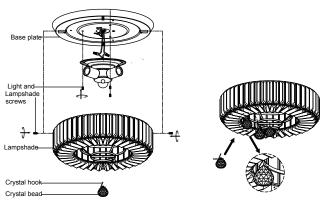

AFTER INSTRUCTION

WOBBLE

The fan blades have been adjusted in the factory to minimize any wobble

NOTE: CEILING FANS TEND TO MOVE DURING OPERATION DUE TO THE FACT THAT THEY ARE MOUNTED ON A RUBBER CROMMET. IF THE FAN WAS MOUNTED RIGIDLY TO THE CEILING, IT WOULD CAUSE EXCESS VIBRATION. MOVEMENT OF A FEW CENTIMENTERS IS QUITE ACCEPTABLE AND DOES NOT SUGGEST ANY PROBLEM

TO REDUCE THE FAN WOBBLE: PLEASE CHECK THAT ALL SCREWS WHICH SECURED THE MOUNTING BRACKET AND DOWNROD ARE SECURE.

BALANCING A WOBBLING CEILING FAN:

For your convenience, a Balancing Kit is included; please follow this procedure when balancing the fan:

- 1) Install fan without light dome before balancing the fan.
- 2) Define the base plate into four areas(point A,B,C&D). Use one weight from the balance kit to lightly stick on the edge of the base plate(Point A), if the wobble worsens, then take off the balance kit to lightly stick on the opposite side(Point B); if the wobble is worse, then go to the adjacent point C or D, if the wobble gets better, then securely stick on the weight at this location on the base plate.
- 3) After balancing the fan, assemble the light dome to the light base.

NOISE

When it is quiet(especially at night) you may hear occasional small noises. Slight power fluctuations and frequency signals superimposed in the electricity for off-peak hot water control, may cause a change in fan motor noise. This is normal. Please allow a 24-hour "breaking-in" period, most noises associated with a new fan disappear during the time. The manufacturer's warranty covers actual faults that may develop and NOT minor complaints such as hearing the motor run – All electric motors are audible to some extent.

CARE AND CLEANING

- 1. Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint ree cloth to avoid scratching the paint finish. Please make sure to turn off electricity power before you clean your fan
- 2. Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock.
- 3. Motor has permanently lubricated ball bearing. No need to oil

NOTE: MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY CLEANING OR REPA

All rights reserved. Made in China