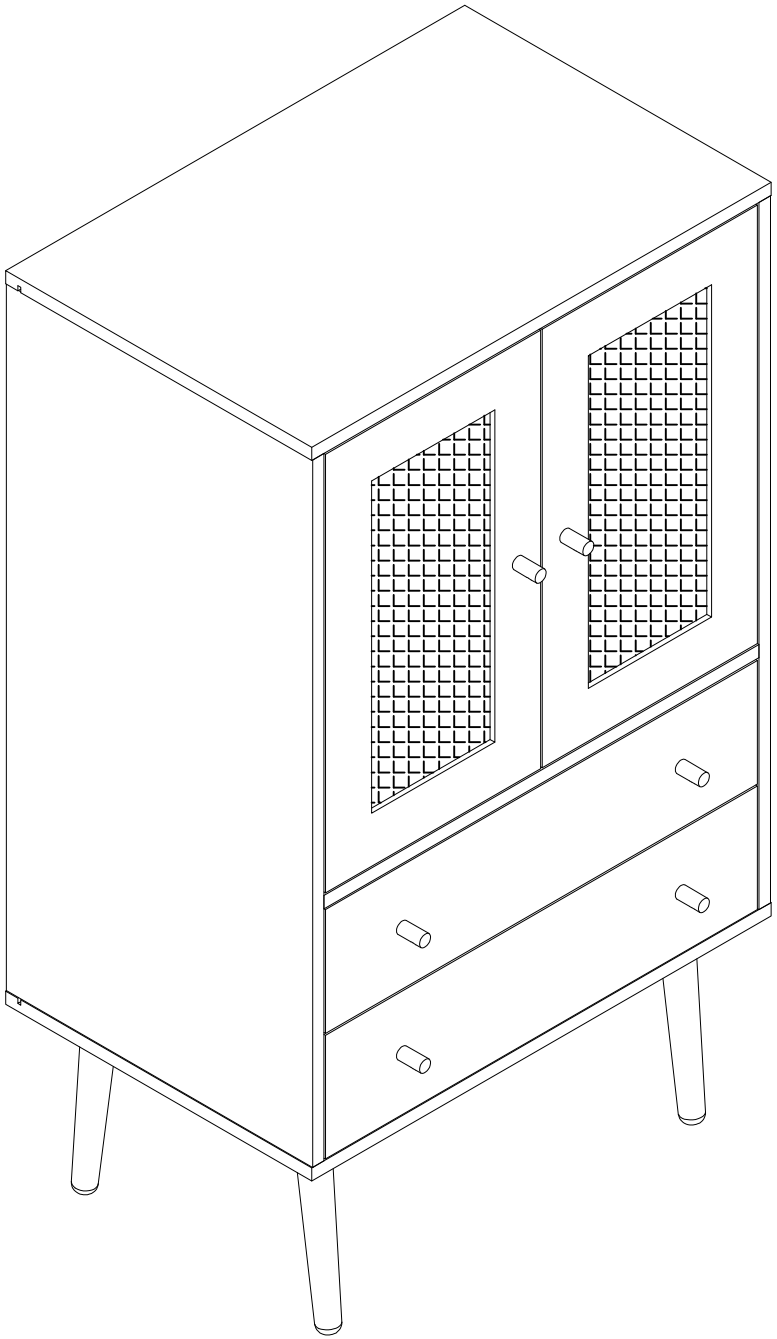

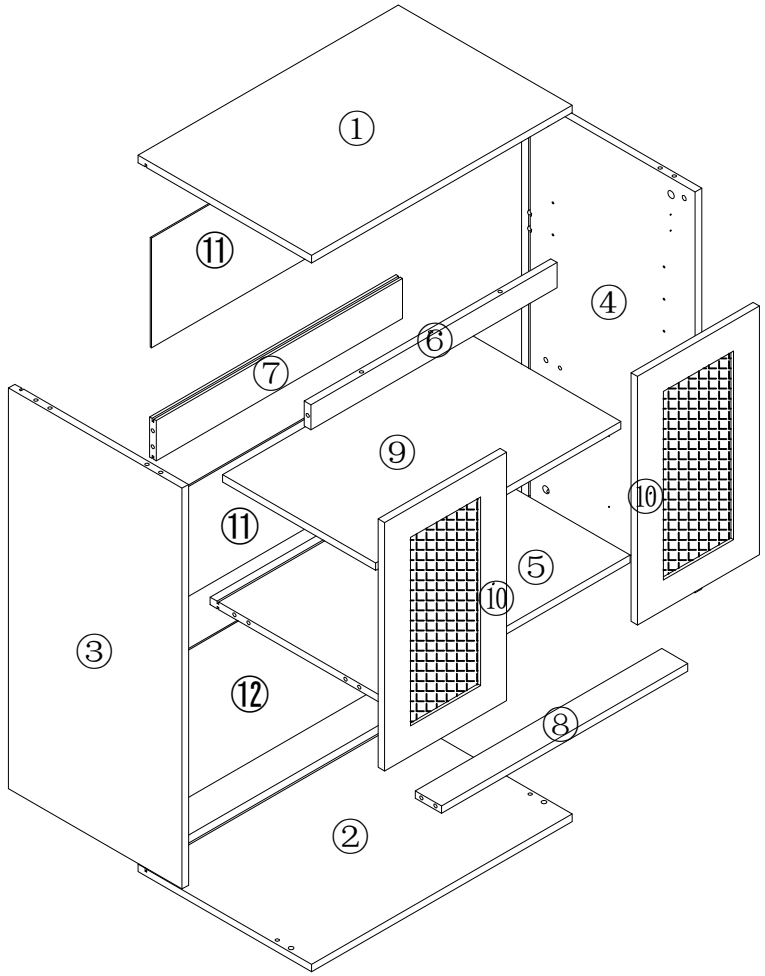

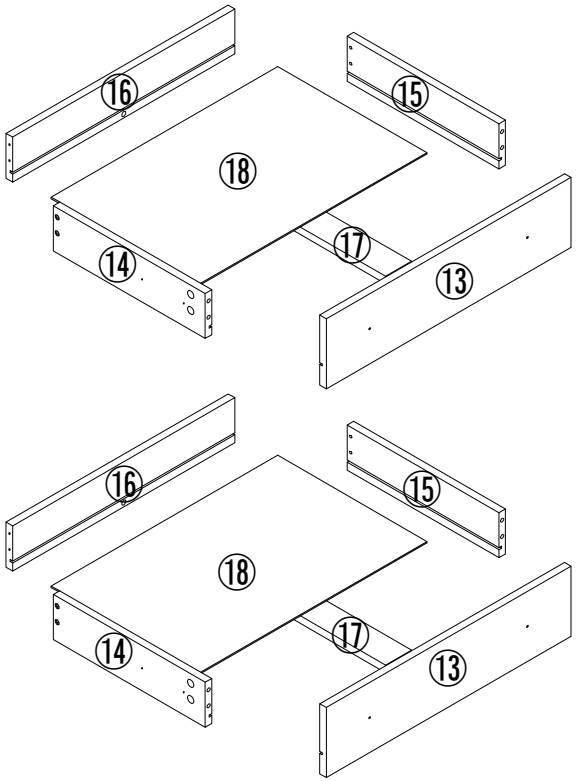

A 36PCS	B 36PCS	C 8*40 13PCS	D 4PCS	E 6PCS	F 4*20 6PCS	G 3*12 18PCS	H 3.5*14 61PCS	I 3.5*35 8PCS	J 4*50 1PCS
K 1PCS	L 4PCS	M 200mm 4PCS	N 4PCS	O 1PCS	P 18PCS	Q 2PCS			

1

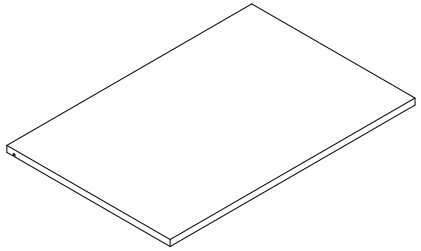

600*400 1PS

2

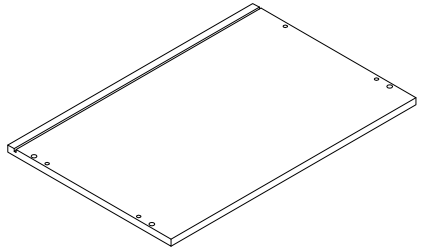

600*400 1PS

3

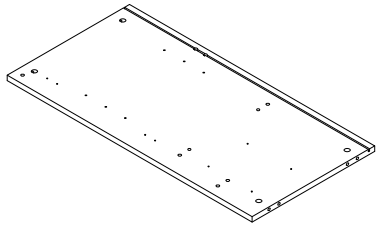

800*400 1PS

4

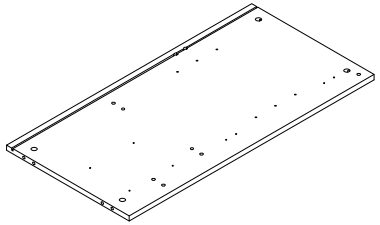

800*400 1PS

5

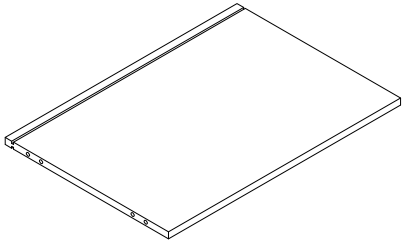

568*400 1PS

6

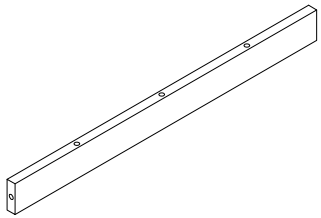

568*50 1PS

7

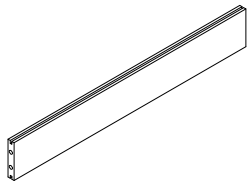

568*80 1PS

8

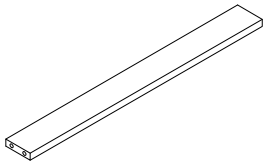

568*60 1PS

9

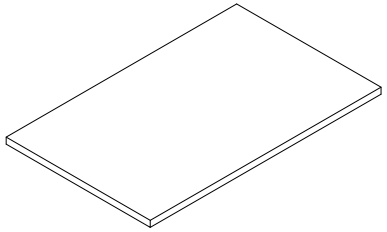

565*353 1PS

10

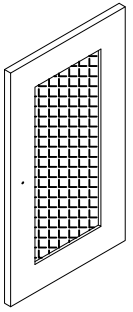

496*281 1PS

11

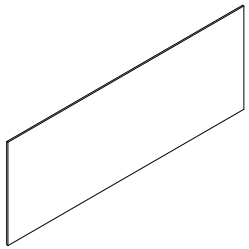

578*219 2PS

12

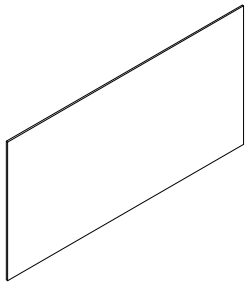

578*294 1PS

13

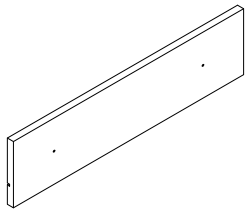

564*140 2PS

14

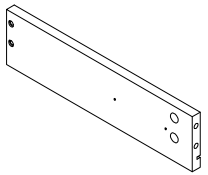

350*90 2PS

15

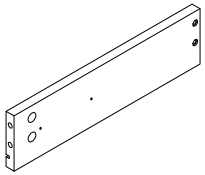

350*90 2PS

16

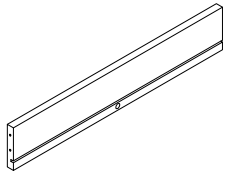

512*90 2PS

17



334*60 2PS

18

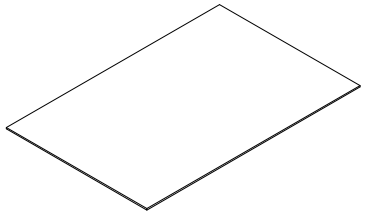

522*344 2PS

Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!

I

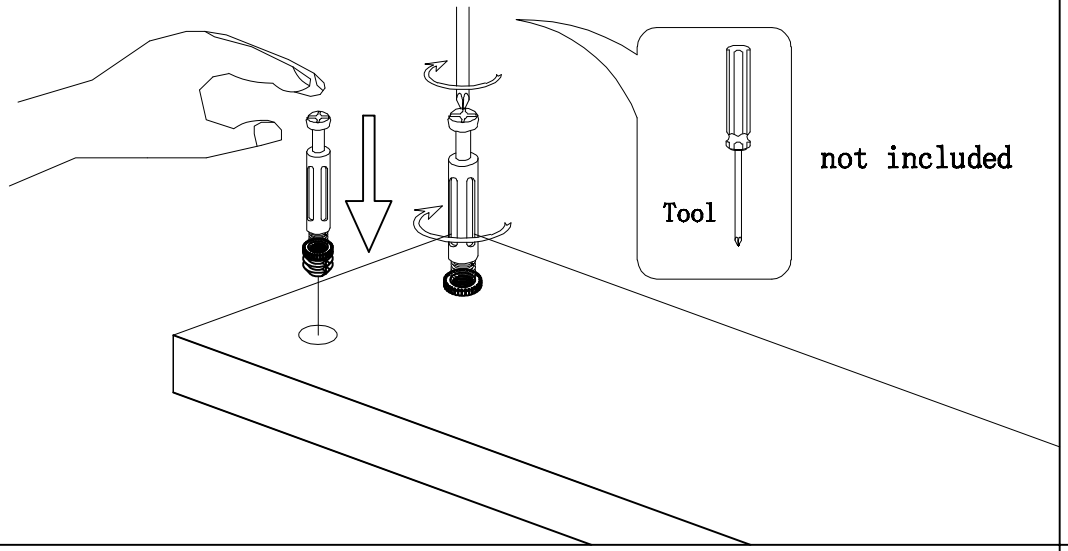

II

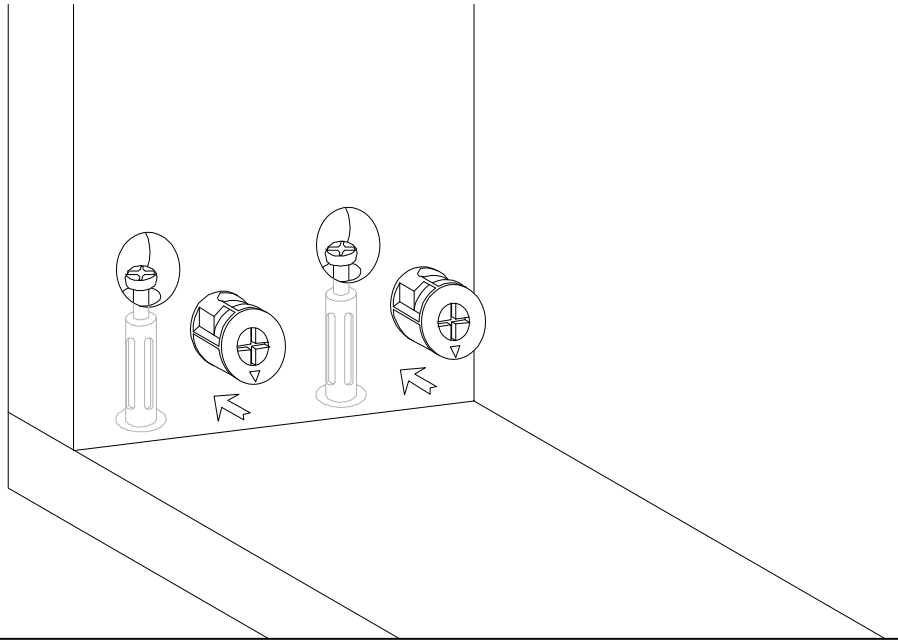

III

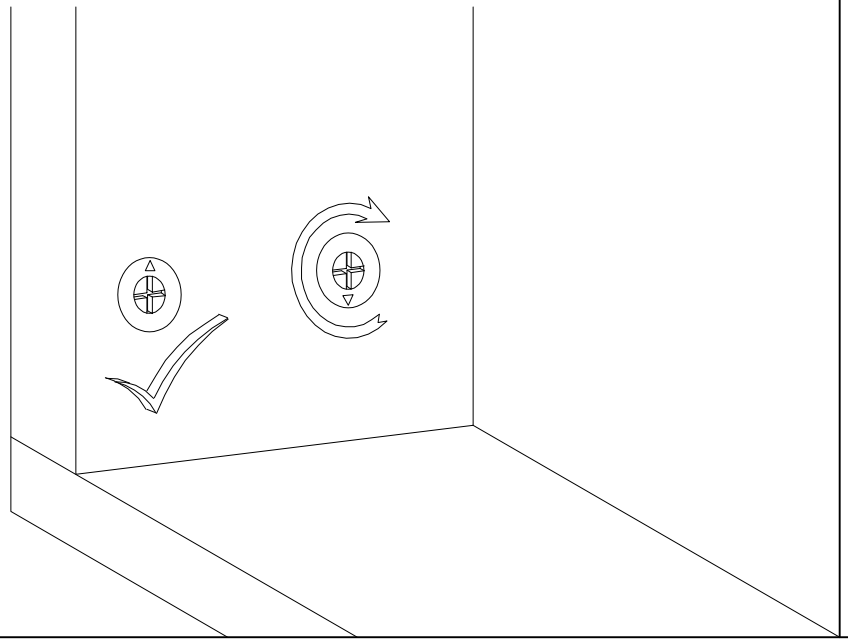

IV

Scan QR code for assembly video

①

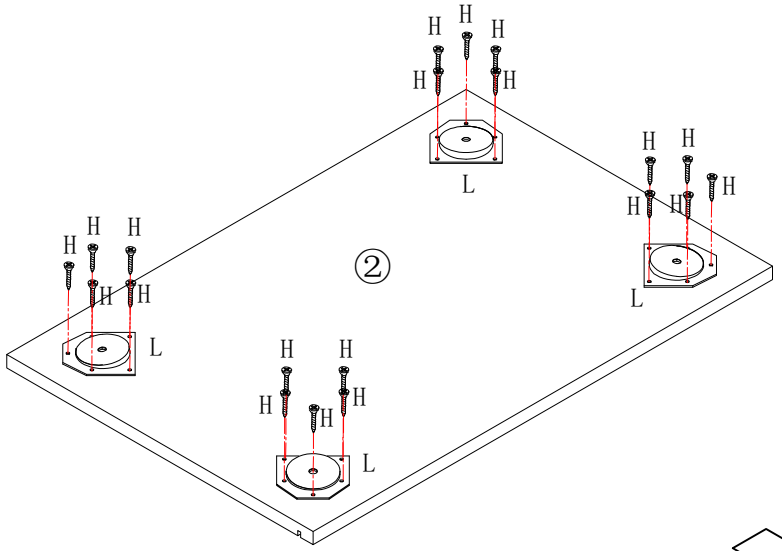

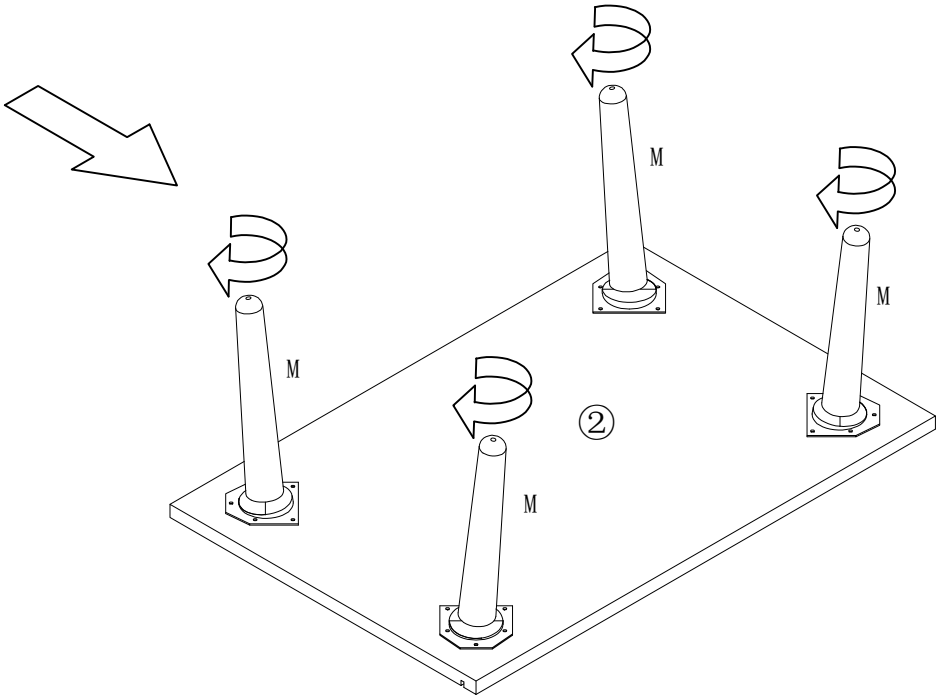

	H*20
	L*4
	M*4

②

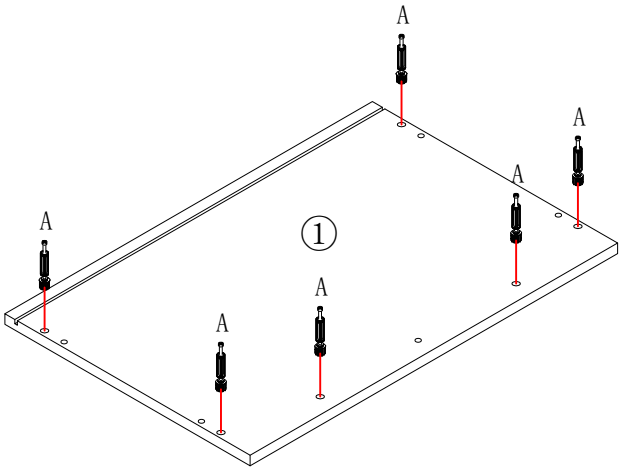

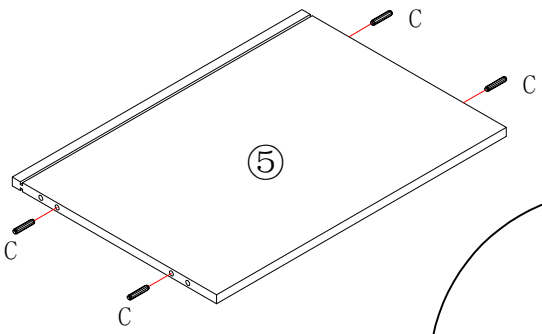

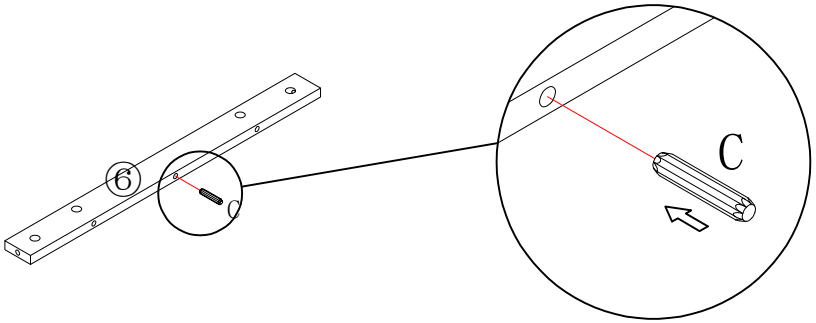

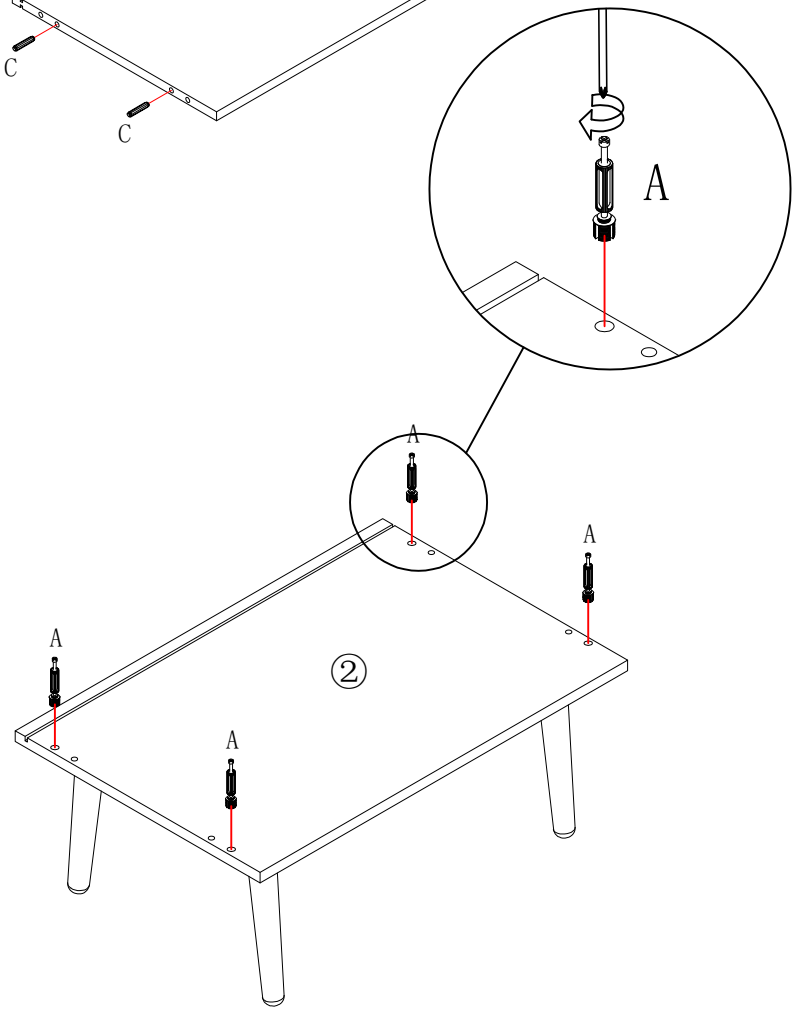

	A*10	put A on board ①②
	C*5	put C on board ⑤⑥

③

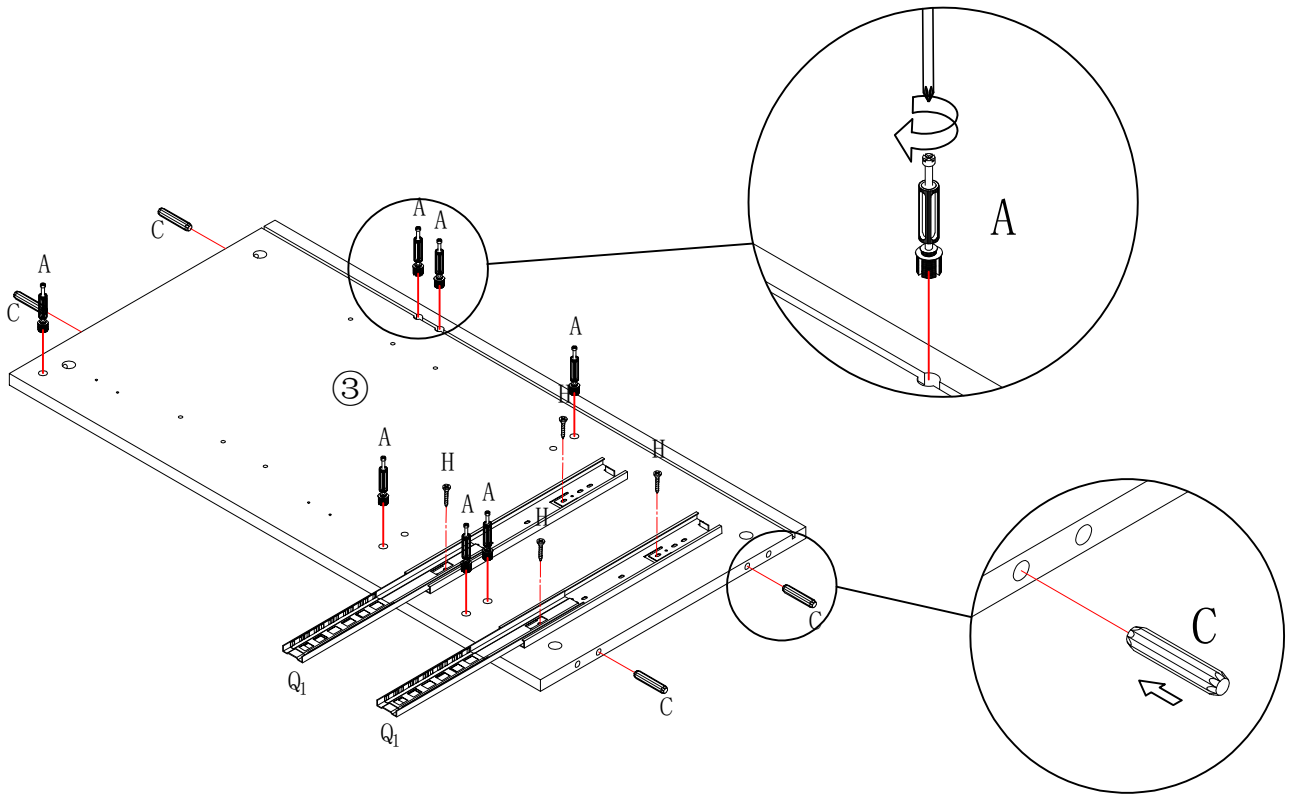

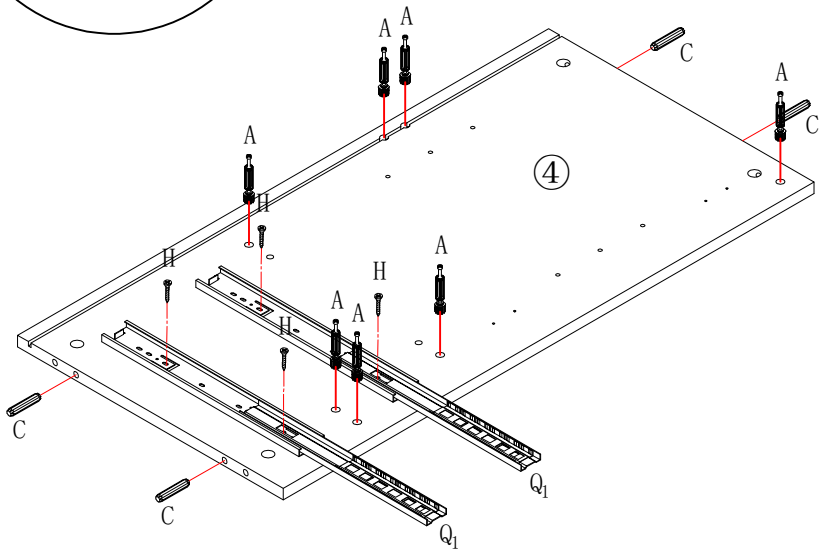

	A*14	put A on board ③④
	C*8	put C on board ③④
	H*8	
	Q_1*4	

④

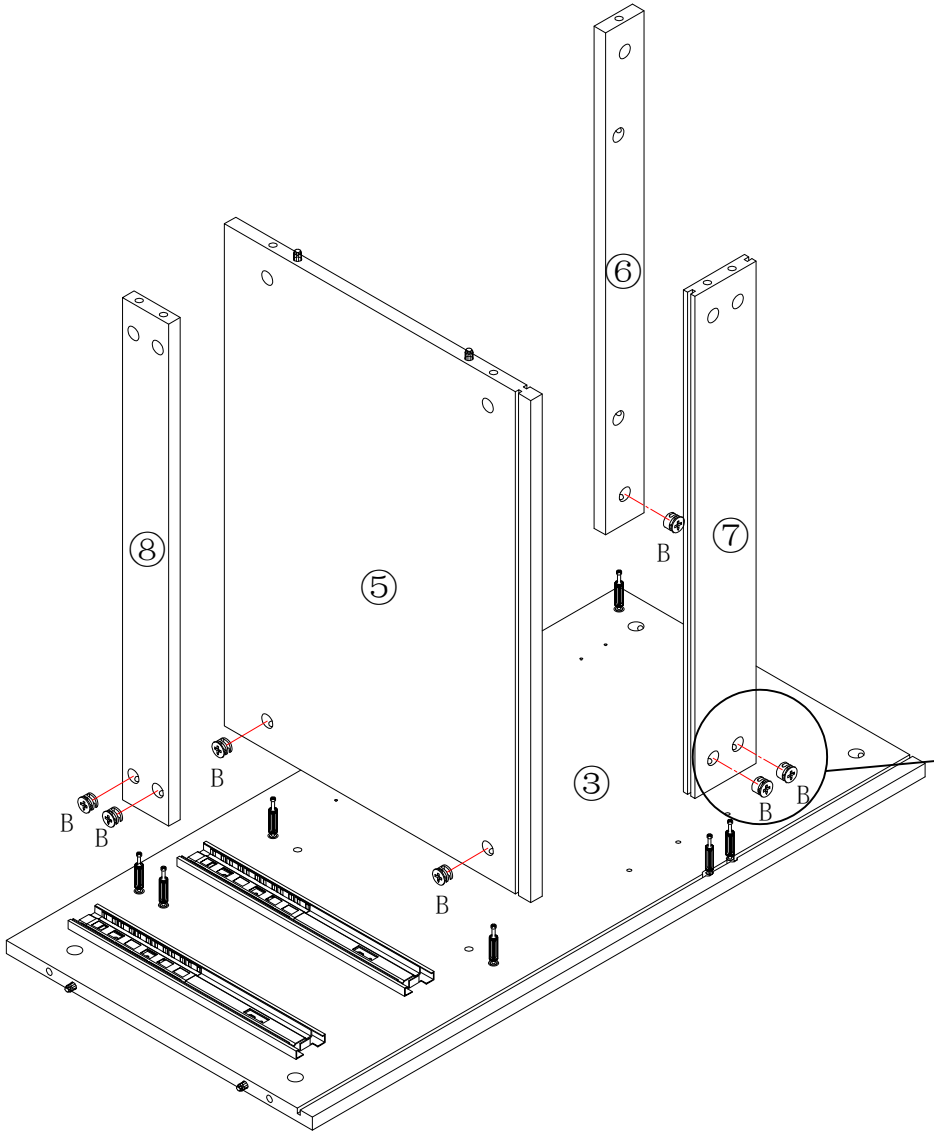

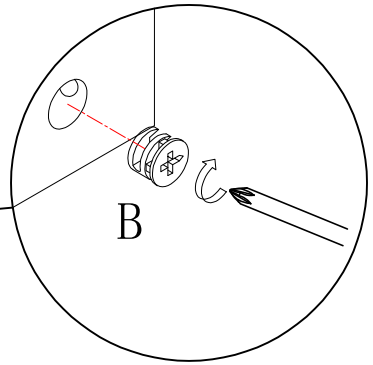

Make sure the arrow on the screw align to the hole on the side.

	B*7	put B on board ⑤⑥⑦⑧

⑤

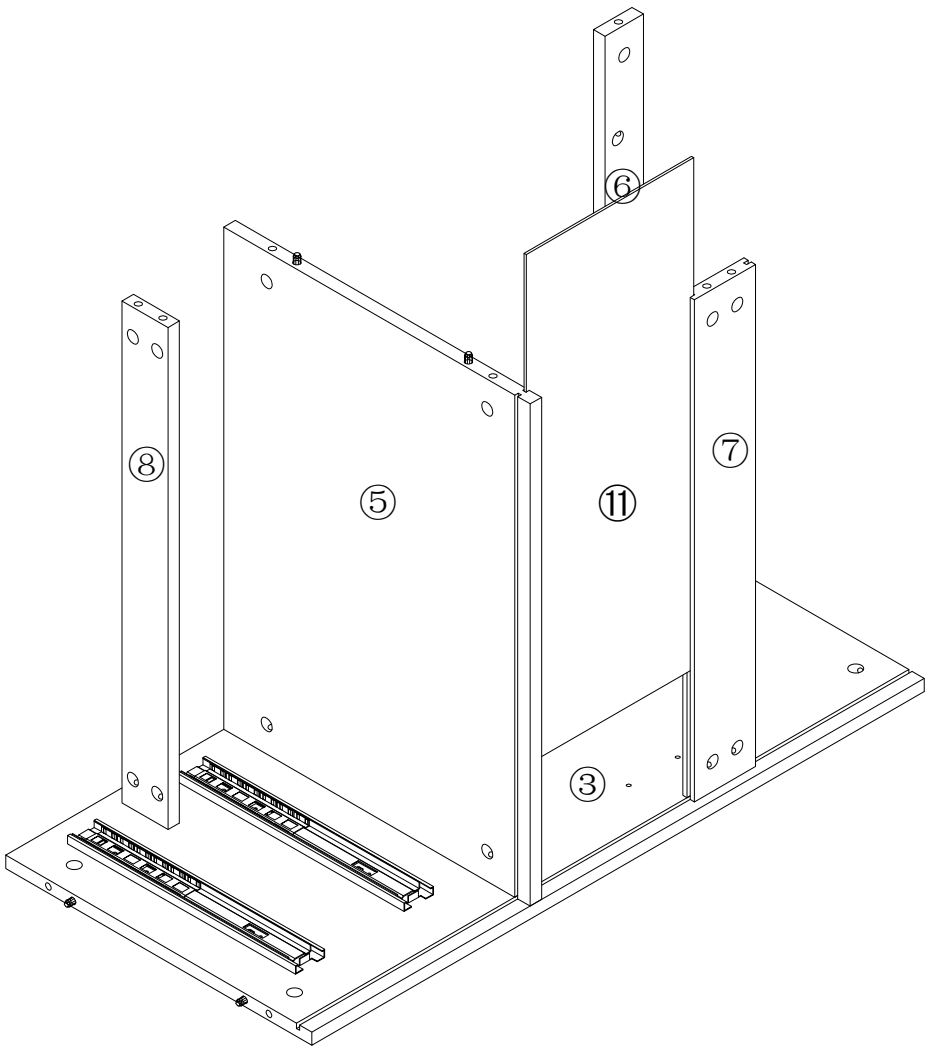

⑥

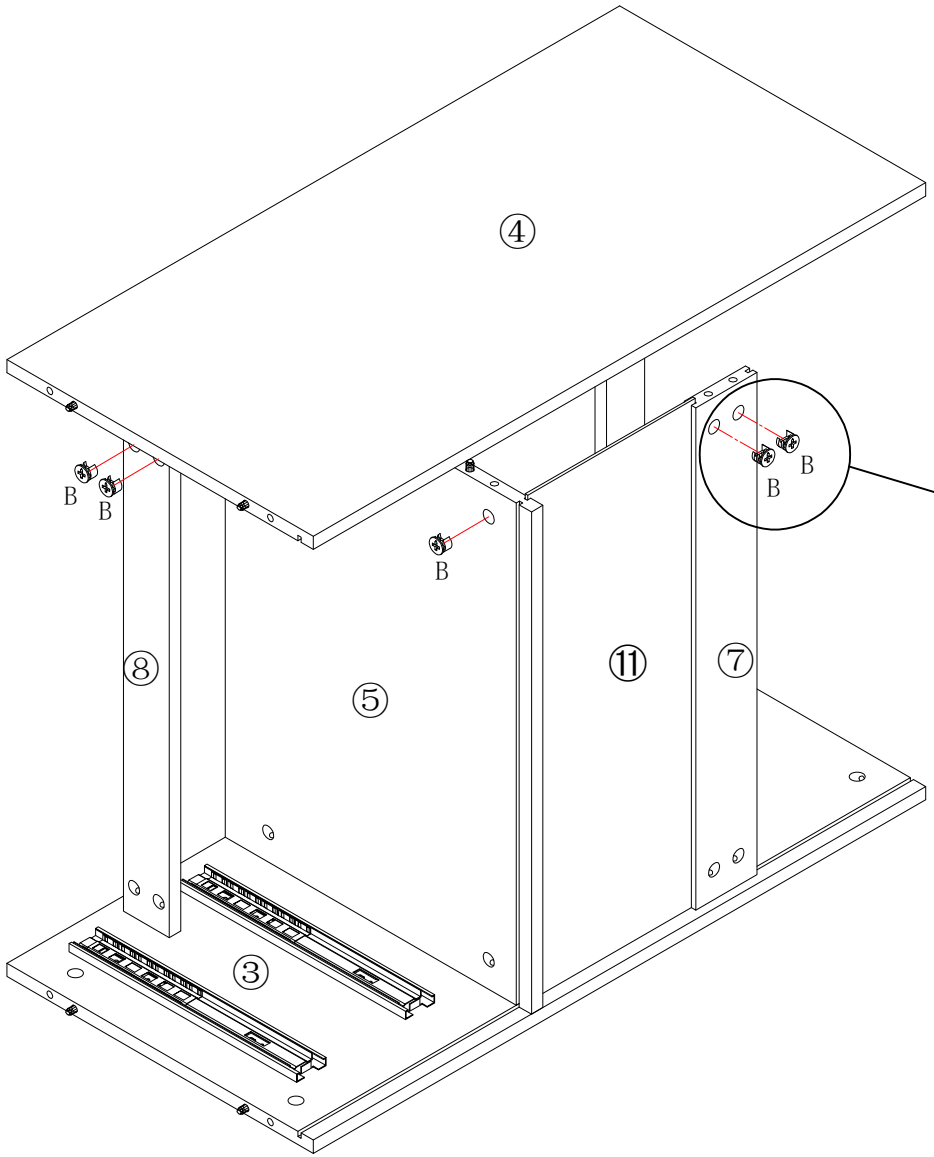

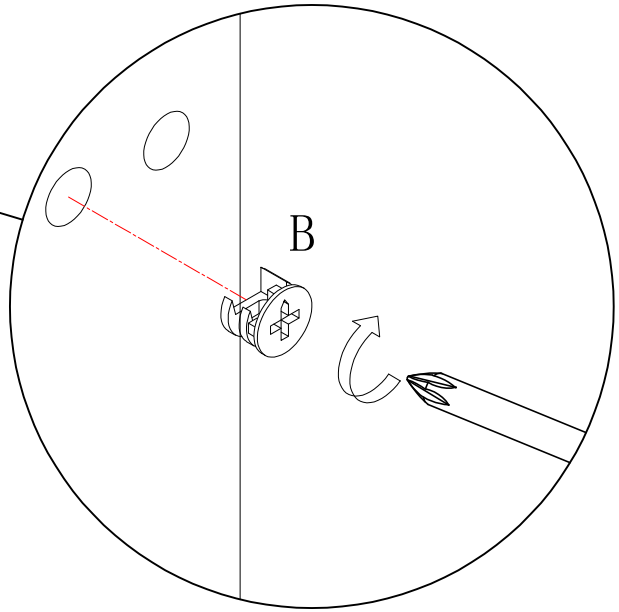

Make sure the arrow on the screw align to the hole on the side.

B*7	put B on board ⑤⑥⑦⑧

⑦

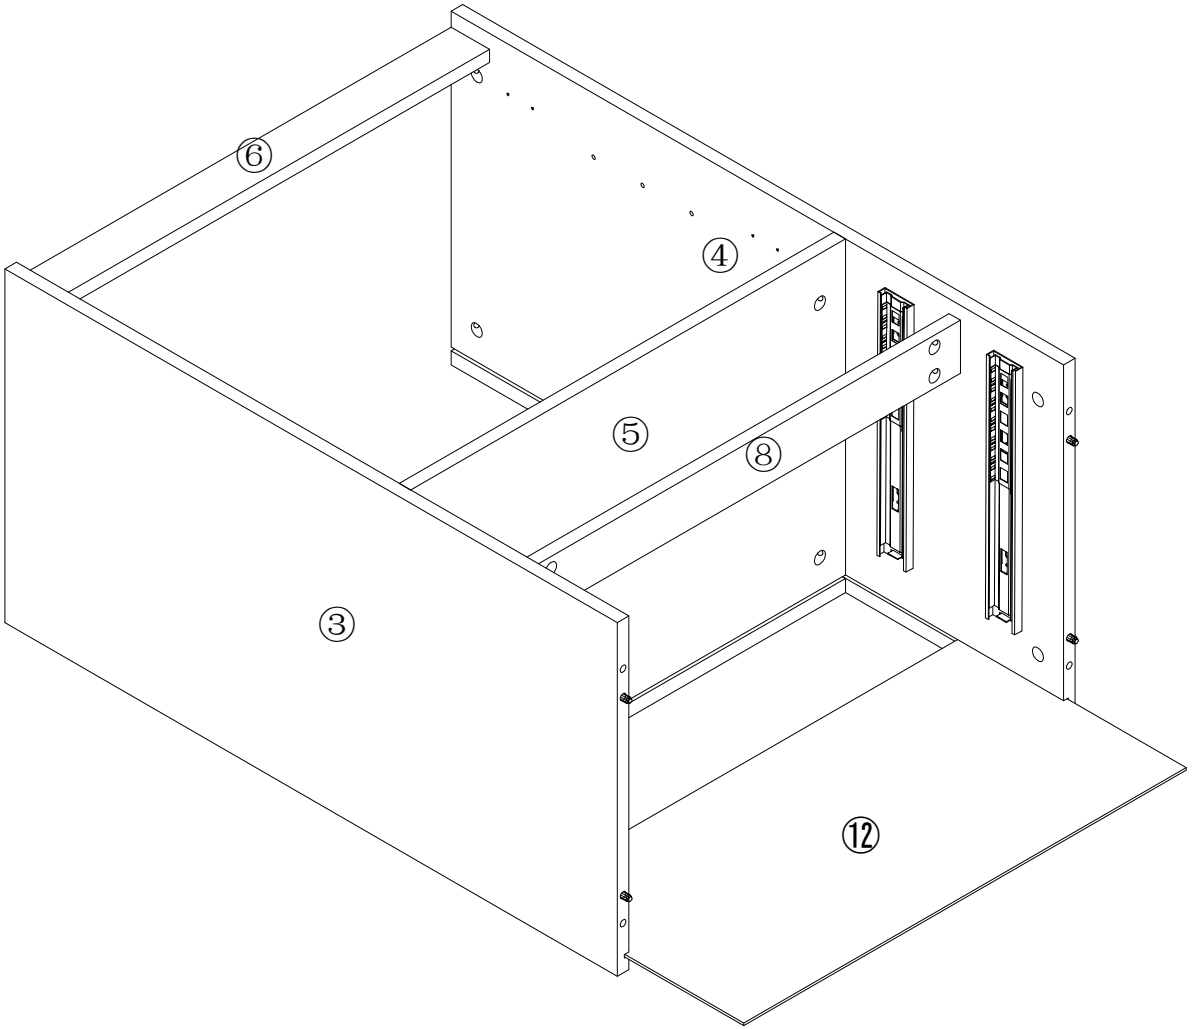

⑧

Make sure the arrow on the screw align to the hole on the side.

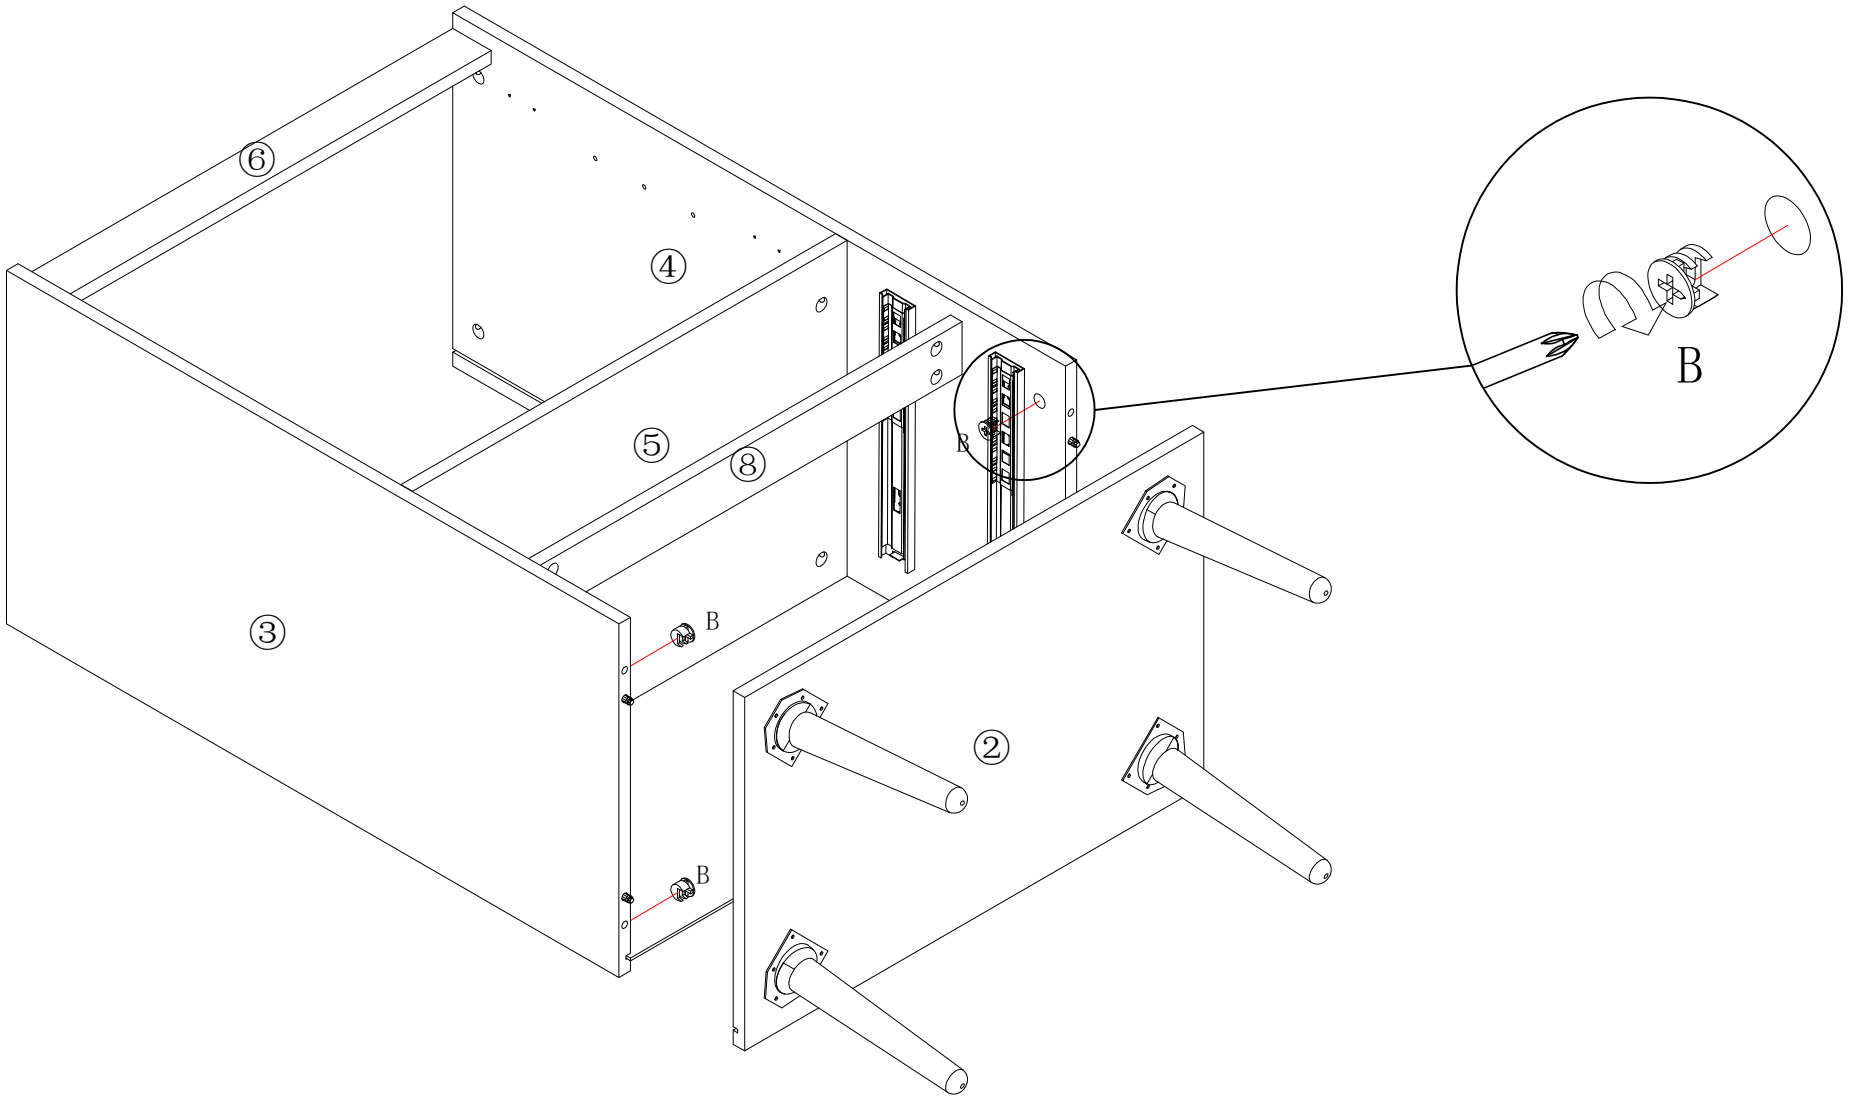

	B*4	put B on board ③④

⑨

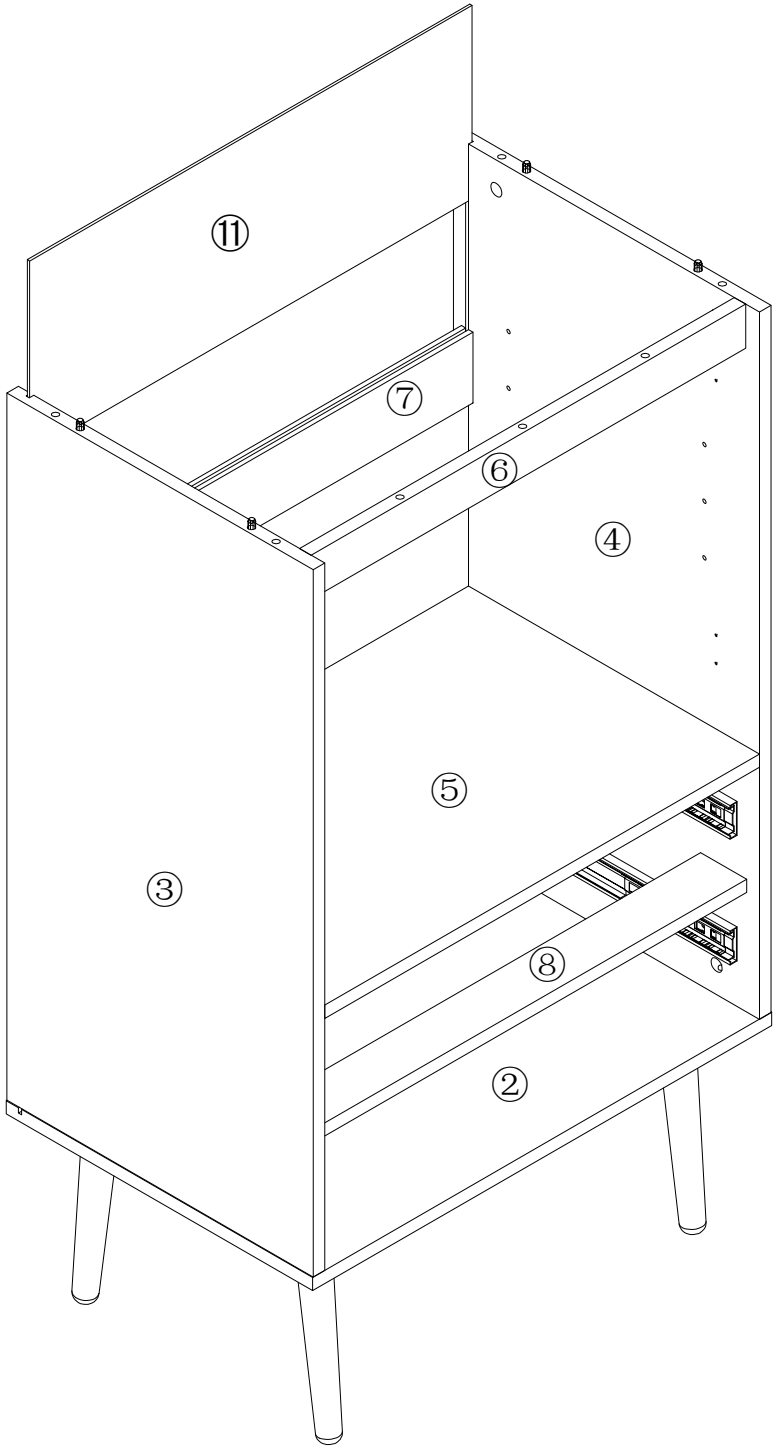

⑩

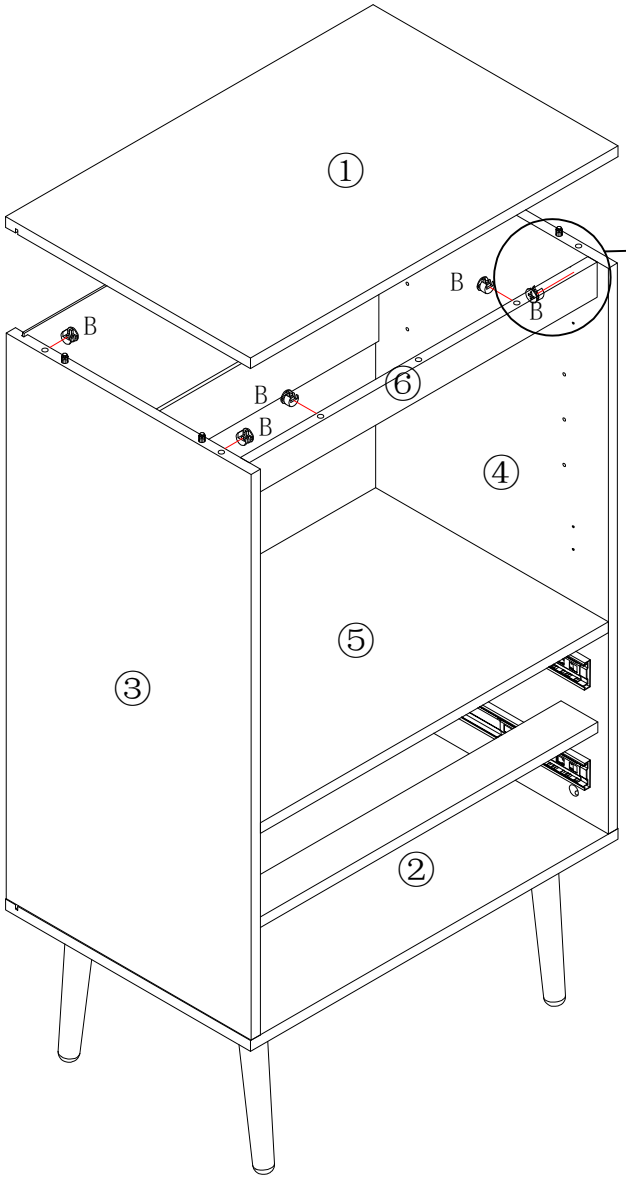

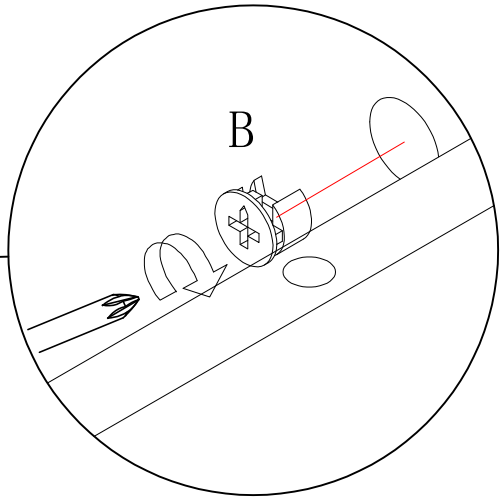

Make sure the arrow on the screw align to the hole on the side.

	B*6	put B on board ③④⑥

⑪

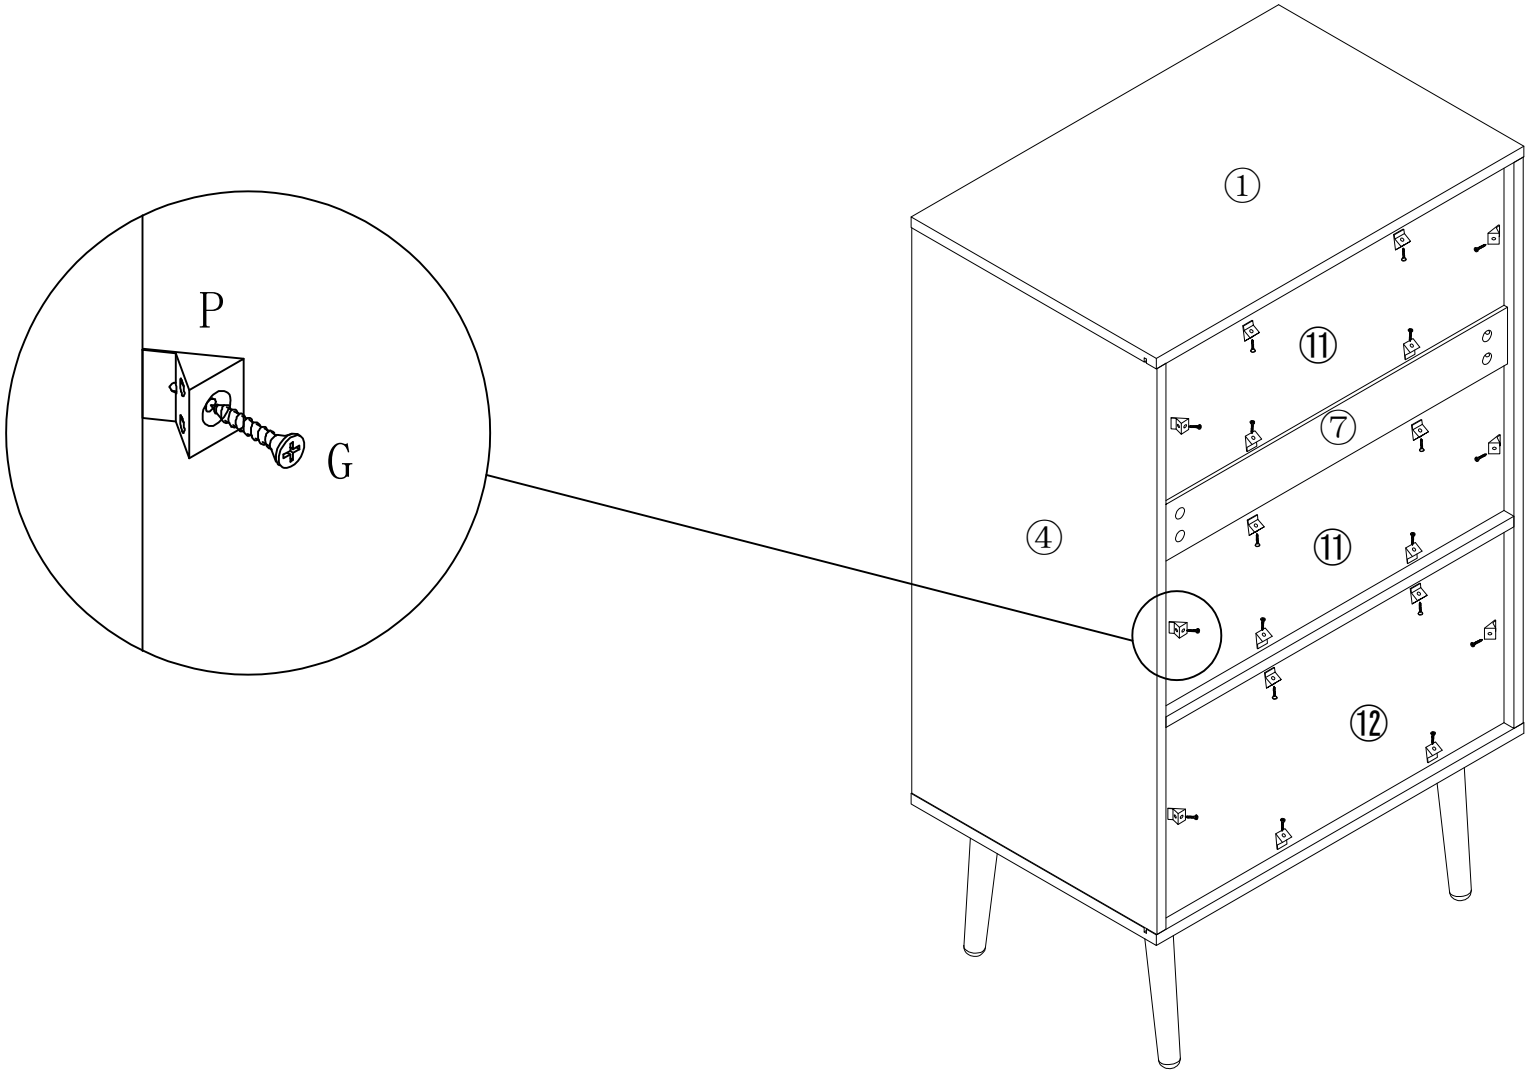

	G*18
	P*18

⑫

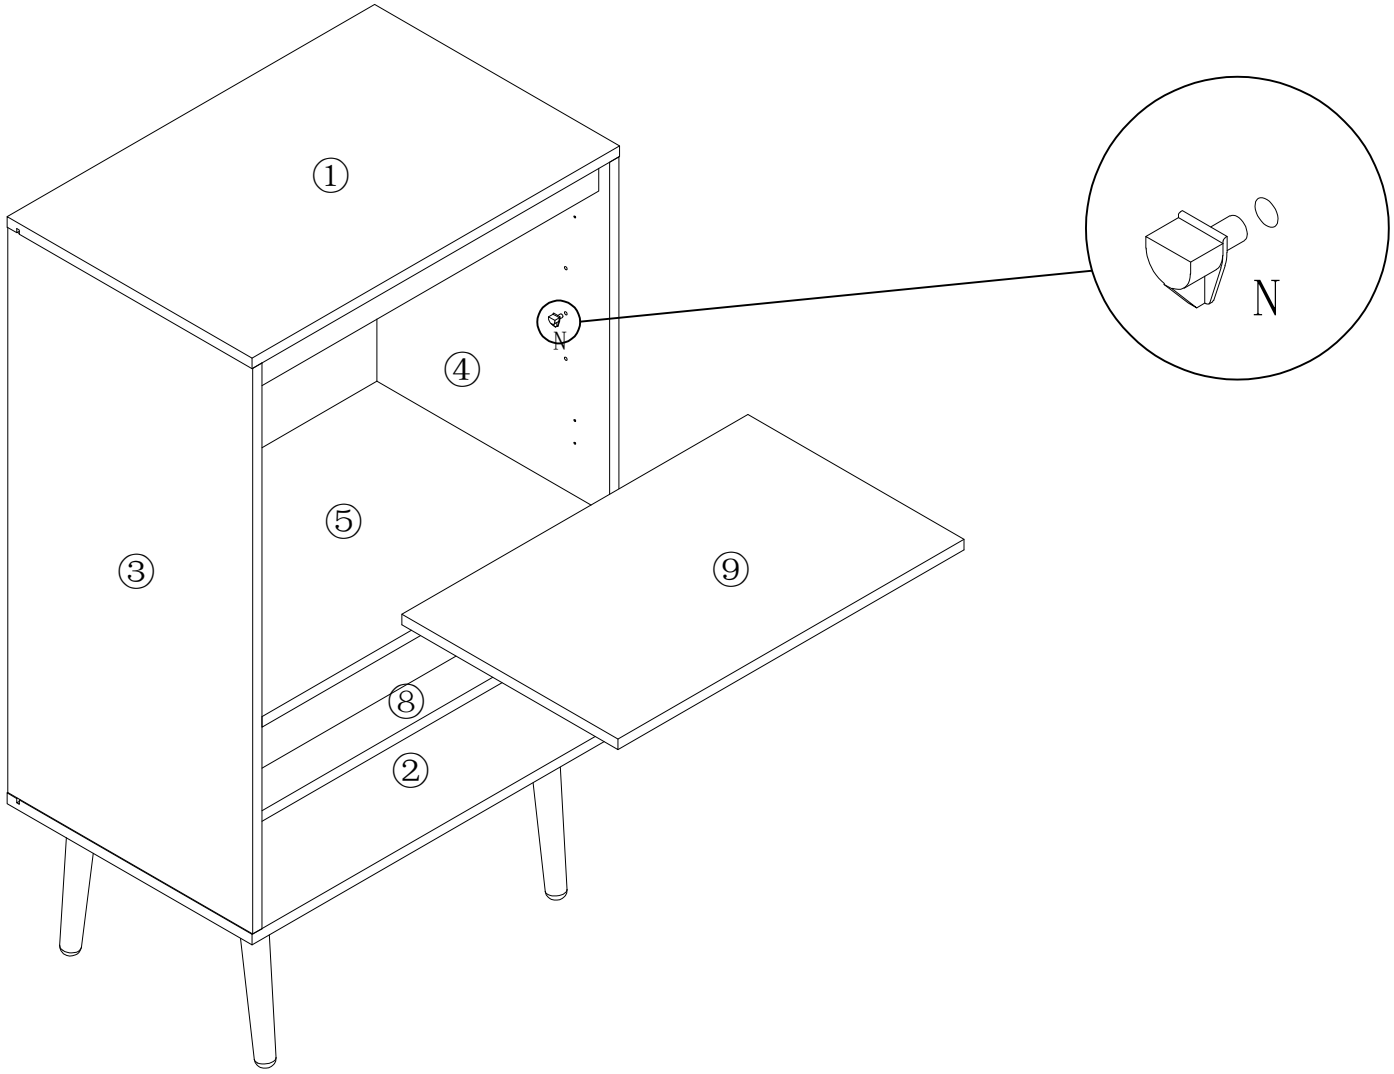

	N*4

⑬

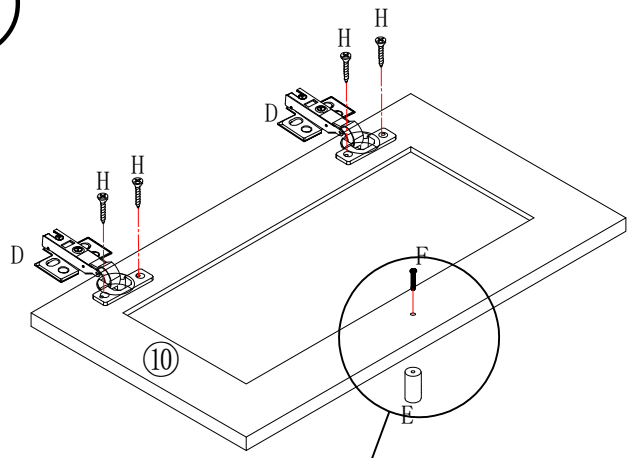

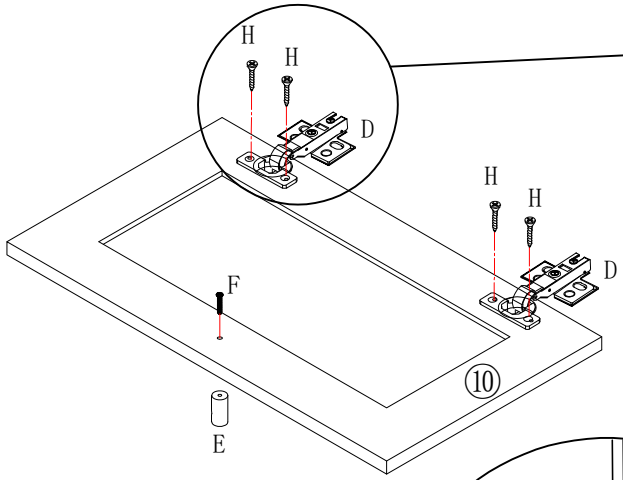

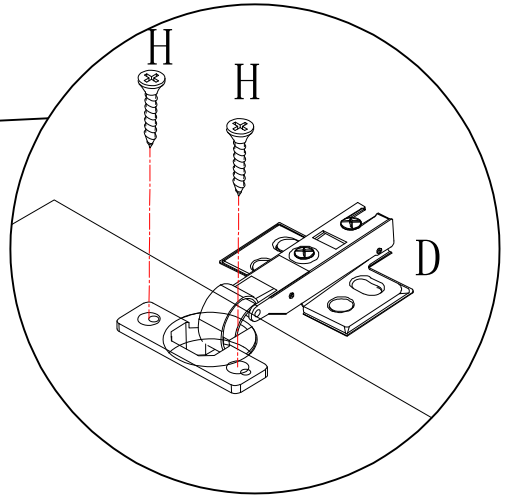

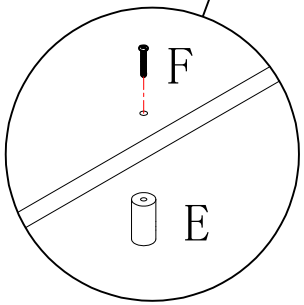

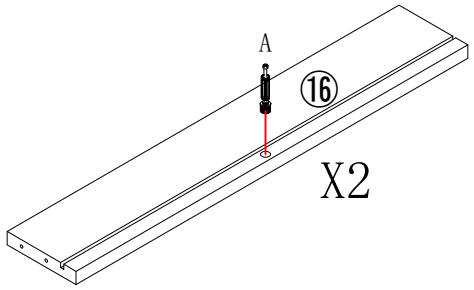

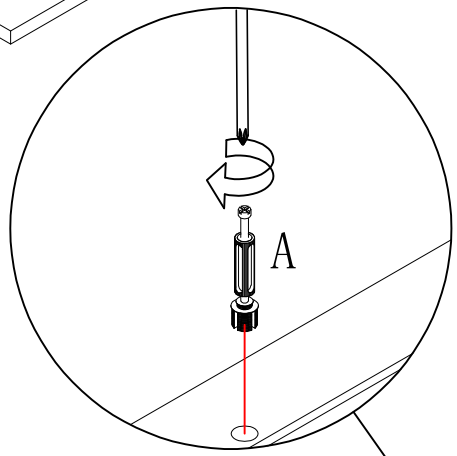

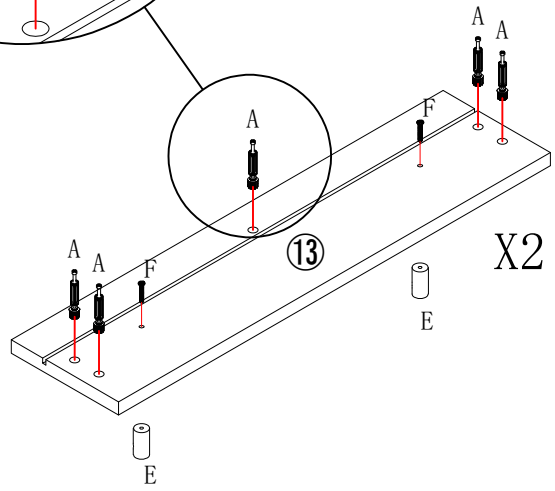

	A*12
	D*4
	E*6
	F*6
	H*8

put A on board ⑬⑯

⑭

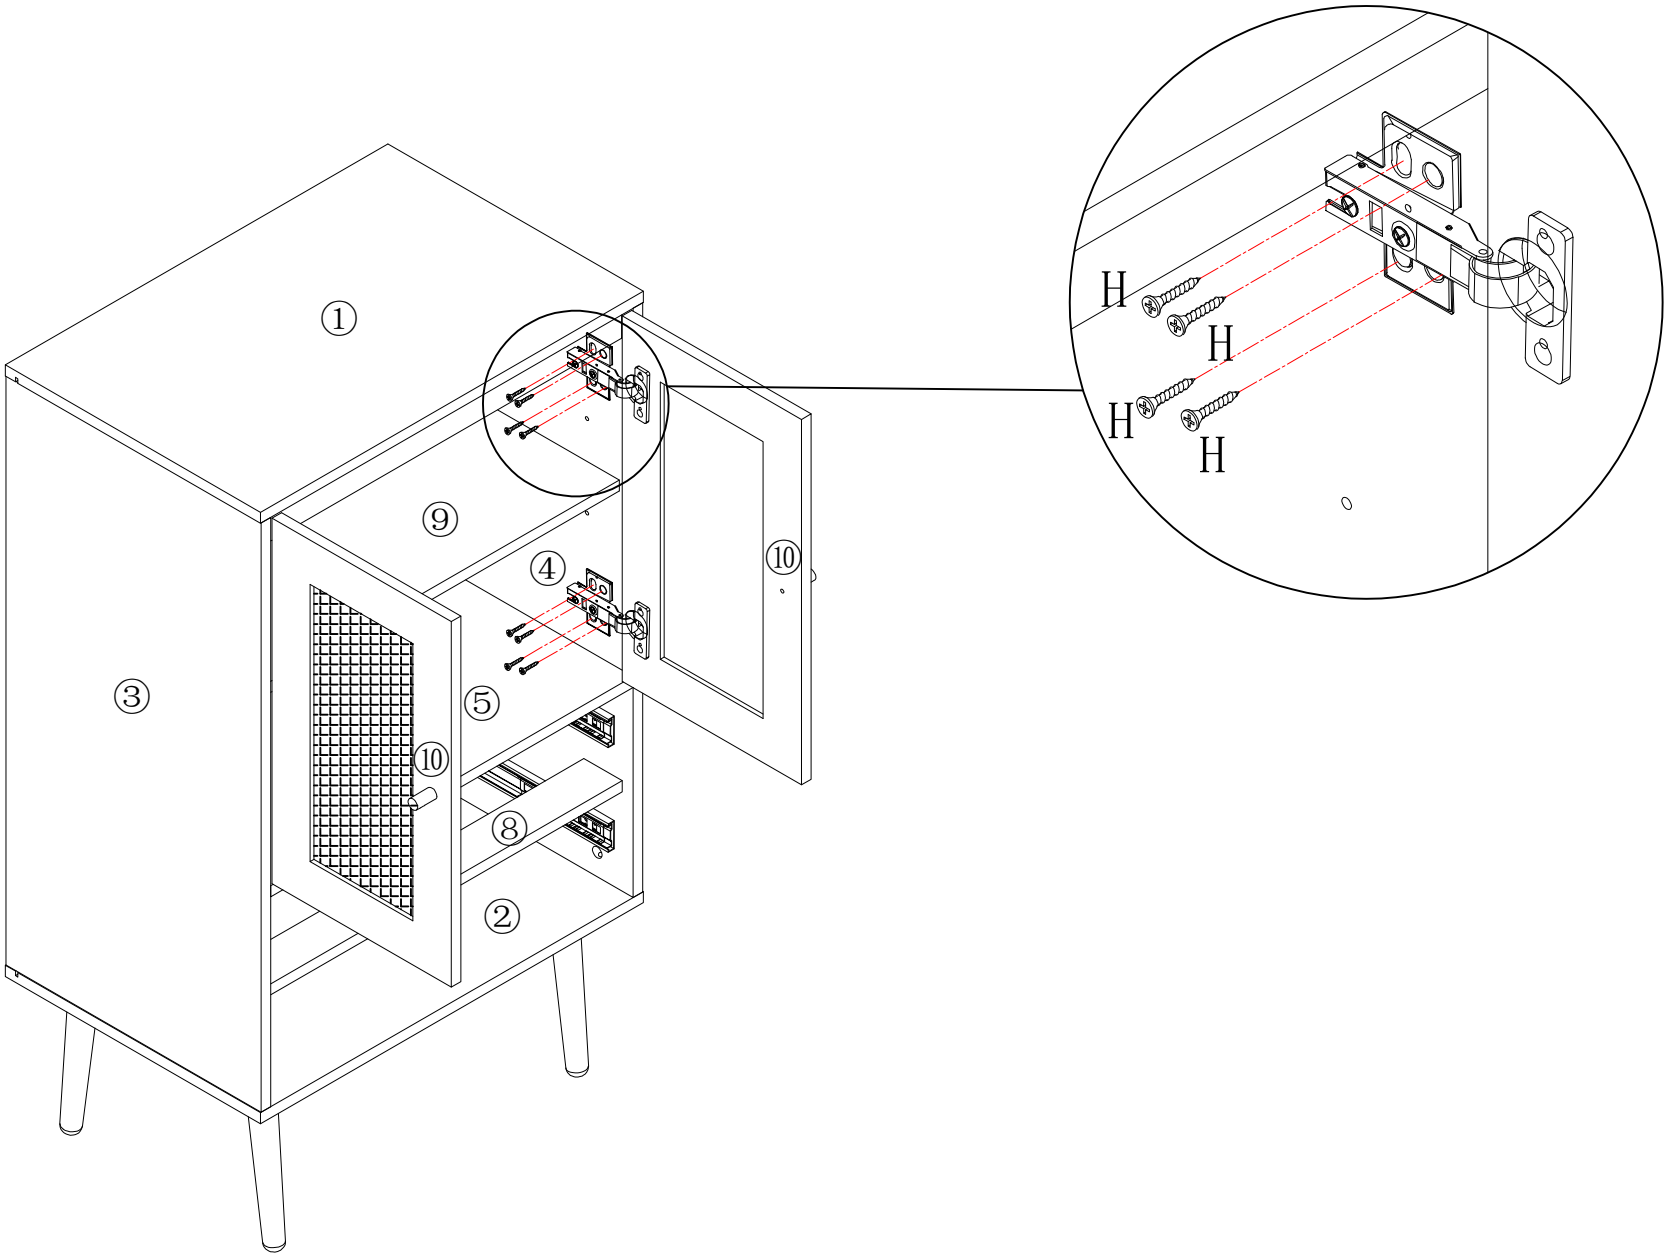

	H*16

⑮

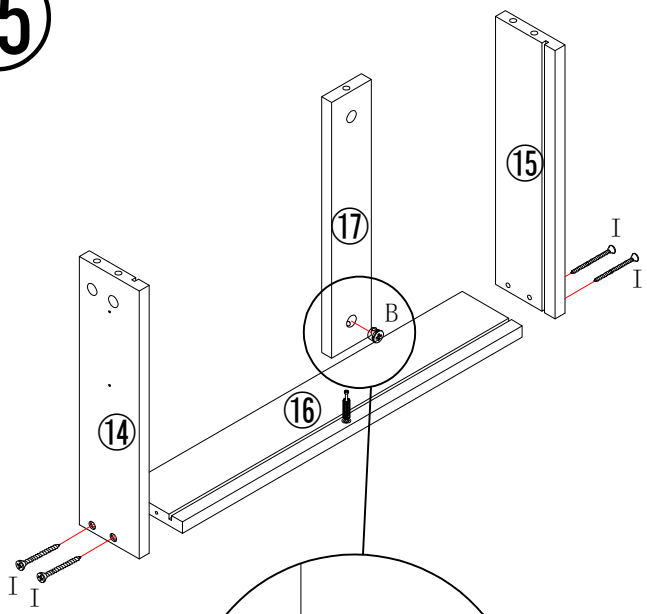

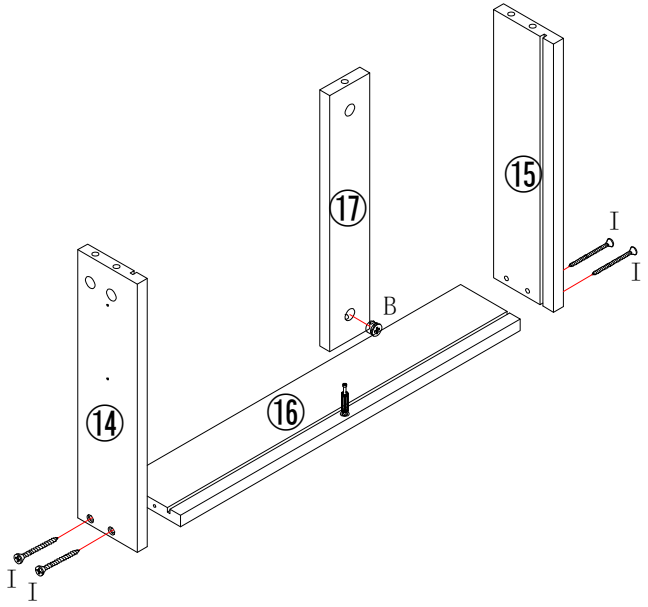



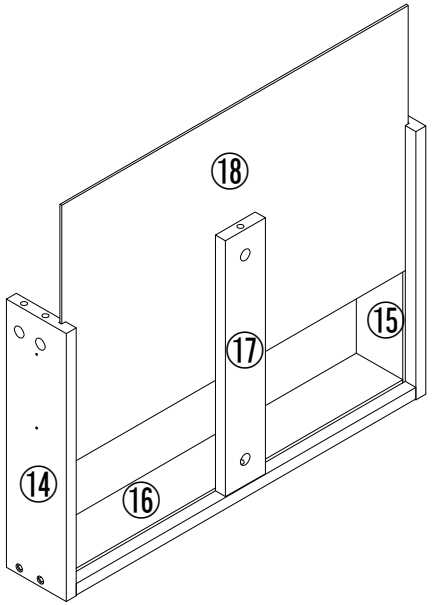

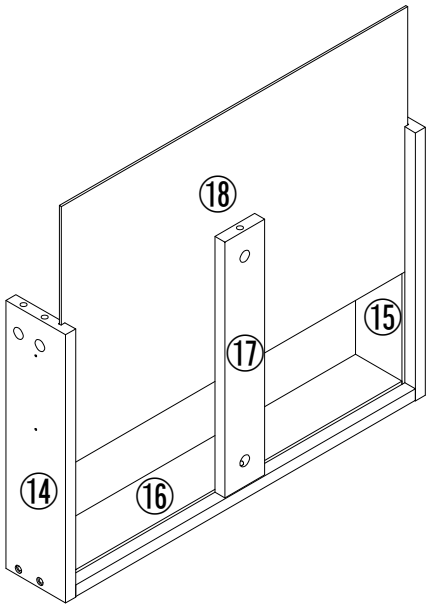

Make sure the arrow on the screw align to the hole on the side.

	B*2	put B on board ⑰
	I*8	

⑯

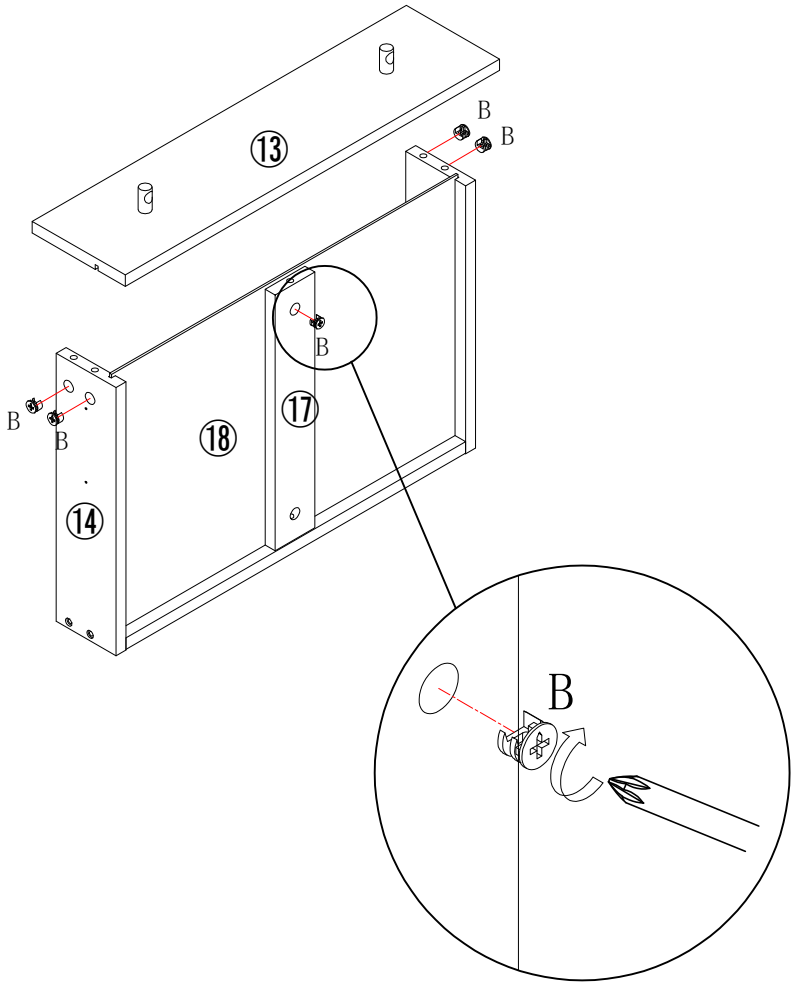

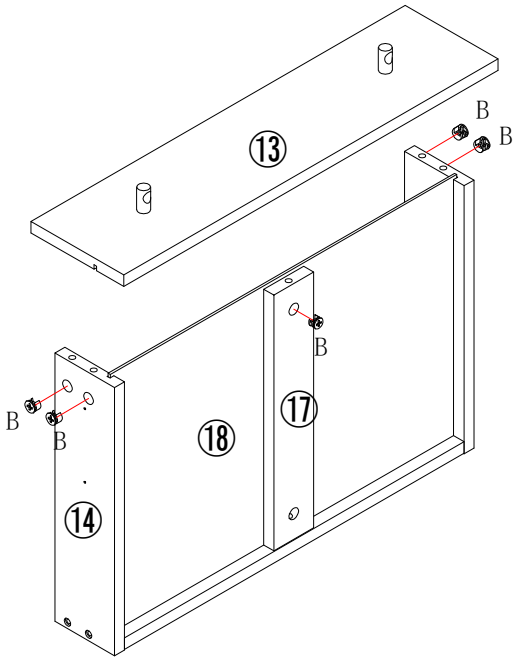

Make sure the arrow on the screw align to the hole on the side.

B*10	put B on board ⑭⑮⑰

⑰

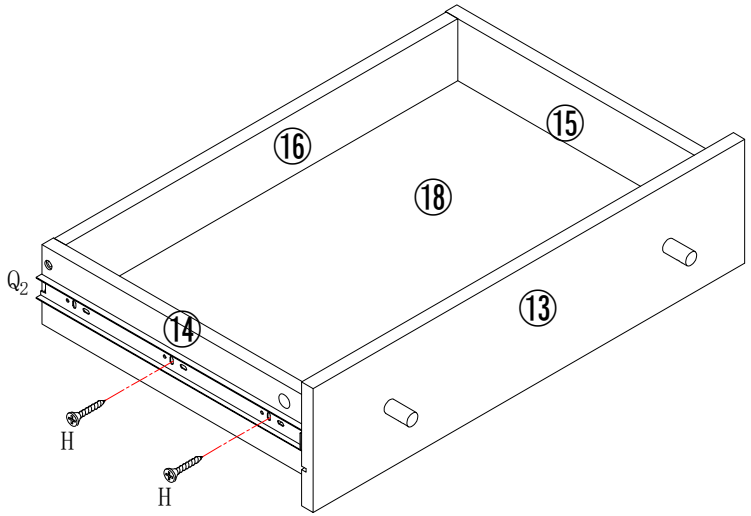

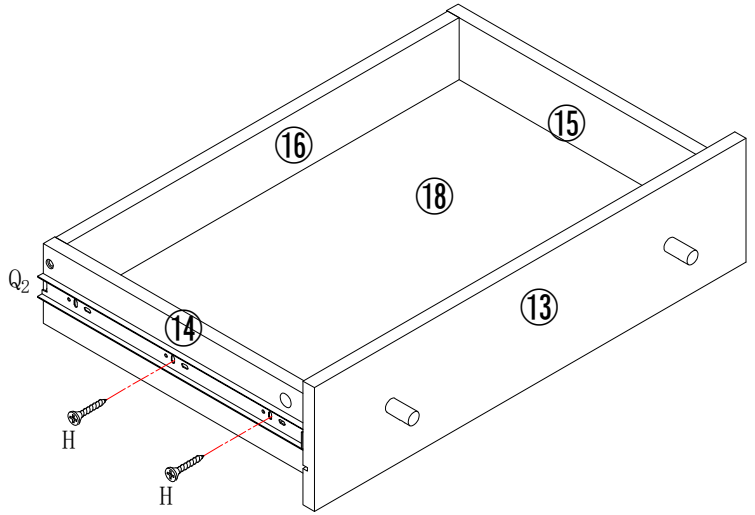

	H*8
	Q_2*4

⑱

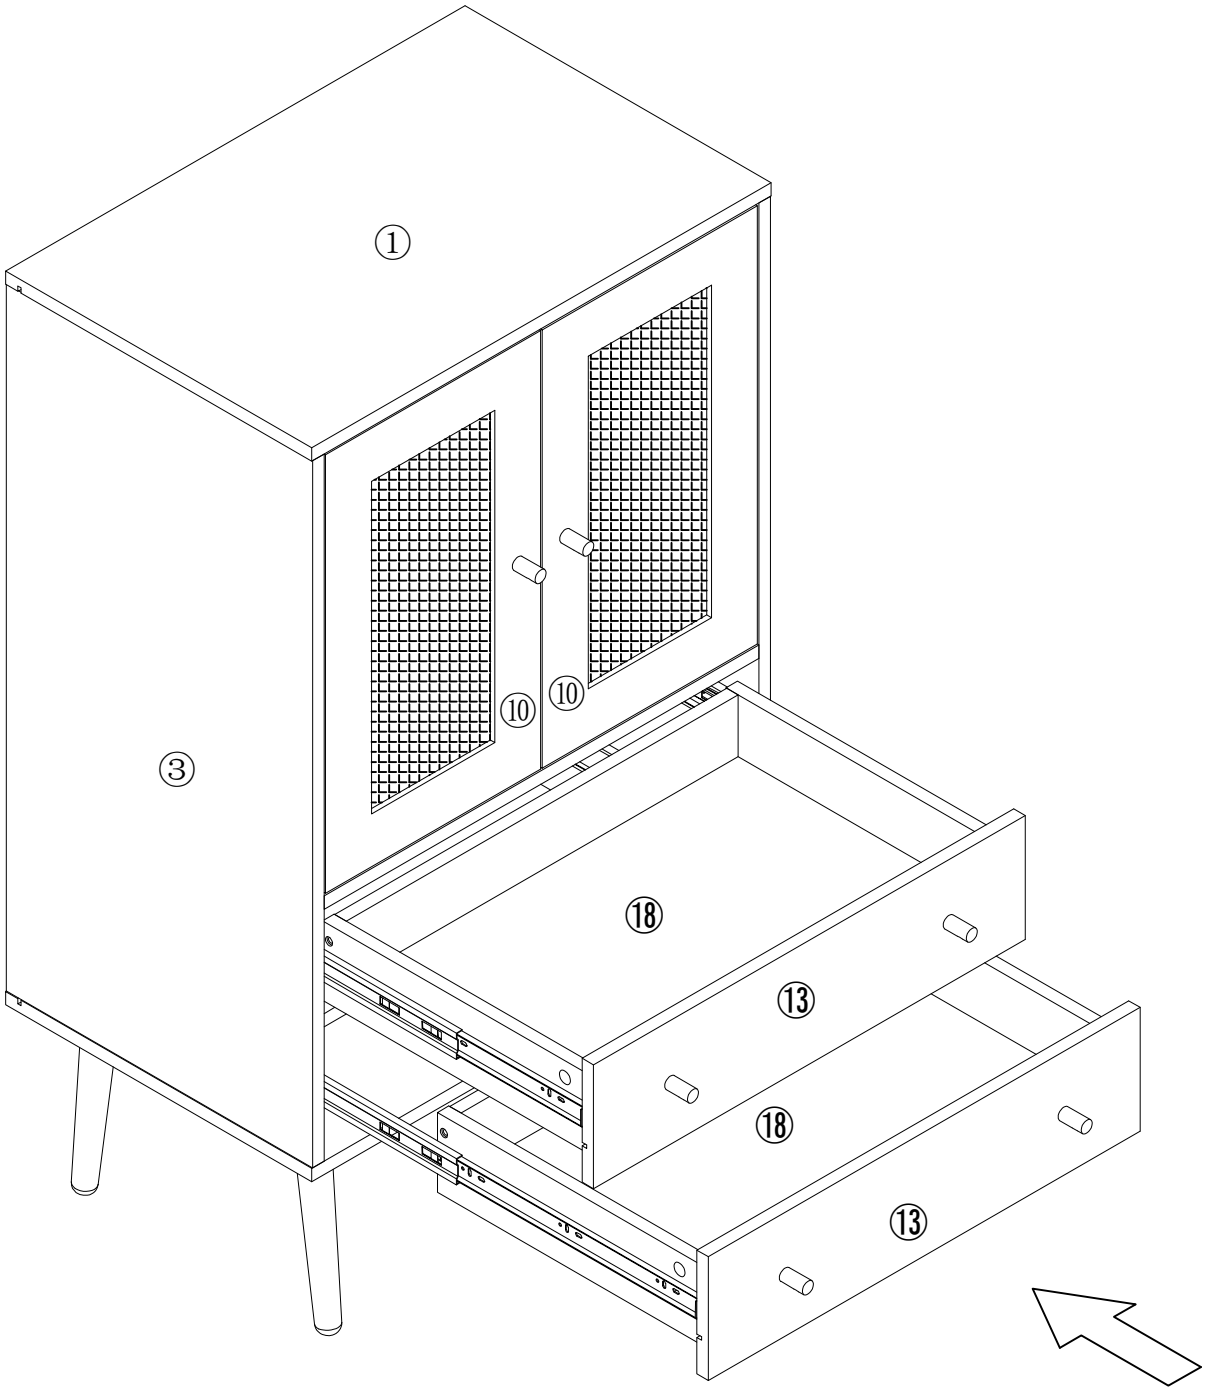

19

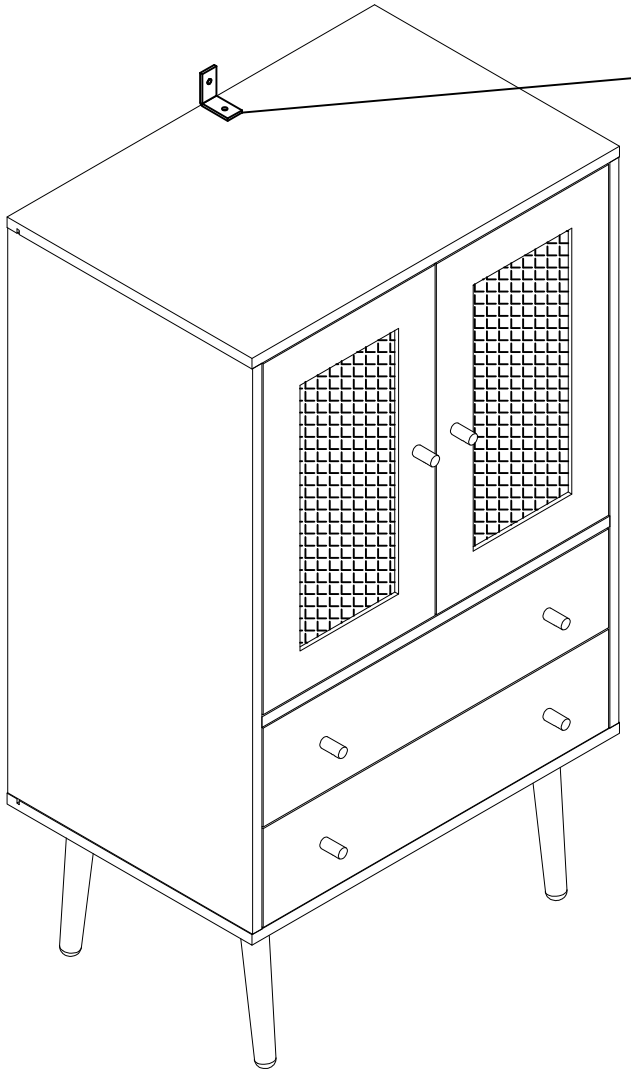

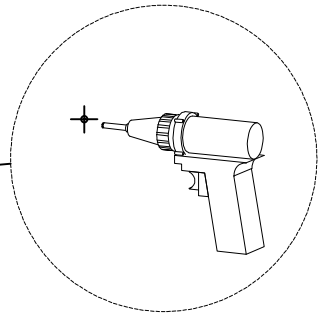

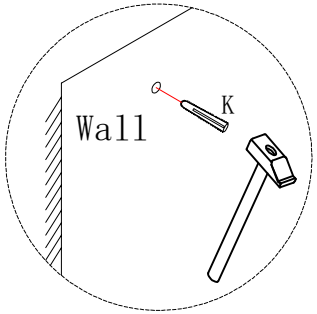

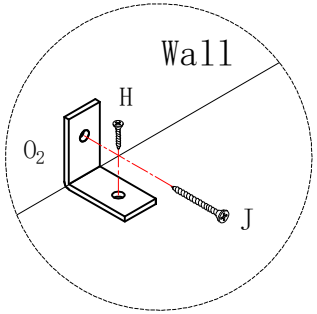

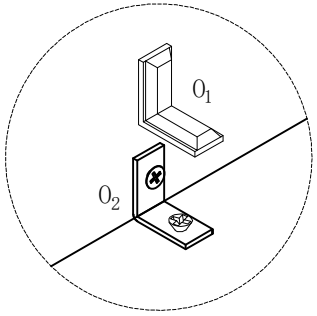

	H*1
	J*1
	K*1
	O*1

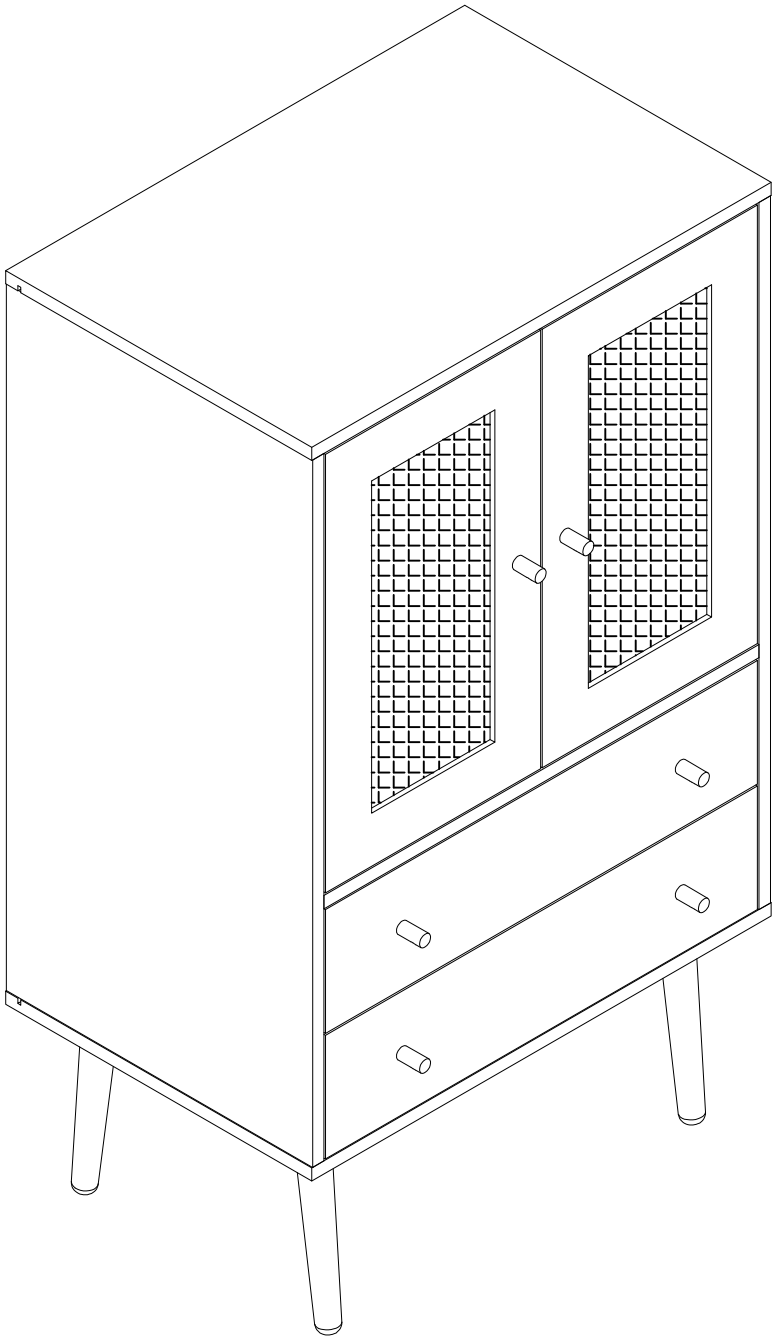

--END--