ASSEMBLY INSTRUCTIONS
REVOLVING TALL BOOKCASE

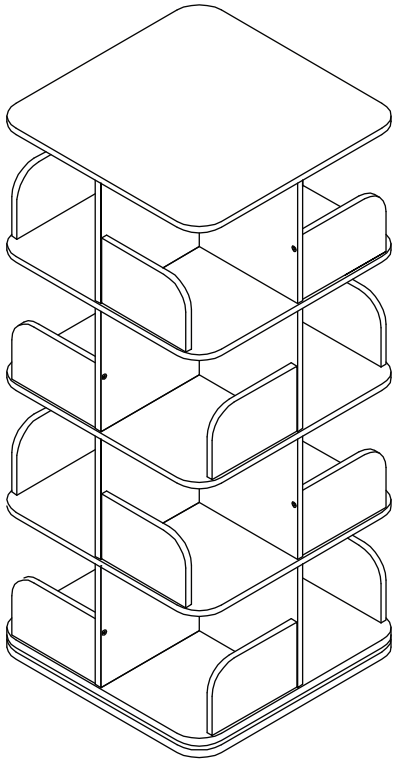

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS IDENTIFICATION

P1 Quantity: 1 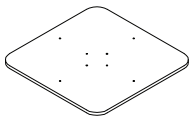 Top Panel	P2 Quantity: 2 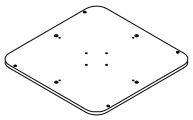 Top/Lower Shelf Panel	P3 Quantity: 1 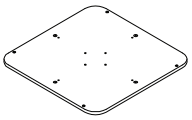 Middle Shelf Panel	P4 Quantity: 1 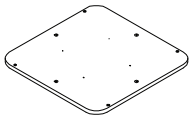 Lower (Revolving)Shelf Panel	P5 Quantity: 1 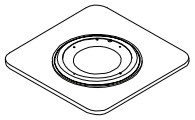 Base Panel (come with a revolving mechanism)
P6 Quantity: 2  Top/Middle Partition	P7 Quantity: 2  Top/Middle Partition	P8 Quantity: 2 Top/Middle Divider Panel (Left)	P9 Quantity: 2 Top/Middle Divider Panel (Right)	P10 Quantity: 2 Upper/Lower Divider Panel (Left)
P11 Quantity: 2 Upper/Lower Divider Panel (Right)	P12 Quantity: 16 Stopper Panels			

HARDWARE LIST

H1 Screw #9 x 1 1/2″  Ø 11/64″ 1 1/2″ Quantity: 48 pcs	H2 Screw m4 x 28mm Ø 5/32″ 1 7/64″ Quantity: 5 pcs		
H3 Wooden Dowel M6 x 25 Ø15/64″ 1 ″ Quantity: 48 pcs	H4 Connecting Bolt  Quantity: 16 pcs		
H5 Cam Lock 15/ 9.5mm Quantity: 16 pcs	H6 Screw m3.5 x 14mm Ø 9/64″ 35/64″ Quantity: 4 pcs		
H7 Leg Stud Quantity: 5 pcs	H8 Sticker Quantity: 32 pcs		

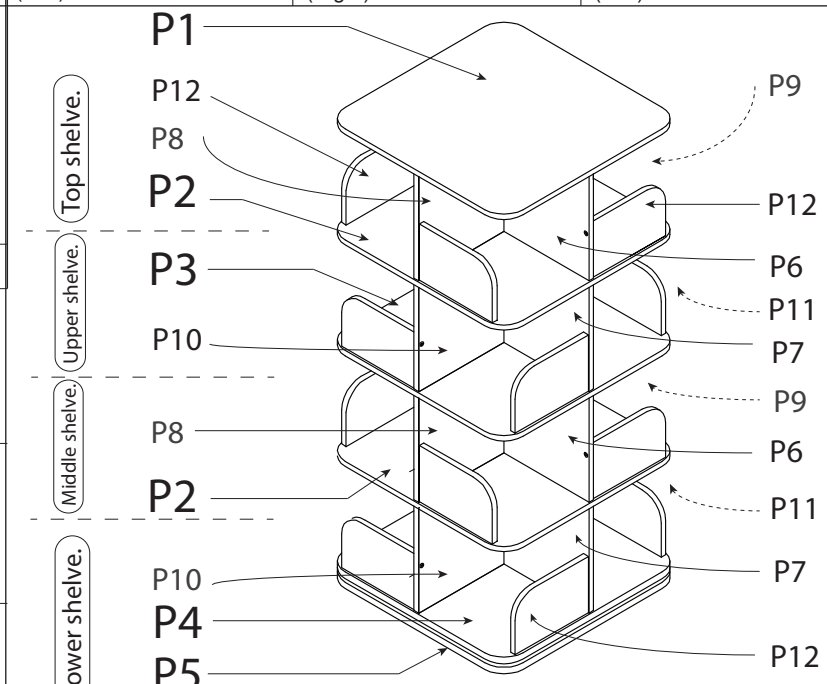

TOOLS REQUIRED

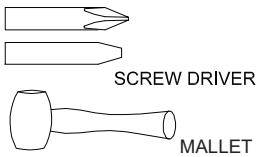

STEP 1

Insert wooden dowels H3

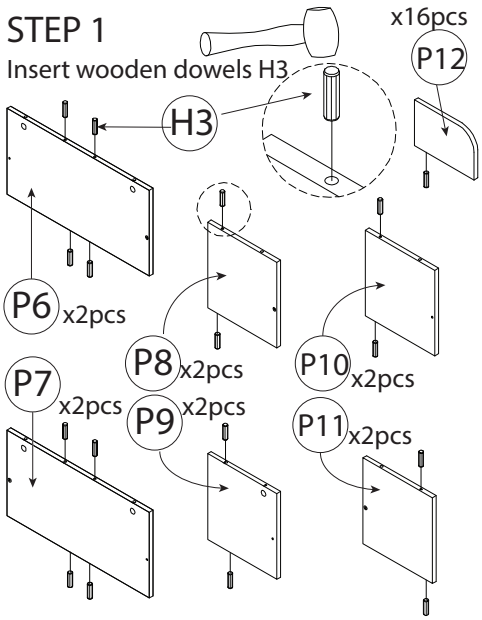

STEP 2

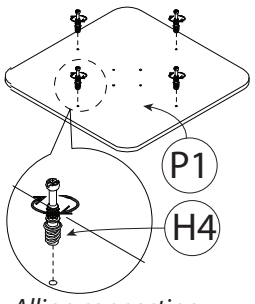

Allign connecting bolts H4 into P1

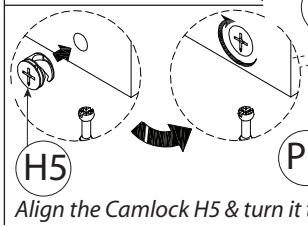

STEP 3 **2 sets** of these assembly, one for Top Shelve and one for Middle Shelve.

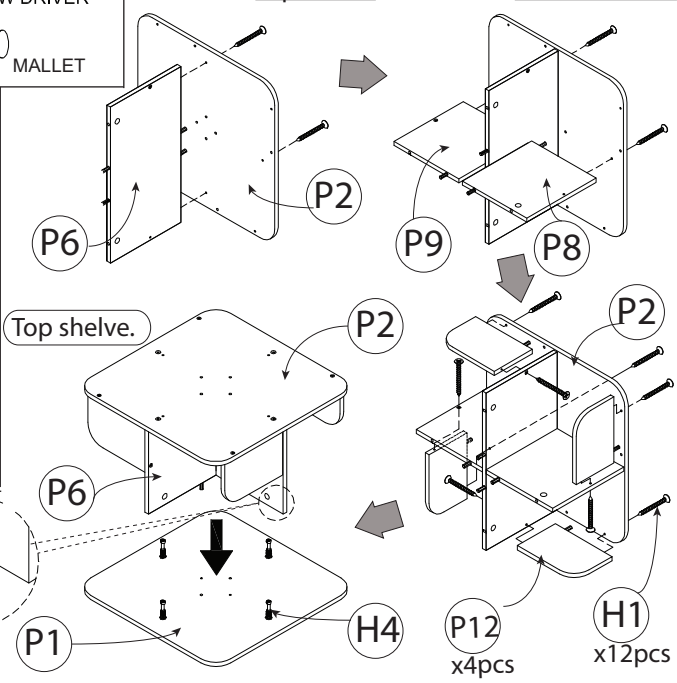

Align the Camlock H5 & turn it to locked position when it is connected to the bolts.

STEP 4 Continue with the assembly of the Upper Shelve.

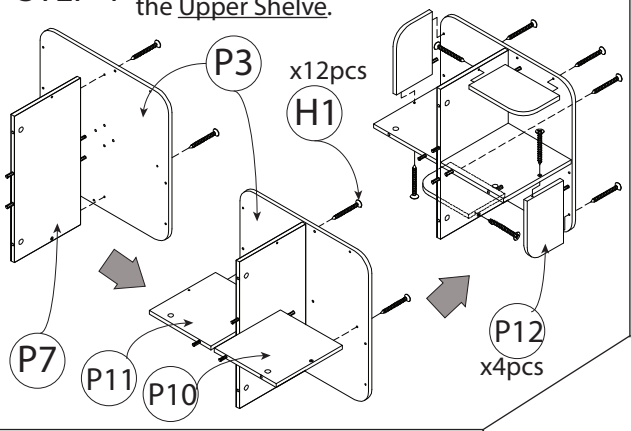

STEP 5 Assemble the Lower shelve.

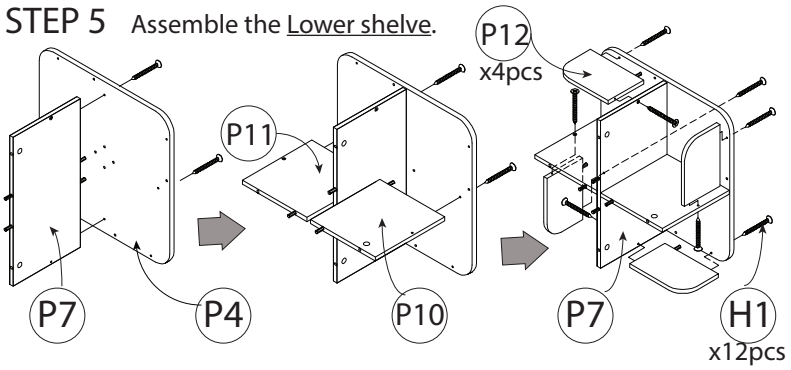

STEP 6 *Align the Connecting Bolts H4 into the underside of P2 (Top Shelve).*

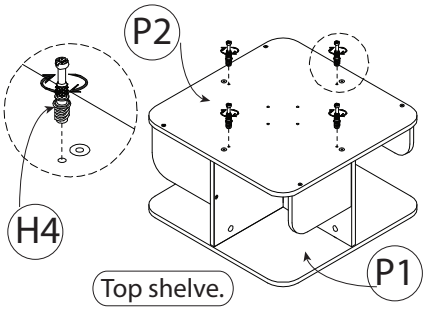

STEP 7 Connect the Upper Shelve into the Top shelve.

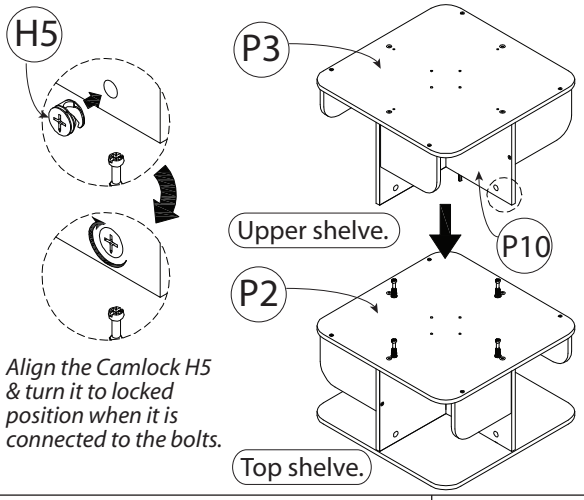

Align the Camlock H5 & turn it to locked position when it is connected to the bolts.

STEP 8

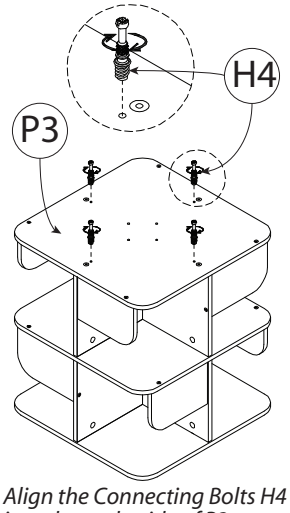

Align the Connecting Bolts H4 into the underside of P3.

STEP 9 Connect the Middle Shelve into the Upper shelve.

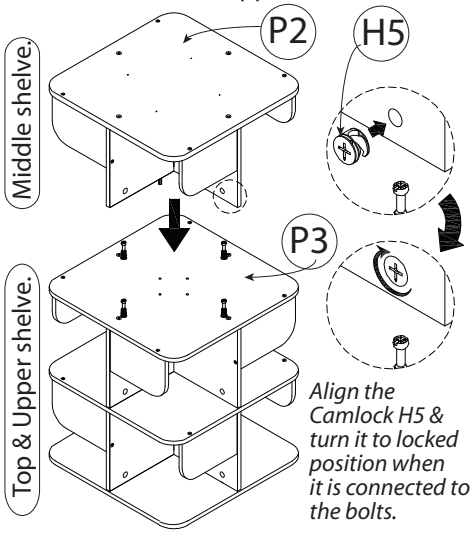

Align the Camlock H5 & turn it to locked position when it is connected to the bolts.

STEP 10 *Align the Connecting Bolts H4 into the underside of P2 of Middle Shelve.*

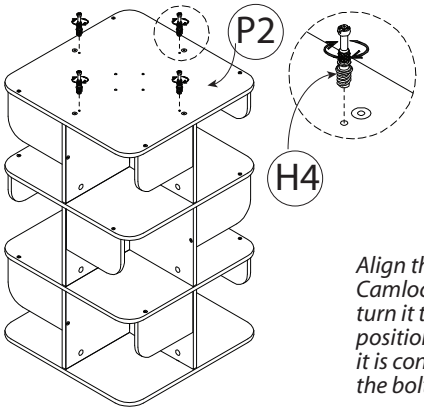

STEP 11 Connect the Lower Shelve into the Middle shelve.

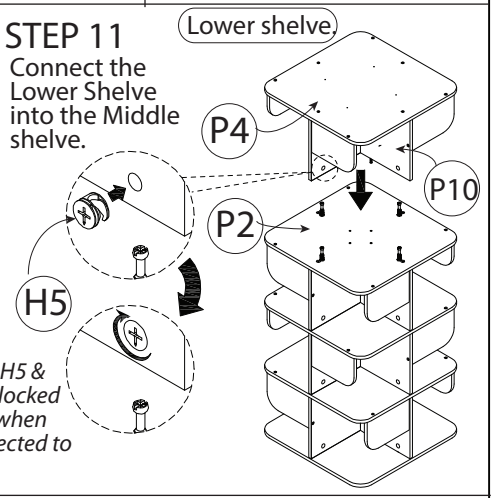

Align the Camlock H5 & turn it to locked position when it is connected to the bolts.

STEP 12 Assemble the base panel P5 into the underside of the Lower Shelve (P4)

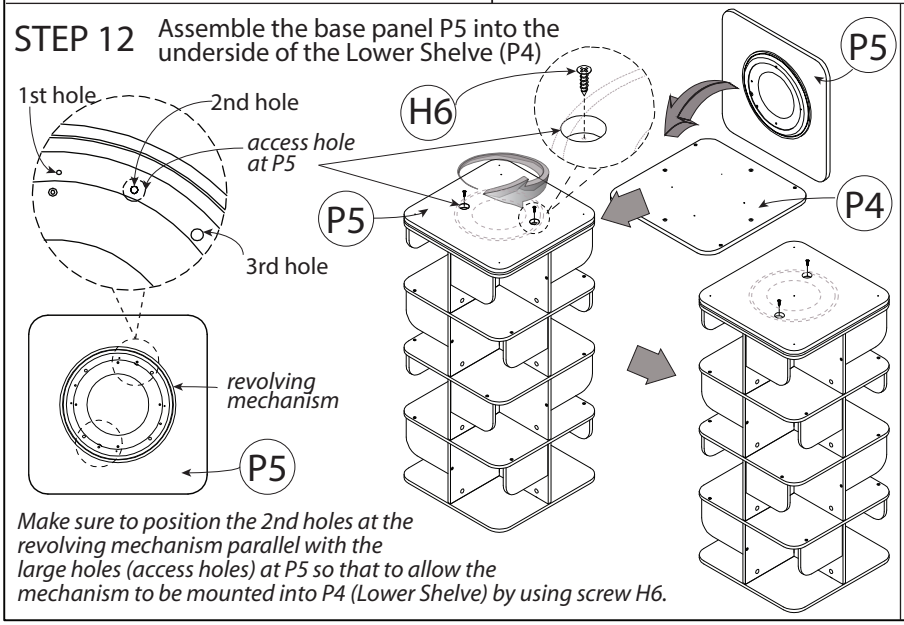

Make sure to position the 2nd holes at the revolving mechanism parallel with the large holes (access holes) at P5 so that to allow the mechanism to be mounted into P4 (Lower Shelve) by using screw H6.

STEP 13 Assemble the Leg Studs H7 to the base panel P5.

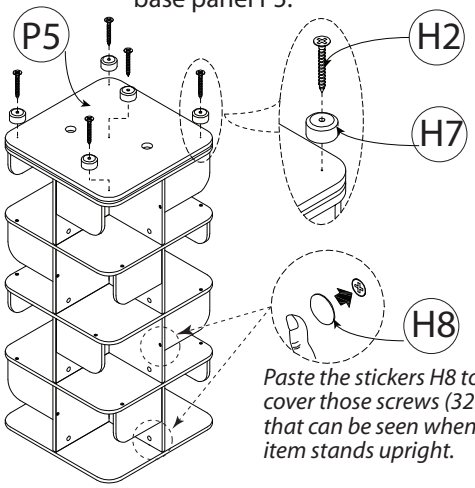

Paste the stickers H8 to cover those screws (32 pcs) that can be seen when the item stands upright.

PUT THE ITEM UPRIGHT, AND IT IS READY TO USE. CONGRATULATIONS!