
User's Manual

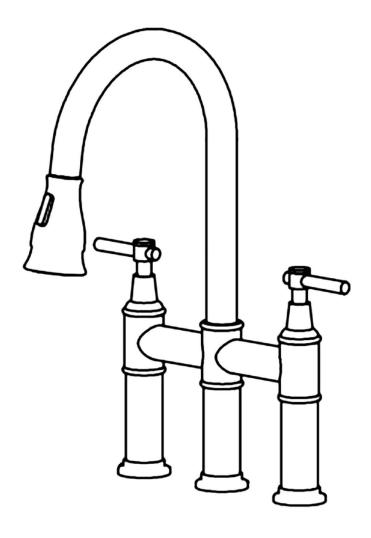

INSTALLATION INSTRUCTIONS

Installation Manual



IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.












INSTALLATION STEPS


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




FAUCET HOLE PLACEMENT

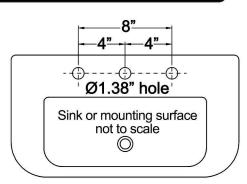


The faucet fits for Ø1.38" installation hole. The distance of this two installation hole is 4". Please see the below photograph as marked.

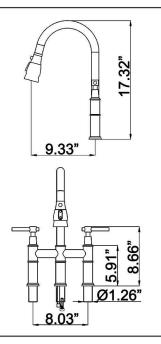


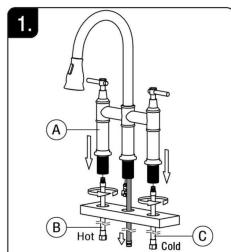


1. Connect the hot and cold supply hoses(B&C) to the main body (A). Then put the main body into the installation hole and prepare the next step.

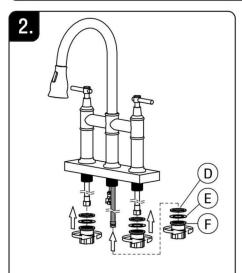

2. Use a nut (F) to fix the faucet. Rubber washer (D) and metal washer (E) are needed between the nut and fixed plate.

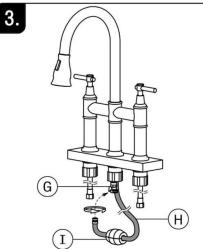

3. Put the pull tube (H) into the water outlet (G). Then put the gravity ball (I) on pull tube and adjust it in right position. Prepare the next step.

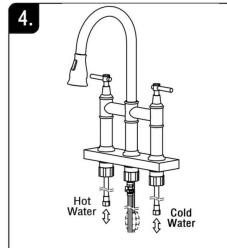

4. Connect the supply hose (B) to the hot water valve, connect the supply hose (C) to the cold water valve. Product installation is completed.

CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc:
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.





