


SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER  
DESIGN. PATENTS INCLUDE:  
#D5,109,325 & #D5,222,805

CHANDELIER 5898- \_\_\_\_\_ M TRIM DIAGRAM  
(Finish Option)

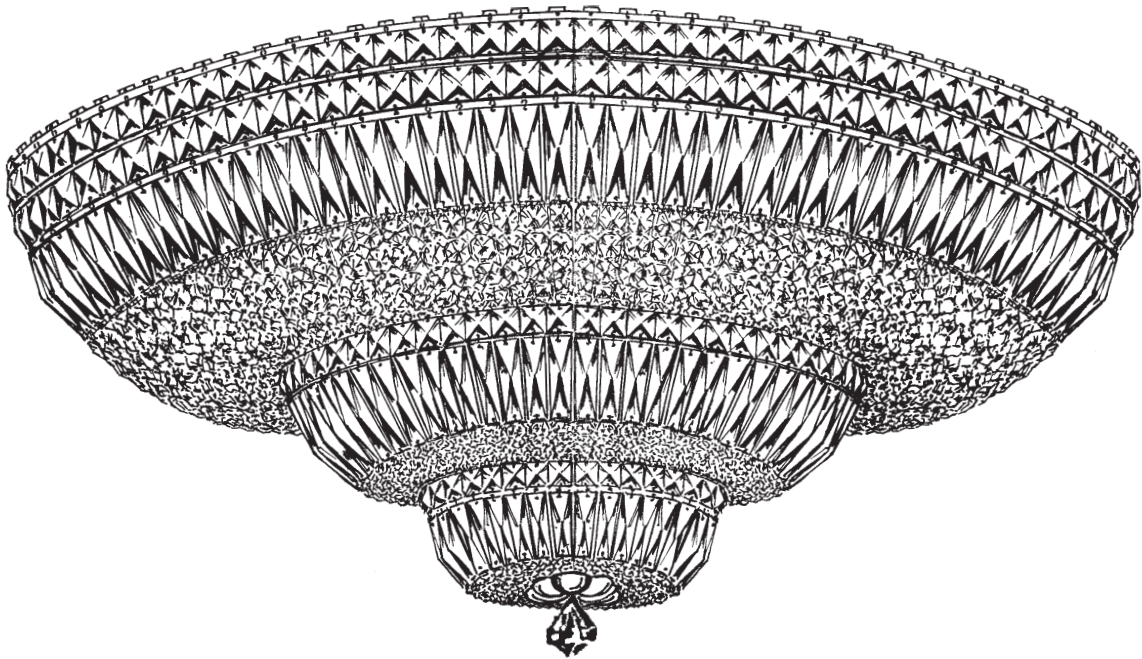

THIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADE MARK OF  
SCHONBEK WORLDWIDE LIGHTING INC.

21 Lights  
Diameter: 30-1/2"  
Body Length: 15-1/2"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.


HANGING WEIGHT: 49 pounds.  
BULBS: (21) Round shaped candelabra base G16-1/2 bulbs, recommend 25 watts for best appearance.  
40 - Watts Maximum  
MIN 90°C SUPPLY CONDUCTORS

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

IMPORTANT

Please record the following information for future service.

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.

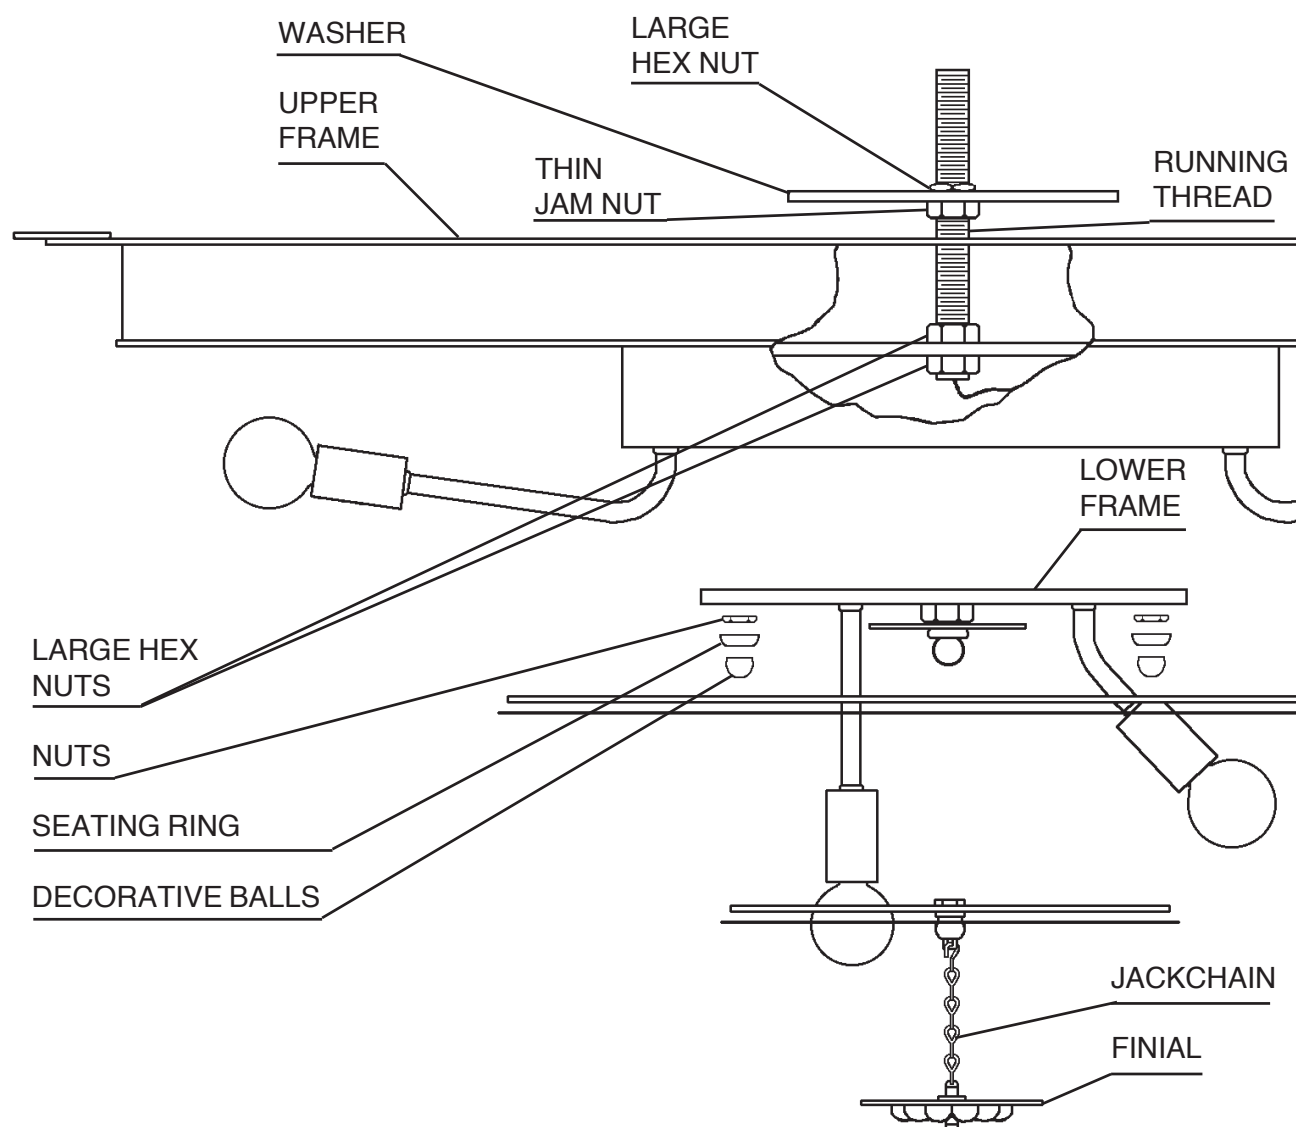

**1 MAKE SURE POWER IS DISCONNECTED!!**

**2** Attach washer to supporting member in ceiling sufficient to support weight of fixture.

**3** Install upper frame assembly up over running thread to fit snugly against the washer and secure with large hex nut.

**4** Again, make sure that power is disconnected. Connect power wires in ceiling. Fixture **MUST** be grounded.

**5** Attach lower frame assembly to upper frame assembly with nuts. Cover nuts with seating ring and decorative balls.

**6** Install bulbs, connect power and test fixture before trimming.

**7** Attach finial assembly from half ball with metal jackchain. The finial assembly should hang freely from the metal jackchain.

## MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

**UNDER NO CIRCUMSTANCES  
SHOULD METAL POLISHES, CLEANERS,  
ABRASIVES OR AEROSOL SPRAYS  
BE USED.**

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

## IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

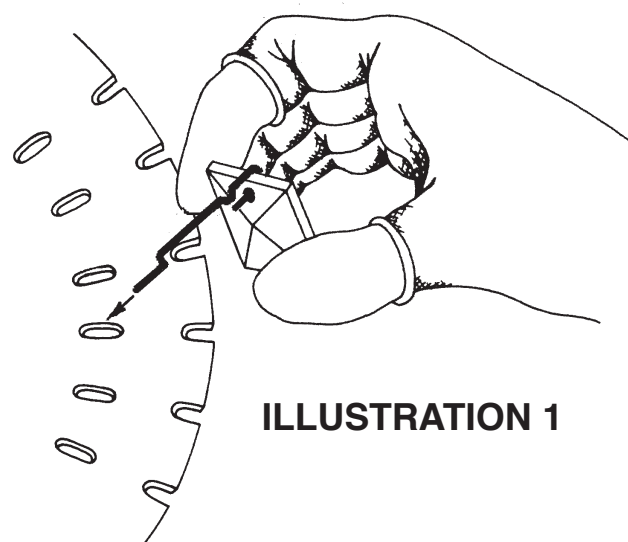


ILLUSTRATION 1

STEP 1: Reminder: Hang upper gallery Chains "A" FIRST! Hook all Crystal Chains "B" into slots in the mirror plate so the metal accessories face outwards and the square jewel is on the upper end. See illustrations #1 - #3. NOTE: Allow ends with small jewels to hang loose. Proceed to Step #10 on trim diagram on page 4 and 5.

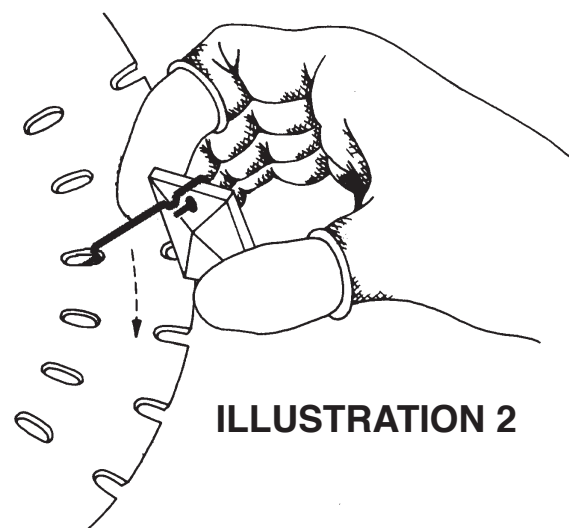


ILLUSTRATION 2


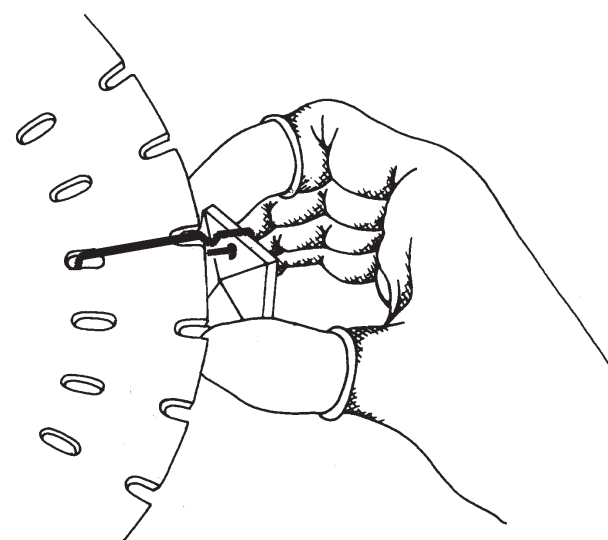



ILLUSTRATION 3

STEP 2: Hook all Crystal Chains "C" into slots in the mirror plate so the metal accessories face outwards and the square jewel is on the upper end. See illustrations #1 - #3. NOTE: Allow ends with small jewels to hang loose. Proceed to Step #11 on trim diagram on page 4 and 5.

## INSTALLATION OF CHAINS "B" & "C"

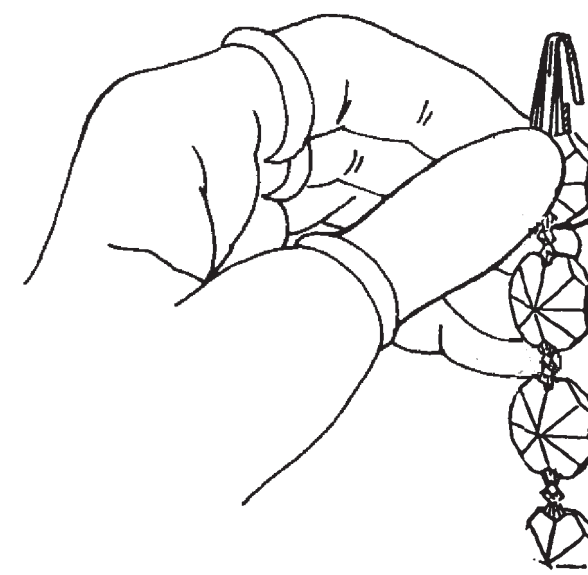

**8** Perspiration or oil from fingers will smear the crystals, causing a loss of brilliance. ALWAYS USE FINGER COTS PROVIDED WHEN HANDLING CRYSTALS. Cots should be used on thumb, index and middle fingers of each hand.

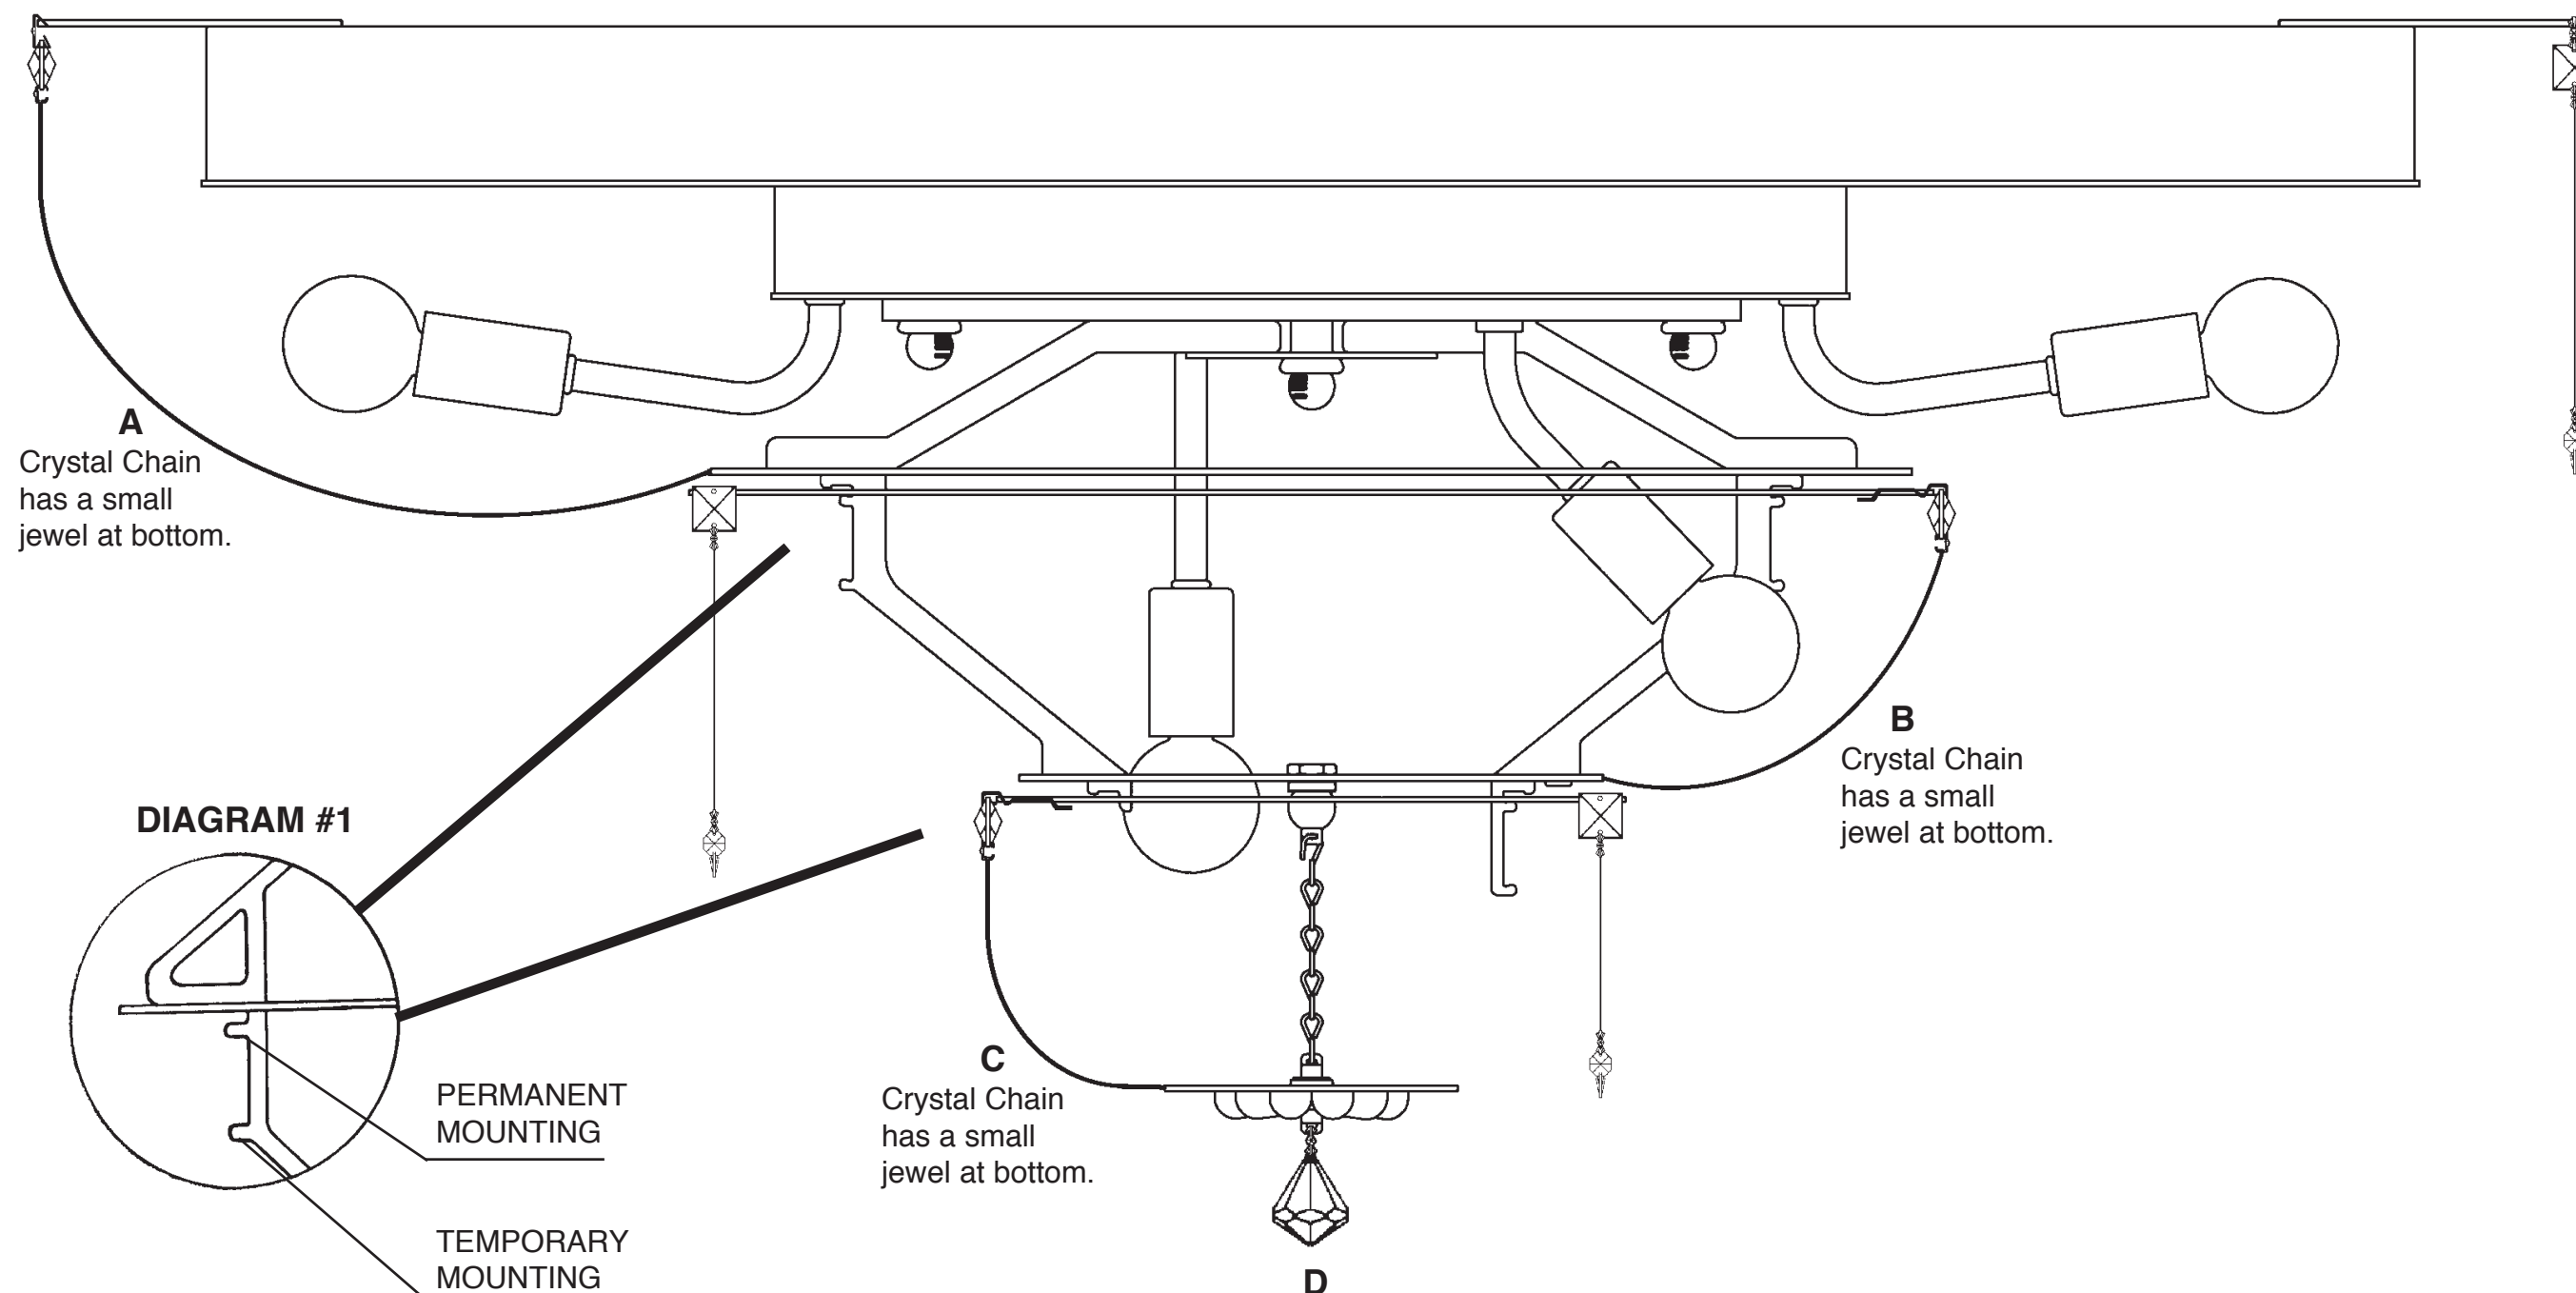

**9** Hang upper mirror Chains "A" FIRST. Hook all Chains "A" into holes in the outer ring so that the metal accessories face outwards and square jewel is on the upper end. Hook the loose end of Crystal Chains "A" with small jewels into holes of solid mounted metal ring.

**10** Hook all Chains "B" in the middle mirror plate (resting on temporary mounting) so that the metal accessories face outwards and square jewel is on the upper end. (See page 6 for detailed instructions). Align notches in middle mirror plate with the permanent mounting, raise mirror plate over permanent mounting, then turn until notches are halfway between permanent mounting. (See Diagram #1). Hook loose ends of Chains "B" into solid mounted metal ring.

**11** Hook all Chains "C" in the lower mirror plate (resting on temporary mounting) so that the metal accessories face outwards and square jewel is on the upper end. (See page 6 for detailed instructions). Align notches in lower mirror plate with the permanent mounting, raise mirror plate over permanent mounting, then turn until notches are halfway between permanent mounting. (See Diagram #1). Hook loose ends of Chains "C" into finial.

**12** Hook prism "D" into fitting below finial.