


# QUANTUM 2288A TRIM DIAGRAM

**T** HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADE MARK OF  
SCHONBEK WORLDWIDE LIGHTING INC.

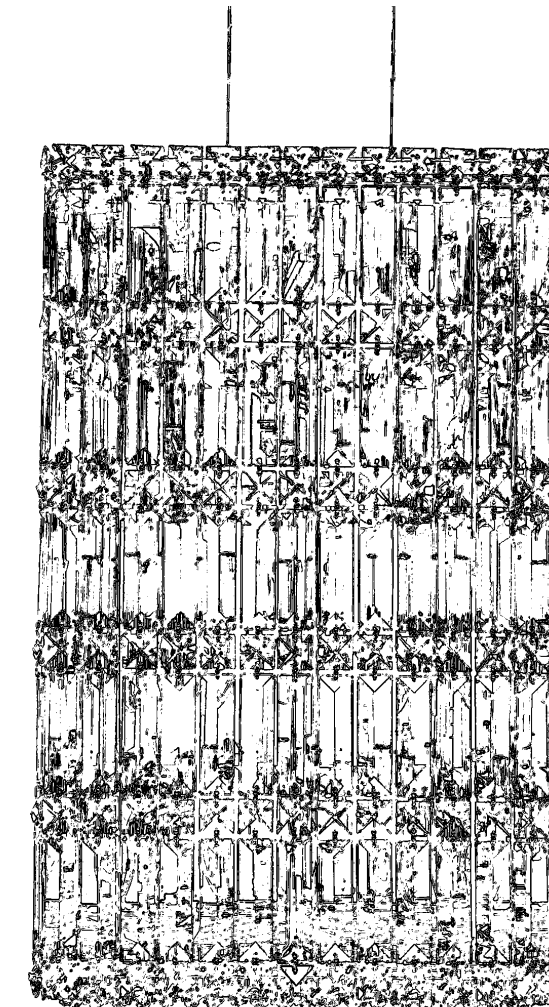

21 Lights  
Length: 13"  
Width: 13"  
Height: 21"  
Hanging Weight: 37 lbs.

## SCHONBEK®

**See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference**

**1**


### IMPORTANT

**Person who opens carton should record the following information for future service.**

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:  
#5,144,541, #5,222,805 & #5,460,269

## Instructions for electrician STEP 2

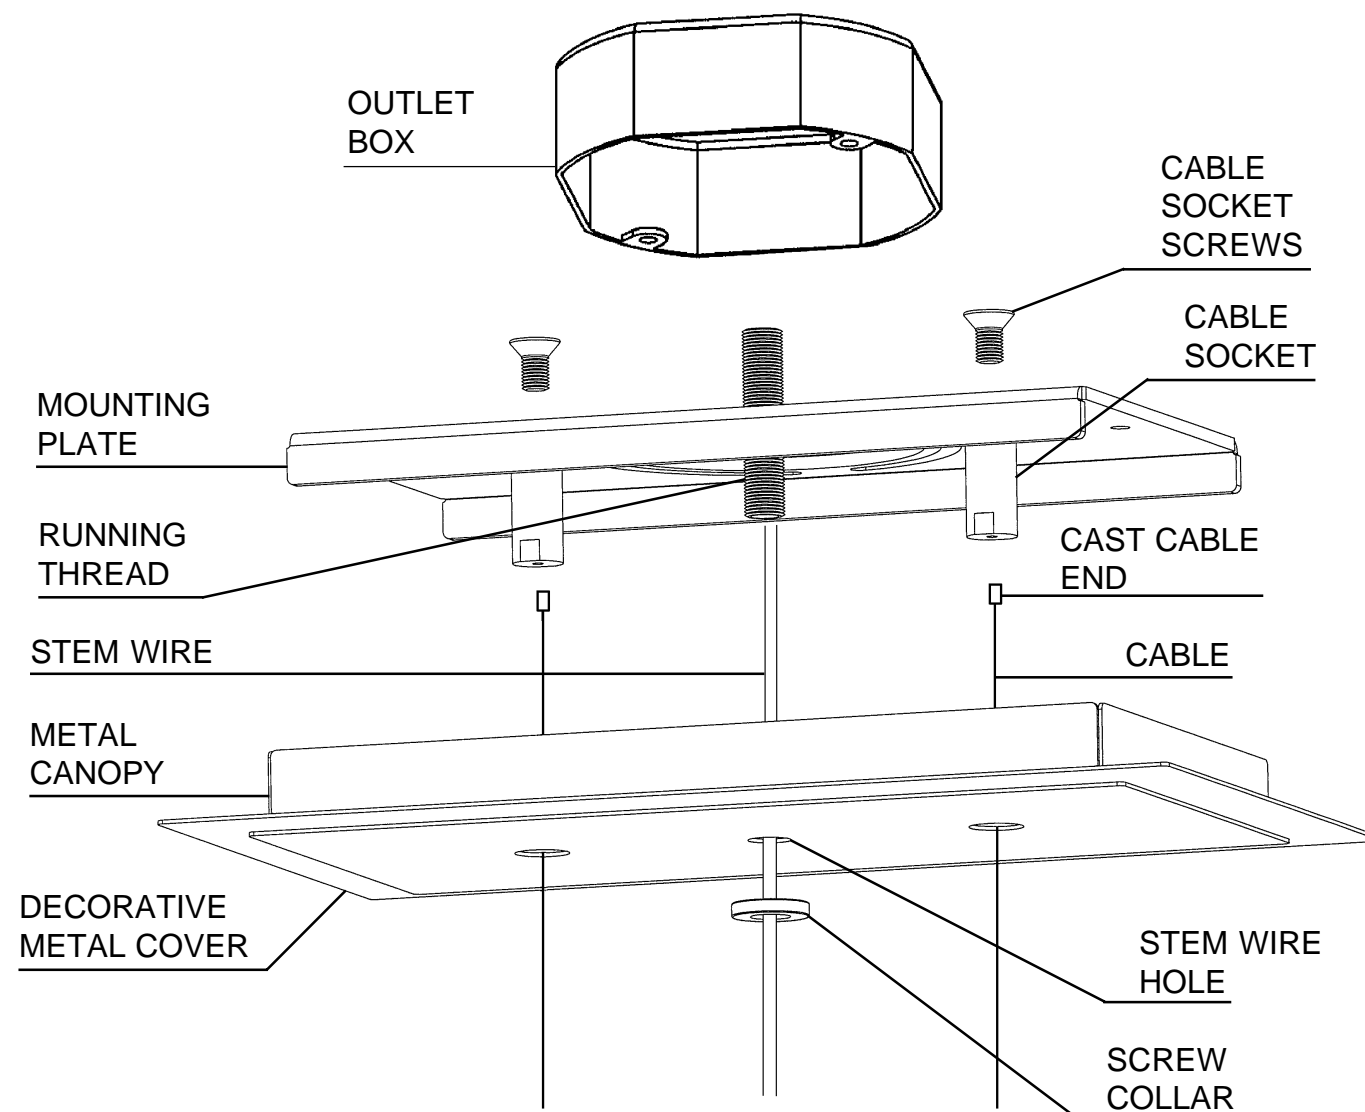

**2** Remove the screw collar, decorative metal cover and metal canopy from the canopy assembly. Remove cable socket screws from top of mounting plate so that you can feed suspension cables through the cable sockets from the top. The cast cable ends are seated in the inside of the cable socket. Assemble cable sockets with cables installed onto the bottom of the mounting plate with the cable socket screws securely. Attach mounting plate to the outlet box with cables hanging down. Feed suspension cables through the two holes on the metal canopy and decorative metal cover. The metal canopy must be on top of the decorative metal cover. Feed cable into cable glider on chandelier frame and hang at desired height. Slide cables into gliders and allow them to play out of the side of the cable gliders. To adjust height, depress the cable grippers until the cable is released to move the frame up and down the cable. Feed stem wire through screw collar, stem wire hole in decorative metal cover and metal canopy. When chandelier is at desired height, trim stem wire and connect ground wire (marked with green tracer) and power wires (black or white tracers) in outlet box. Raise metal canopy and decorative metal cover to ceiling and secure to running thread with the screw collar. Cut suspension cables with cable cutters leaving about 1/2" protruding from the side of the cable gliders.




Instructions for crystal trimming  
STEPS 3 - 5

3



You will need 21 - B8  
40 Watts Max  
25 Watts recommended  
(Supplied - Schonbek #: 30025)

Install bulbs and be sure to test  
fixture **BEFORE** trimming.

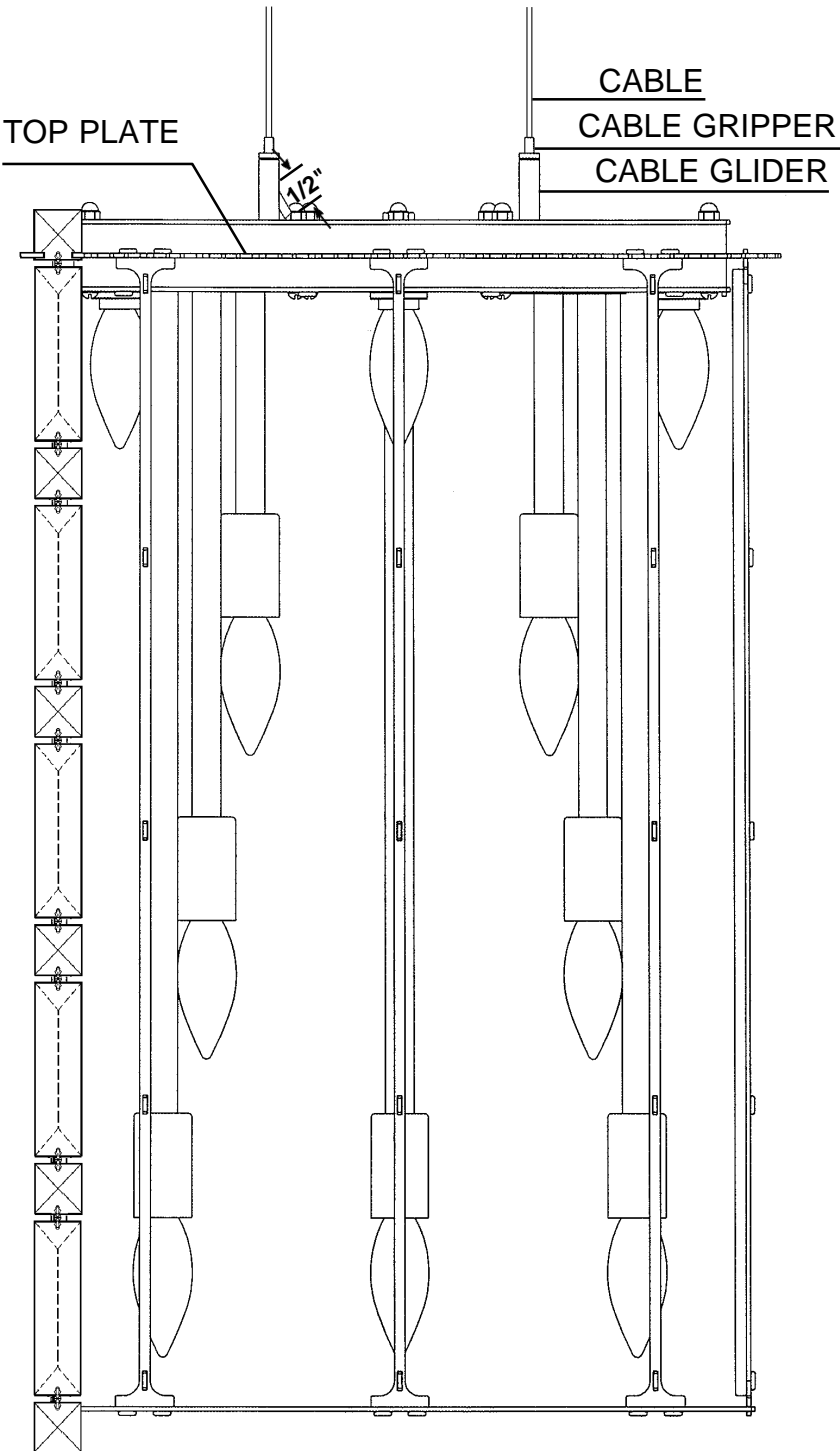

**4** Install bottom crystal grid with twelve thumb nuts (already  
screwed onto grid) to bottom of the chandelier.

**5** Hold chain "E" by the top square crystal. (NOTE: Flat side of  
large crystals face out and chains are also symmetrical so  
either end will work!) Insert bottom square crystal into the  
pocket of bottom crystal grid. Then position the top connector  
(between the top two crystals) into the top plate pocket opening  
directly above the bottom crystal grid pocket. (Diagram #1)  
Lower the chain until the top square stone seats itself into the  
top plate pocket. When the chain is installed correctly, it will be  
held in place by both top and bottom pockets.

DIAGRAM  
#1

