

SAFETY INFORMATION

Released Date: 2021-11-01

Please read and understand this entire manual before attempting to assemble, install or operate the product.


WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- RISK OF FIRE - Use bulbs specified by the markings and/or labels on the fixture.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Turn off electricity to fixture before replacing the bulb(s).

TOOLS REQUIRED

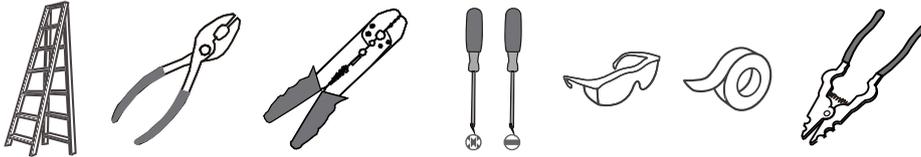


CARE AND MAINTENANCE


- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quozel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quezel.com.

PACKAGE CONTENTS

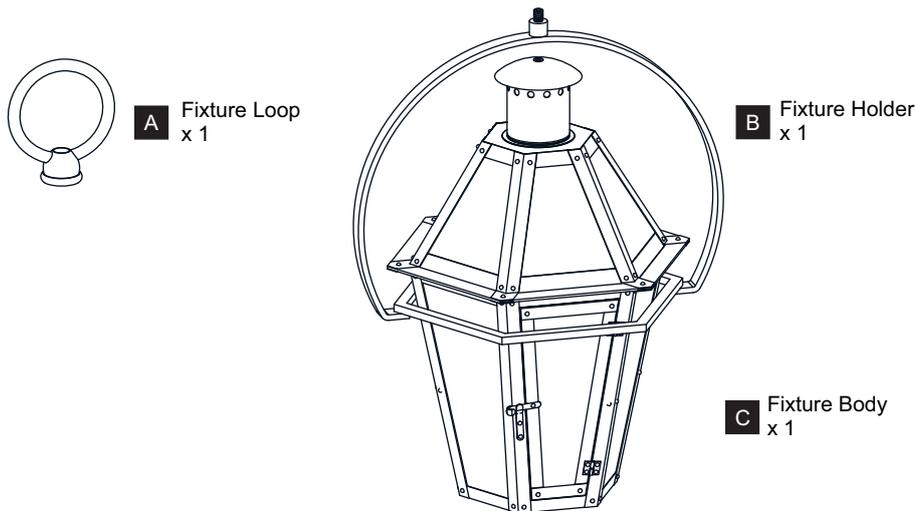


MOUNTING HARDWARE

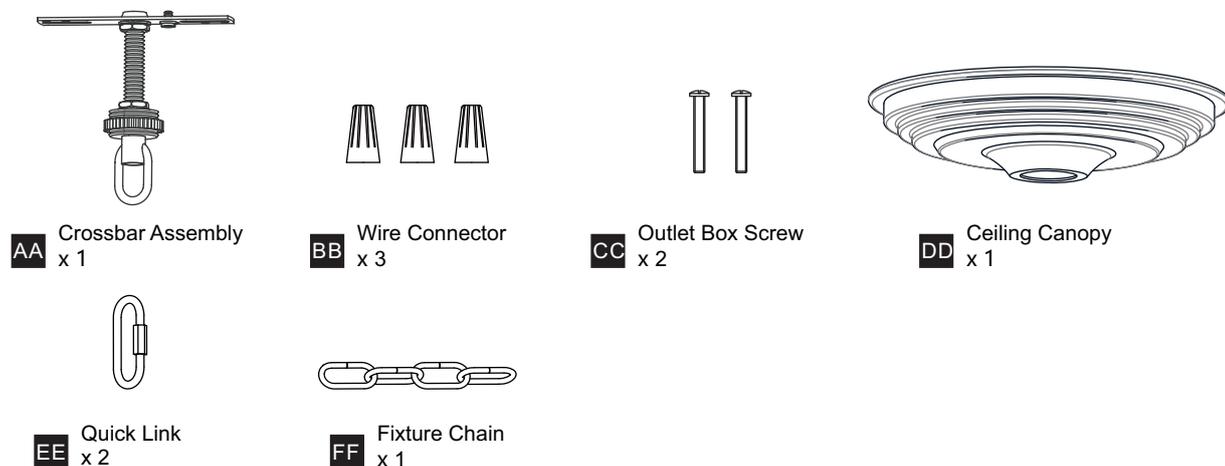


INSTALLATION


1 Install Fixture Loop

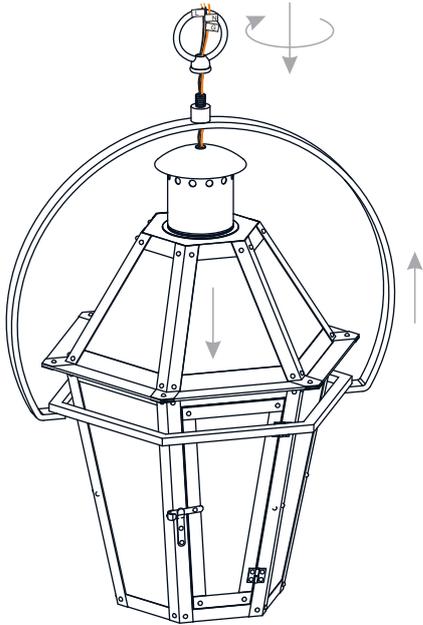

2 Install Crossbar Assembly

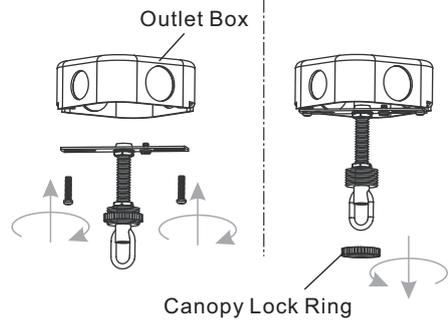


3 Install Fixture Chain

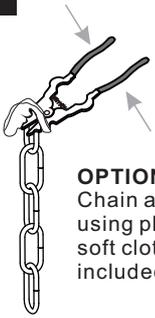

OPTIONAL: Adjust Chain as desired, using pliers and soft cloth (neither included).

Suggested chain length for Ceiling height:
8 feet ceiling: use 1 link of chain and 2 quick links
9 feet ceiling: use 11 links of chain and 2 quick links
10 feet ceiling: use 21 links of chain and 2 quick links.

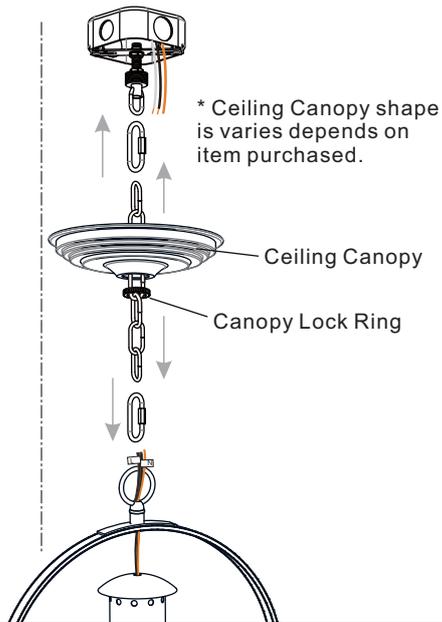


* Ceiling Canopy shape is varies depends on item purchased.

Ceiling Canopy
Canopy Lock Ring

4 Pull Supply Wires

Pull the supply wires with ground wire through the chain alternate links.

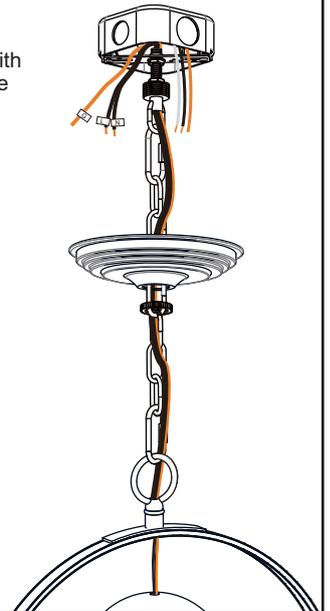

5 Wiring



White wire from supply

Ribbed side of wire from fixture identified with the label "N"

Black (or red) wire from supply



Smooth side of wire from fixture identified with the label "L"


Ground wire from supply



Green ground wire

Ground wire from fixture identified with the label "G"

6 Install Ceiling Canopy

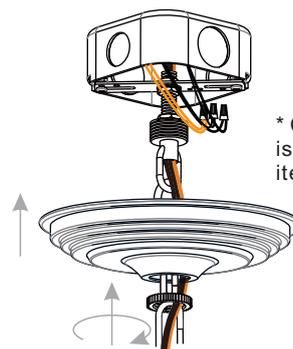


* Ceiling Canopy shape is varies depends on item purchased.

INSTALLATION

7 Remove Papers inside of the Cage

Remove door bolt
from bolt holder


Open the door and
remove paper inside

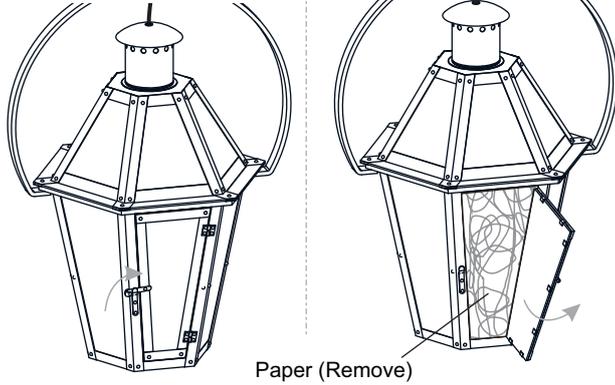

8 Install Bulbs

Install two correct bulbs referring to
fixture markings and/or labels for
maximum wattage.


**Recommended Bulb Type (not
included):**

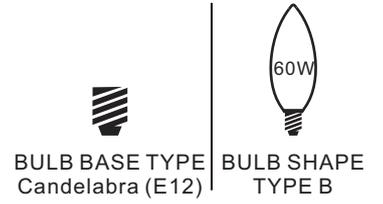

9 Close the Door

Close the door

Place door bolt back
onto bolt holder

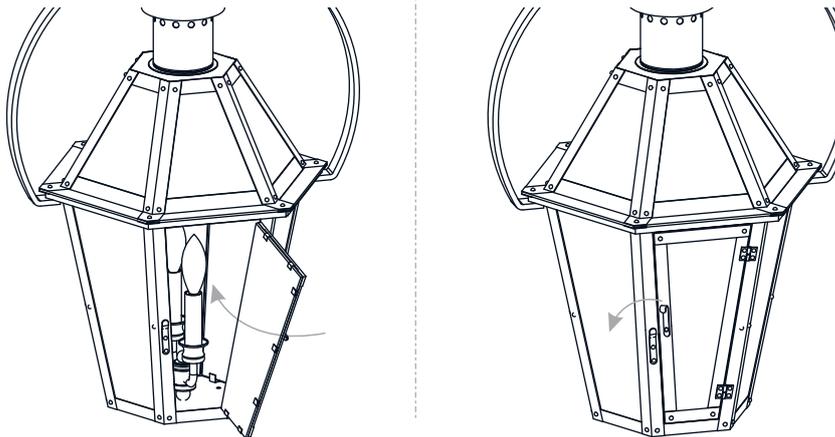

Your installation is now complete! Restore electricity and save this sheet for future reference.