

ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0331 / T0332

WARNING: Turn off the main power at circuit breaker before installing fixture. AVERTISSEMENT: Coupez la source d'alimentation principale au panneau central de disjoncteurs avant d'installer le luminaire.

- NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
 - 2. Read and save these instructions.

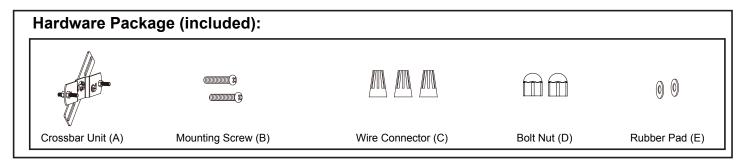

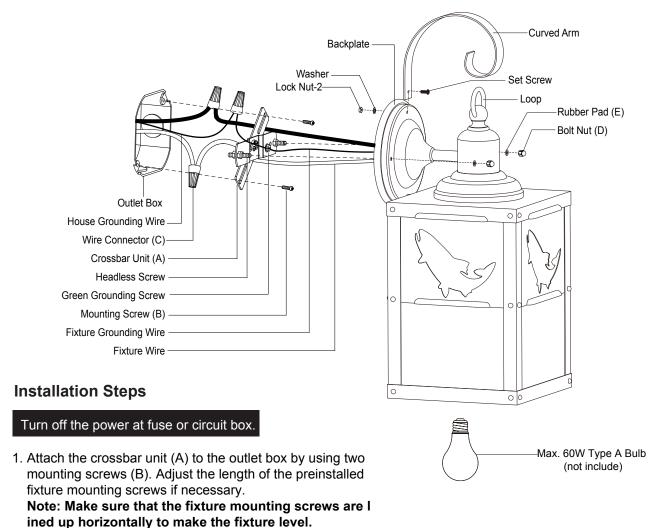

- 2. Unscrew the set screw, lock nut-2 and washer from the curved arm.
- 3. Hook the curved arm to the loop, and then attach the curved arm to the back plate by using the set screw, washer and lock nut-2.



- 4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - ---Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - ---Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - ---Attach the fixture ground wire (bare wire) to the crossbar unit (A)with the green ground screw, then connect it to the house grounding wire with the wire connector (C).

Carefully put the wires back into the outlet box.


5. Attach the backplate to the crossbar unit (A) by inserting two headless screws, and then secure it with two rubber pads (E) and two bolt nuts (D) .


NOTE: With silicone caulking compound, caulk completely around where the back plate meets with the wall surface to prevent water from seeping into the outlet box.

6. Install the bulb (not included). Check relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box

The following parts are available for reorder if damaged or missing.

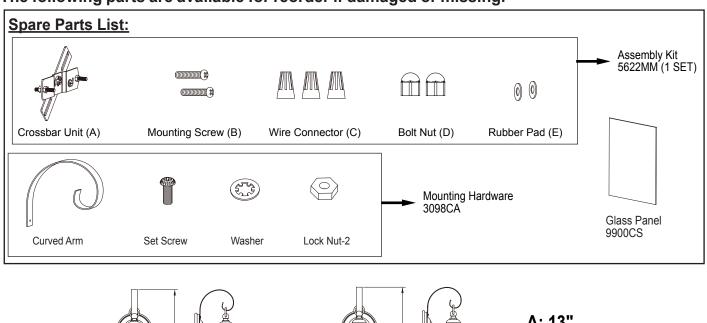

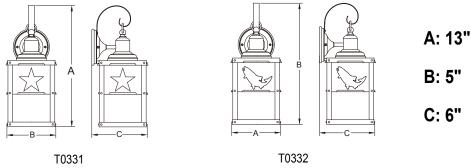

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained? info@vaxcel.com 1-800-482-9235

