

Item Number: A03523

WARNING (To reduce the risk of fire, electric shock, or injury to persons):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done. A). Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position. B). Place the wall switch in the "**OFF**" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all side. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before fixture.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **40W** per bulb.
- 7. Keep the lamp away from acidic and basic objects in case of damaging the surface of the lamp.
- 8. When replacing bulb, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

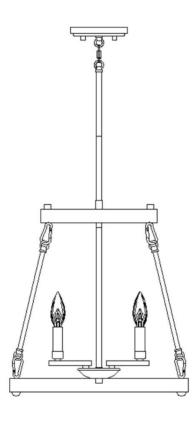

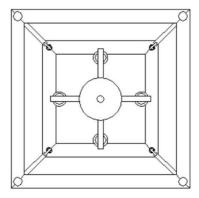

TOOLS REQUIRED (NOT INCLUDED):

Before doing assembly and installation please prepare the needed tools as below picture


		\bigcirc		
Ladder	Phillips head, flat blade screwdriver	Electrical tape	Pliers	Wire cutter/Stripper

PARTS TYPE & QTY INCLUDING:

(A) Round mounting plate (1)
(B) Green ground screw (1)
(E) Canopy (1)
(F) Quick link (9)
(G) loop (18)
(H) Ball nut (2)
(I) Upper ring (1)
(J) Stem assembly (1)
(K)Arm (4)
(L) Lower ring (1)
(M) Tube (6)
(N)Coupler (2)

ACCESSORIES & QTY ENCLOSED:

- (C) Plastic wire connector (3)
- (D) Mounting screw (2)

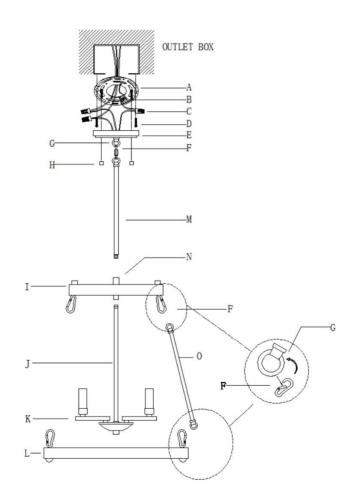

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power

Before you start to make installation, NEVER attempt any work without shutting off the electricity until the work is done. A). Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position. B). Place the wall switch in the "OFF" position. 3. Unscrew the ball nuts(H)from canopy (E) then remove the mounting plate (A)


 Thread the stem assembly onto the coupler until tight , then adjust the arms (K) to their proper positions .


Open quick link (F) to connect the loops on the upper ring and arm (O). Close quick link (F).


Open quick link (F) to connect the loops on the lower ring and arm (O). Close quick link (F).


 According your desired hanging length to choose and use the tubes (M). Pass wires through the chosen tubes(M) ,loop (G)and canopy (E). Screw the tubes(M) onto the coupler (N) until tight . then attach a quick link (F) to connect the canopy (E) and tube (M) together.

Attach the mounting plate(A) to outlet box with the mounting screws (D)
 Pass the outlet box wires through the center hole of mounting plate (A)

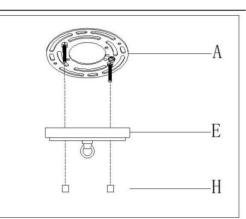

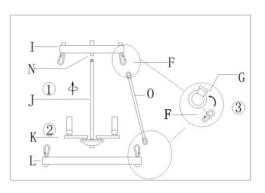

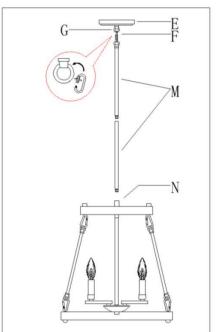

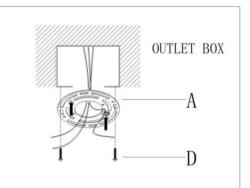


6. Make wire connections

SCREW

Connect wires as below wires connecting shown. TAKE NOTE OF YOUR COLOR OF FIXTURE ,NEVER CONNECT

WIRES TO GROUND WIRES

Connect ground wire according to below chart

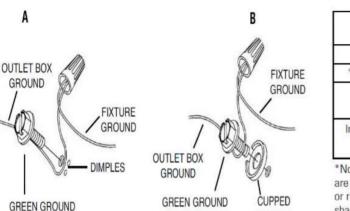

SCREW


Connect wires according to below chart

Connect White Supply Wire to:	
White	
*Parallel cord (square & ridged)	
Clear, Brown, Gold or Black with tracer	
Insulated wire (other than green) with silver conductor	
SPT II) shaped bund in	


Twist plastic wire connector until wires are tightly joined together, wrap each connector with approved electrical tape. Be sure that no wire strands are exposed and then carefully tuck all wires into the outlet box.

WASHER

 Raise canopy (E) to ceiling and secure canopy (E) in place by tightening ball nuts (H) onto the threaded nipple on mounting plate (A).

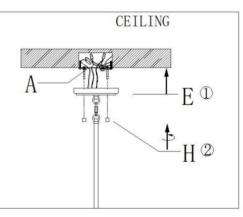

 Install bulb (not included) (Please do not exceed the maximum capacity recommended on the socket.)

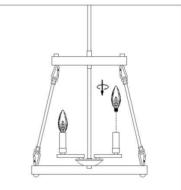

9. Check everything is already installed properly, then you could turn on the light. Enjoy!

CLEANING

To clean, wipe fixture with a soft cloth. Clean glass with a mild soap. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

ORDERING PARTS

Keep this sheet for future reference, and in case you need to order replacement parts. All parts for this fixture can be ordered from place of purchase. Be sure to use exact wording from illustration when ordering parts.