




LUX ERGONOMIC EXECUTIVE CHAIR

MODEL RTA-1818C

ASSEMBLY INSTRUCTIONS

REV-MF-2-8062-0424

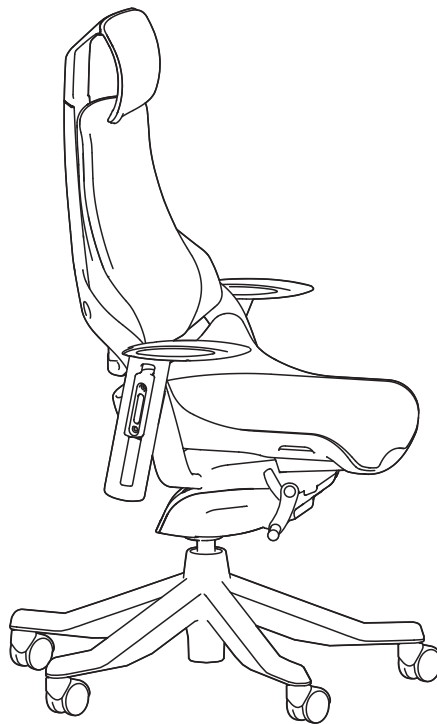

Thank you for purchasing our product



RTA
PRODUCTS • LLC


<p>Do a quick inventory of all the parts and hardware listed below.</p> 	<p>For Support, assembly questions & Replacement Parts within the 48 Contiguous United States:</p> <p>Please email us at: support@rtaproducts.com</p> 	<p>Replacement Parts for International Customers & AK-HI-PR orders:</p> <p>RTA Products will replace the part free of charge, while <u>the customer is responsible for shipping costs plus any International local taxes or duties.</u></p>
---	---	---

MAIN PARTS LIST

B+ Main sitting unit (*)

* Comes pre-assembled with the following pieces:


- A (Backrest)
- B (Seat)
- D (Mechanism)
- H (Headrest)

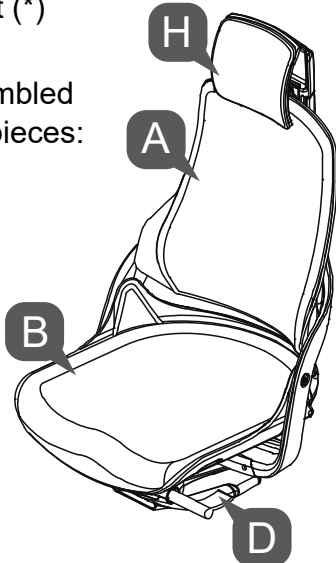


NOTE 1: The Main Unit has a short screw and plastic ring on each side that will be removed and discarded during the assembly.

NOTE 2: Any component of the Main Unit can be removed and replaced individually.


C 5-Leg star base




E 100mm Lift cylinder



F Casters Qty 5

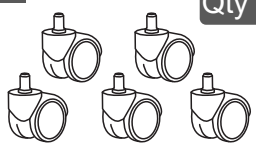


G-L Left armrest

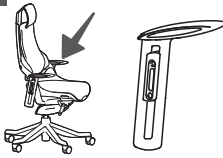

NOTE 1: Its location on the chair will be on your **LEFT** when you are sitting on the chair, not looking at it.

NOTE 2: It comes with 2 screws attached; they will be used during assembly, do not remove them or loose them.

G-R Right armrest

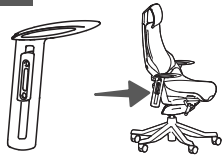



NOTE 1: Its location on the chair will be on your **RIGHT** when you are sitting on the chair, not looking at it.

NOTE 2: It comes with 2 screws attached; they will be used during assembly, do not remove them or loose them.



INCLUDED TOOLS

M5 Allen Wrench





If you decide to use your own power driver:

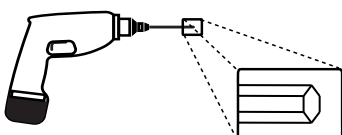

- Make sure to have the appropriate bits.
- Start using at a low power or speed to avoid stripping the screws.


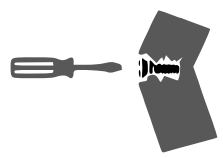
IMPORTANT NOTES



- Do not discard this manual or any of the packaging material until the unit is completely assembled.

- Read the assembly instructions thoroughly and follow them step by step.





- Do not overtighten or force the screws as they might break, strip, damage the threads of the holes, or get stuck inside the parts.

ASSEMBLY STEPS


STEP 1

• FIRST attach the casters F to the legs of the base C using pressure.

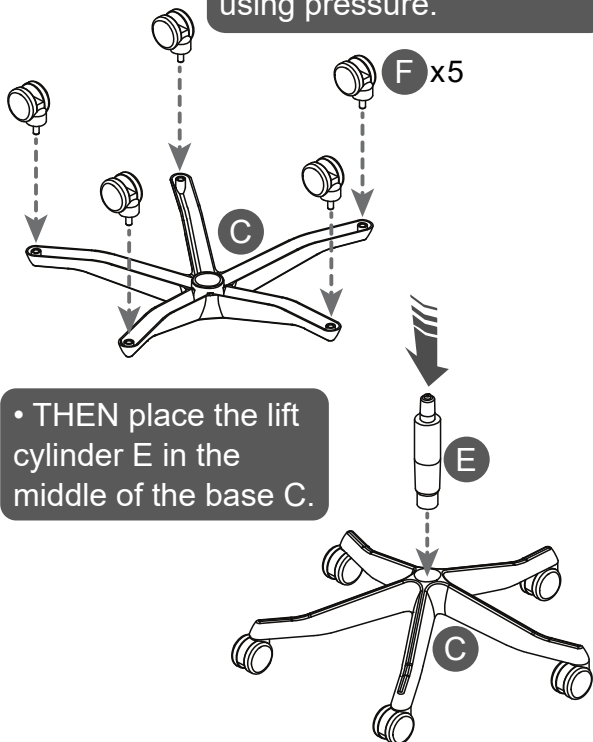

STEP 2

Place the seat B over the base so the lift cylinder E enters into the big hole of the mechanism D.


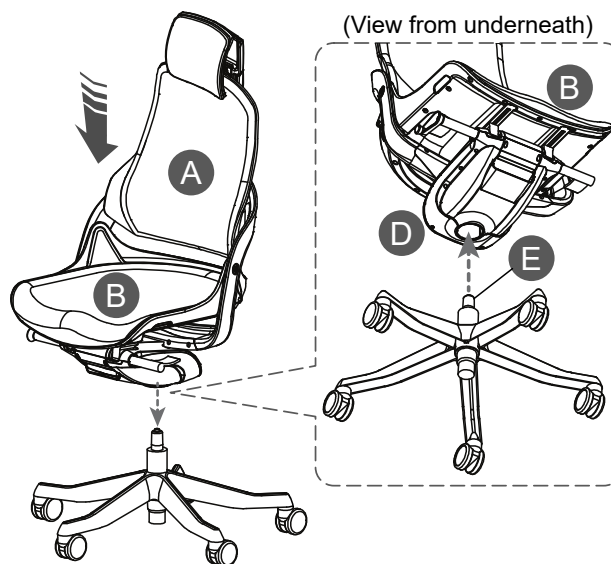


STEP 3

Tools (Included)

M5

Remove and discard the short retainer screw and plastic ring from both sides of the main unit.

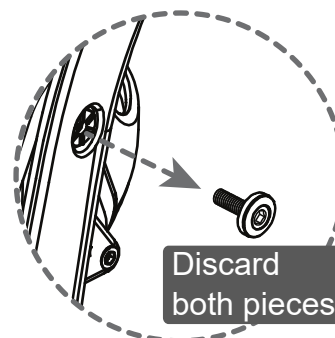
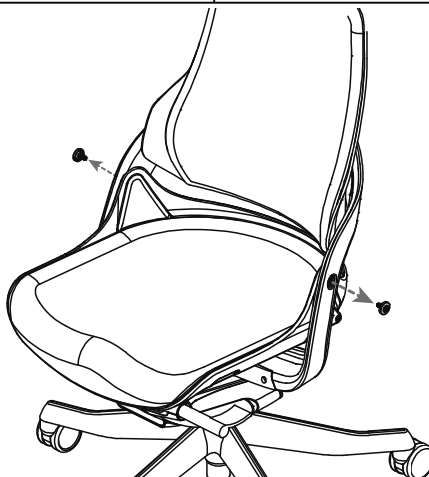


STEP 4

Tools (Included)

M5

Attach the armrests G-L, G-R to the main unit on their respective sides using the same screws that come in them.


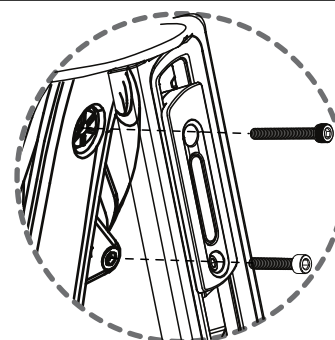
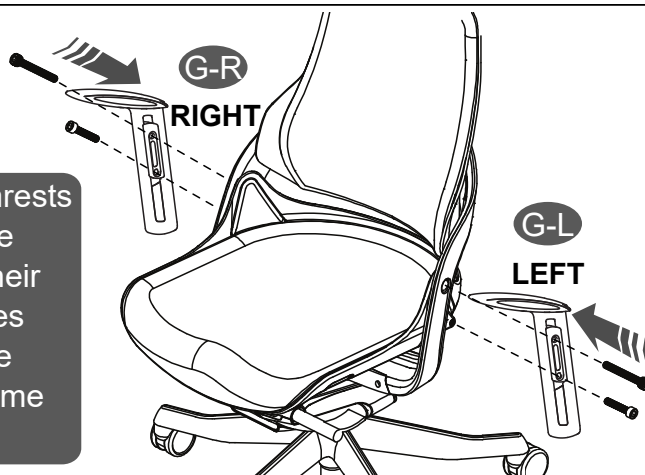


Top screw: M6x45mm.




Bottom screw: M6x30mm.

CHAIR'S FUNCTION: ADJUSTABLE HEIGHTSCAN QR to
view video

Pull UP the lever that is on the RIGHT side under the seat. The chair goes down while you are sitting on it, or UP if you lift your body.

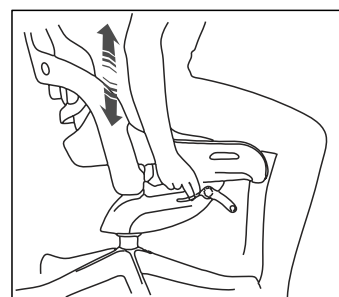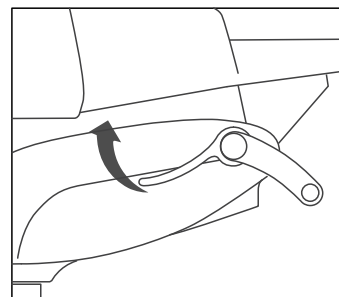
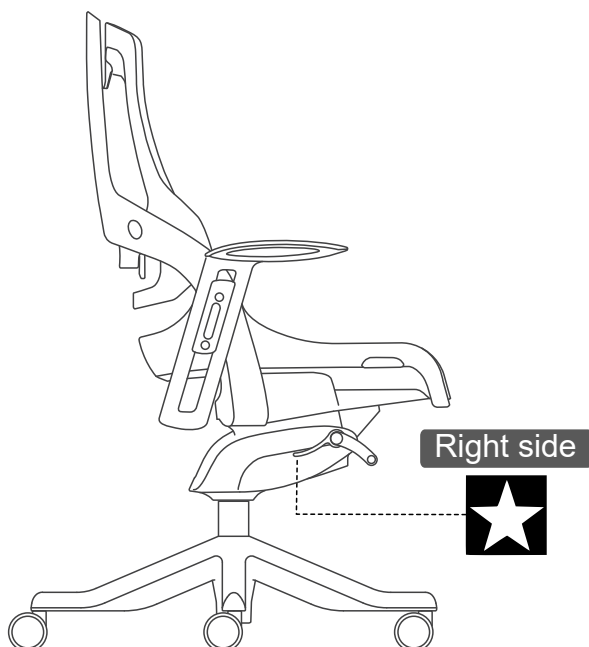
**CHAIR'S FUNCTION: BACKREST RECLINING**SCAN QR to
view video

This function allows the backrest to recline freely, or to lock it at a specific angle. Pull UP the lever that is on the LEFT side under the seat to UNLOCK for free reclining of the backrest. Push the same lever DOWN to LOCK into any desired angle. To UNLOCK and return to the upright position, lift the handle and recline your back just a little bit, you will hear the unlocking sound.

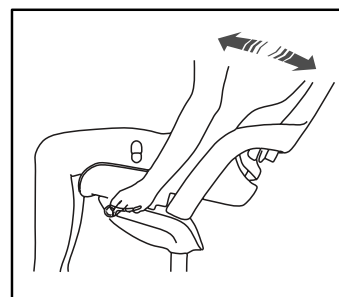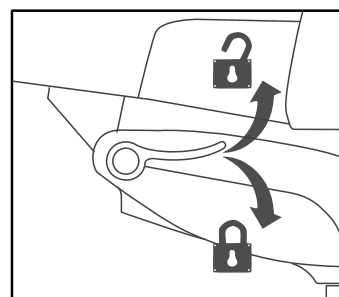
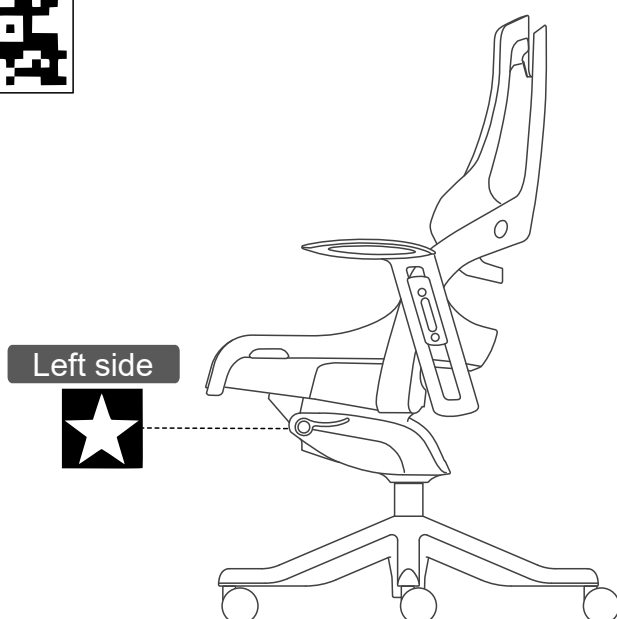


CHAIR'S FUNCTION: RECLINING TENSIONSCAN QR to
view video

This function allows to control the tension of the backrest reclining. Turn the rotating handle that is on the **RIGHT** side of the seat **CLOCKWISE** to apply more tension, or **COUNTER-CLOCKWISE** to apply less tension. With less tension, the reclining will feel easier.

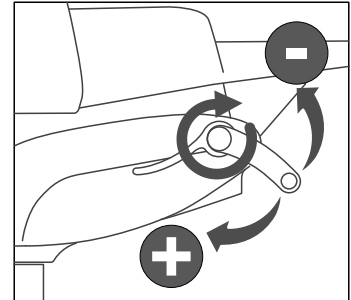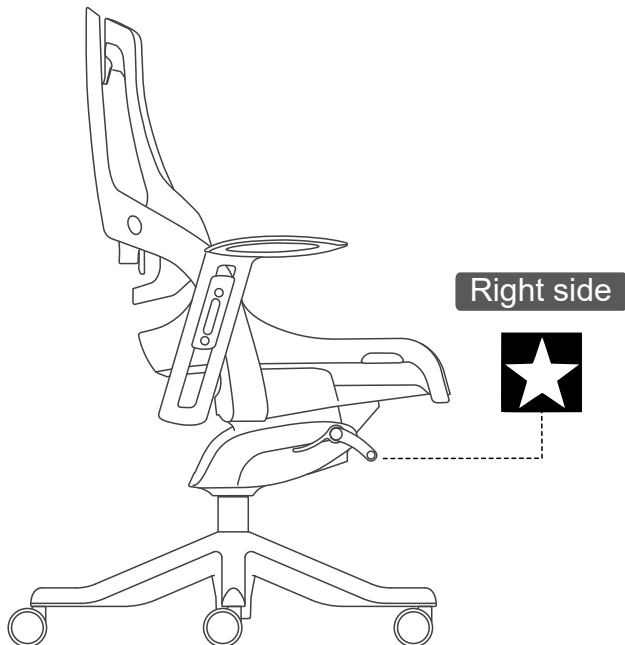**CHAIR'S FUNCTION: BACKREST HEIGHT**SCAN QR to
view video



To adjust the height of the backrest, from behind the chair push the backrest forward at the top and lift or lower the piece at the same time.

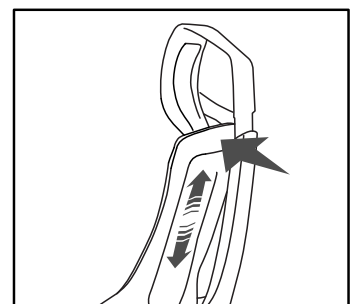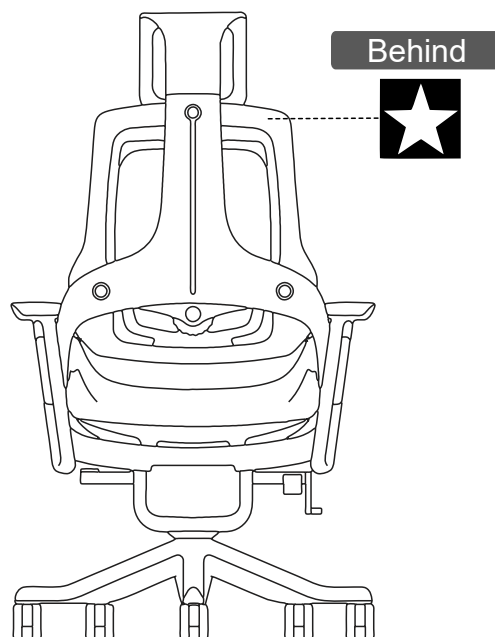


CHAIR'S FUNCTION: LUMBAR SUPPORTSCAN QR to
view video

Turn the knob located behind the backrest to adjust the depth of the lumbar support.

- Turn clockwise to move it forward (more support).
- Turn counter-clockwise to move it backwards (less support).

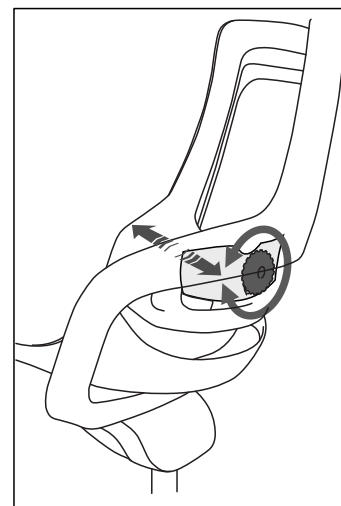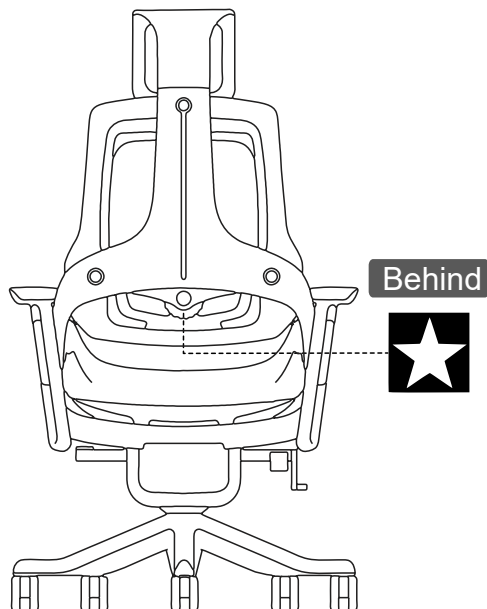**CHAIR'S FUNCTION: HEADREST HEIGHT**SCAN QR to
view video


While sitting on the chair, grab the headrest and pull it FORWARD, and move it UP or DOWN at the same time.

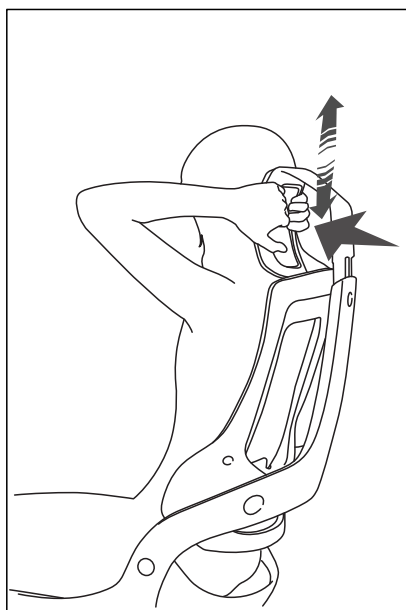


CHAIR'S FUNCTION: ARMRESTS HEIGHT AND SWIVELSCAN QR to
view video

Grab and pull the armrests UP and move them UP or DOWN at the same time.


Right side

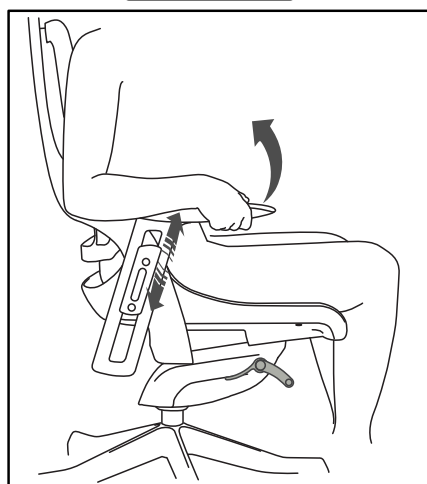


Left side

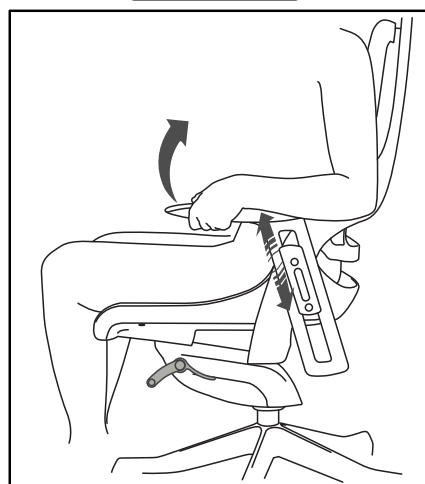


You can also swivel the armrest INWARDS or OUTWARDS as you prefer.

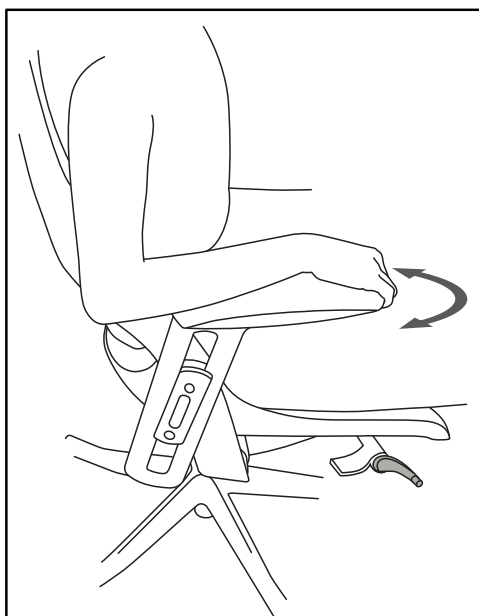


(View from above)

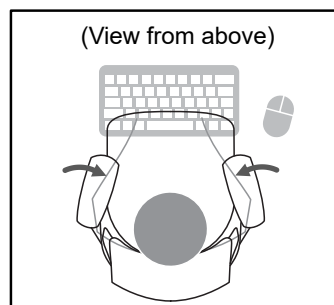

(View from above)

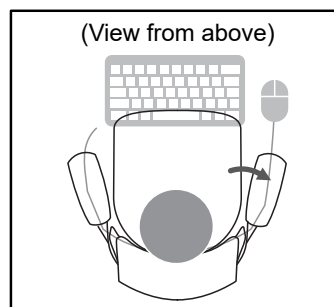

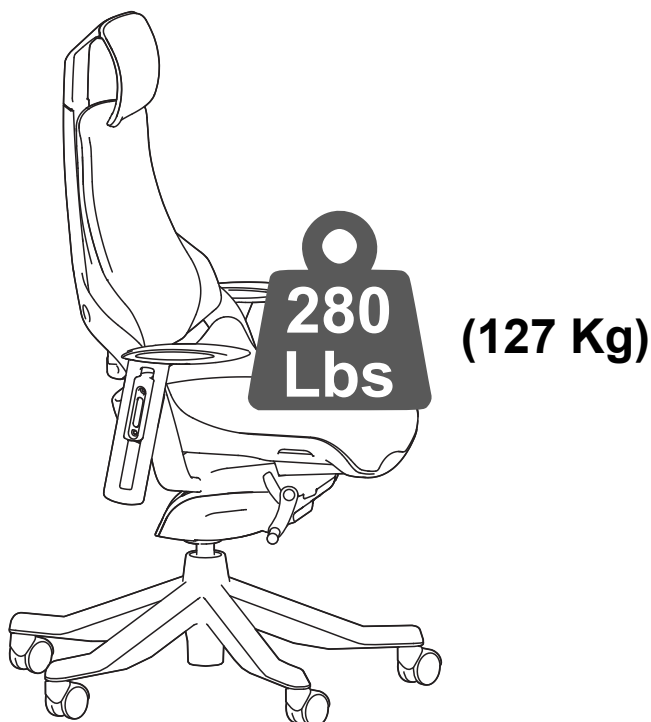WEIGHT LIMIT**WARNINGS**

- Do not exceed the indicated weight limit.
- Do not use if parts are bent, damaged, or if screws are loose or missing.
- Only one person at a time can sit on the chair.
- Do not sit babies or toddlers alone.
- If children (3 years and older) are sitting on the chair, always keep close observation on them.
- Do not allow small children to play with the chair.
- Do not stand up on the chair or use it as ladder.
- Do not sit too close to the edge of the seat to avoid going beyond your balance point and falling off the chair, and always sit properly.
- Not paying attention to these warnings could result in injuries.

CARE AND MAINTENANCE

- To clean the chair it is recommended to use a soft cloth lightly damped in a solution of smooth soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean any part of the chair.
- Before using a cleaning agent, test on a small hidden area of the chair, like underneath the seat.
- Do not expose the product to direct sunlight or to extreme environmental conditions.
- Inspect the chair completely every 4 months and make sure that all screws are tightened.

TECHNI MOBILI WARRANTY

**EXECUTIVE/MANAGER CHAIR: 2-YEAR WARRANTY**

RTA Products, LLC has warranted the Techni Mobili office chairs to the original purchaser who acquired a new product from RTA Products or its authorized resellers of the product against defects in material or workmanship.

This warranty is expressly limited to the repair or replacement (at its option) of defective chair components or materials that fails under normal use as a result of a defect in materials or workmanship. This warranty is limited to merchandise purchased in the Continental United States, excludes AK, HI and PR. No assembly labor is included. The word "defects" as used in this warranty, is defined as imperfections that impair the utility of the product.

This warranty applies under conditions of normal use, but does not apply to defects that result from intentional damage, negligence, unreasonable use or exposure.

Liability for consequential damages is excluded to the extent exclusion is permitted by law. This warranty gives you specific legal rights, and you may have other rights that vary from State to State.

RTA Products does not warrant: a) natural variations in character marks b) changes in surface finishes due to aging or exposure to light c) marks, scars, or wrinkles occurring naturally in leather d) failure resulting from normal wear and tear e) the matching of colors, grains, or textures of natural materials f) the colorfastness or the matching of textiles, including an exact match to cuttings or to swatch cards g) damage, marking, or staining of veneer surfaces due to contact with rubber or similar compounds, damage from sharp objects or imprinting from writing instruments, or prolonged exposure to direct sunlight h) we do not warrant products that are exposed to extreme environmental conditions or that have been subject to improper storage.

RTA Products shall not be liable for loss of time, inconvenience, commercial loss, or incidental or consequential damages.

Any modification to the original product voids the warranty. We do not warrant the performance of the product when used in combination with other than original products.

This product has been designed for and is intended for office and home-office use only. This warranty is Original Purchaser's sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributed to abuse or misuse, products used for commercial or rental purposes, use modifications of, or attachments to the product, and products or parts not used, maintained, or extended hereunder is in lieu of any and all other warranties, express or implied, including without limitations any implied warranty or merchantability or of fitness for a particular purpose.

To file a Claim within the 48 contiguous United States: Email us to warranty@rtaproducts.com to explain the defect and provide your name, address, phone number, model number of our product, date and place, and proof of purchase. Please provide pictures of the damage or defect.

If we determine that a replacement will remedy the situation, and in order to determine the extent or the cause of the defect, purchaser may be requested to send the part in question at purchaser's expense. Once we receive the part, we will examine it and determine whether the claim is valid (or not), and then proceed to send the replacement. We will ship the replacement at our expense.

Replacement Parts for International Customers & AK-HI-PR orders: RTA Products will replace the part free of charge, while the customer is responsible for shipping costs plus any International local taxes or duties.