

### Product Warranty Instructions

The after-sale service of a table lamp product is strictly based on the "People's Republic of China Consumer Protection Law", "The People's Republic of China"

The Product Quality Law of the People's Republic of China implements the after-sales three-guarantee service. The services are as follows:

From the next day after you sign for the product, the performance failures listed in the Product Performance Failure Table are detected and determined to enjoy:

1. Within 7 days, you can enjoy free return or exchange service;
2. Within 8 to 15 days, you can enjoy replacement or repair services for free;
3. 12 months, you can enjoy free maintenance service.

### Non-warranty Regulations

1. Unauthorized maintenance, misuse, collision, negligence, abuse, fluid penetration, accident, alteration, or tearing, alteration, icon, anti-counterfeiting mark;
2. The warranty period has been exceeded;
3. Damage caused by force majeure;
4. Does not meet the performance failures listed in the "Product Performance Failure Table"; products and their accessories are produced due to human reasons. The performance failures listed in the Product Performance Failure Table, such as the use of dimmers, non-rated voltages, non-recommended adapters, etc., cause product performance failures.
5. Use in non-prescriptive environments, such as:
  - I . Place the lamp in an unstable place (cannot be used on an inclined surface greater than 6 °)
  - II . Install the lamp on a hot object or in a humid place (Do not install on stoves, gas or exhaust gas, etc. to prevent damage)

Product Performance Failure Table

Name	Performance failure
Main table lamp	The lights are broken
	The main function key of the table lamp is invalid
Adapter	Adapter fails to power desk lamp

### Guarantee Certificate

Customer Name \_\_\_\_\_ (Mr./Ms.) Contact number \_\_\_\_\_

Customer address \_\_\_\_\_ Serial number \_\_\_\_\_

Product Model \_\_\_\_\_ Date of Purchase \_\_\_\_\_

Purchase store \_\_\_\_\_

Store Address \_\_\_\_\_

Invoice number \_\_\_\_\_

### Please read the manual carefully before using the product

CALL : +1-877-977-3732

Executive standard: GB7000.1-2015 / GB7000.204-2008

Manufacturer : Morstar Inc

Address : 12868 Farmington Road Livonia, Michigan 48150 USA


Web: www.crioolighting.com



# MANUAL

## Installation Steps

1. Take out the table lamp and insert the power cord into the power hole of the lamp body;
2. Click the power button to turn on the desk lamp.

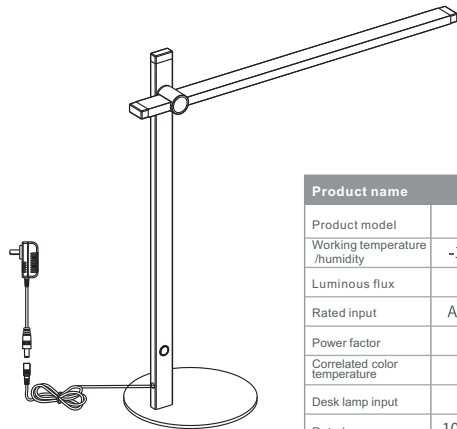


Recommended Height : 40cm

Product name LED desk lamp	
Product model	26T15
Working temperature /humidity	-10°C~ +40°C/0%~85%RH
Luminous flux	500Lm
Rated input	AC100-240V 50/60Hz 0.6A
Power factor	0.5
Correlated color temperature	3000K
Desk lamp input	DC24V / 0.5A
Rated power	10W (60 x 0.2W / LED modules)
Color rendering index	RA≥95

## Instructions

- 1.Touch the touch switch to turn on the desk lamp;
- 2.When the desk lamp is on, the brightness of the main lamp changes from the current state every time it is touched.The sequence of <15% --- 50% --- 100% --- off> switches back one gear in turn,Multiple touches follow this cycle, and the brightness is switched without buffering;
- 3.The lamp is off when the power is first applied;
- 4.The lamp has a power-off memory function, such as when the power is off or unplugged, the lamp is in the brightest state,After the power is turned on, the lamp is still in the brightest state;

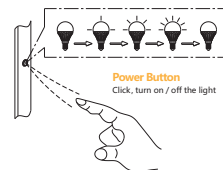

Power Button  
Click, turn on / off the light

## Safety Precautions

1. Make sure that the adapter is an original adapter before use, if you use a non-original adapter, it may damage the product and bring security risks;
2. The led light source module is not replaceable. Do not disassemble the product without permission. When the light source reaches the end of its life, the entire lamp should be replaced;
3. The desk lamp generates heat during work, please keep the surrounding air convection for heat dissipation;
4. It is strictly forbidden to enter the product into water or work under the conditions of exceeding the temperature and humidity;
5. Don't put your fingers between the light arm connecting rods when adjusting the angle, so as not to hurt your fingers.

## Features



No Blue ray



High color rendering index



Flicker free



Brightness adjustment



light biological safety



Comfortable color temperature

## Name and content of harmful substances in products

Part Name	Harmful Substance					
	(Pb)	(Hg)	(Cd)	(Cr (VI) )	(PBB)	(PBDE)
Plastic parts	O	O	O	O	O	O
Circuit board components	X	O	O	O	O	O
Wire	O	O	O	O	O	O
Metallic parts	X	O	O	O	O	O
Power Adapter	X	O	O	O	O	O
<p>This form has been prepared in accordance with SJ / t 11364.</p> <p>O: indicates that the content of this hazardous substance in all homogeneous materials of this part is below the limit requirement specified in GB / t 26572.</p> <p>X: indicates that the content of the harmful substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB / t 26572.</p>						

