






Chrome pieces on  
the back slide into  
the black pieces  
on the recliner and  
click into place



## 1 - MOTOR INSTALLATION DIAGRAM

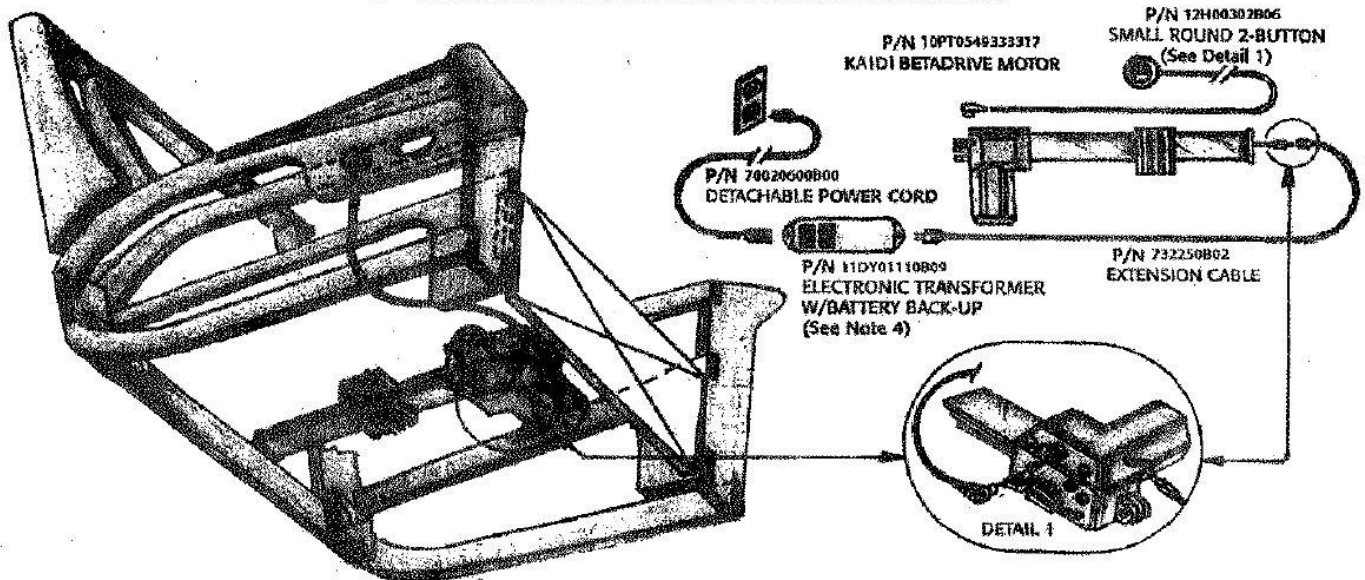

### INSTRUCTIONS:

- 1) Using scissors, cut the two (2) red zip ties that are holding the extension cables and the transformer to the rear floor rail. *Be careful to NOT cut the cables.*
- 2) Untie wire tie from extension cable and extend cable behind furniture.
- 3) Assemble all connections per the above diagram.
- 4) **BATTERIES ARE NOT INCLUDED. USE (2) QUALITY 9-VOLT BATTERIES.** Battery back-up option will only operate during a power outage. Battery life will allow only a limited number of cycles. To ensure future emergency operation, replace the batteries each time the chair has been operated during a power outage.

**CAUTION:** Ensure that the transformer is located where the chair will not hit it while reclining.

