




INSTALLATION GUIDE

CONTENTS:

Medicine Cabinet	FMC6124	PAGE 2
Cabinet	FCB6124-VSL	PAGE 3
Sink	FVS6119WH	PAGE 4
Counter Ton	FCT6124WH-VSI	PAGE 4

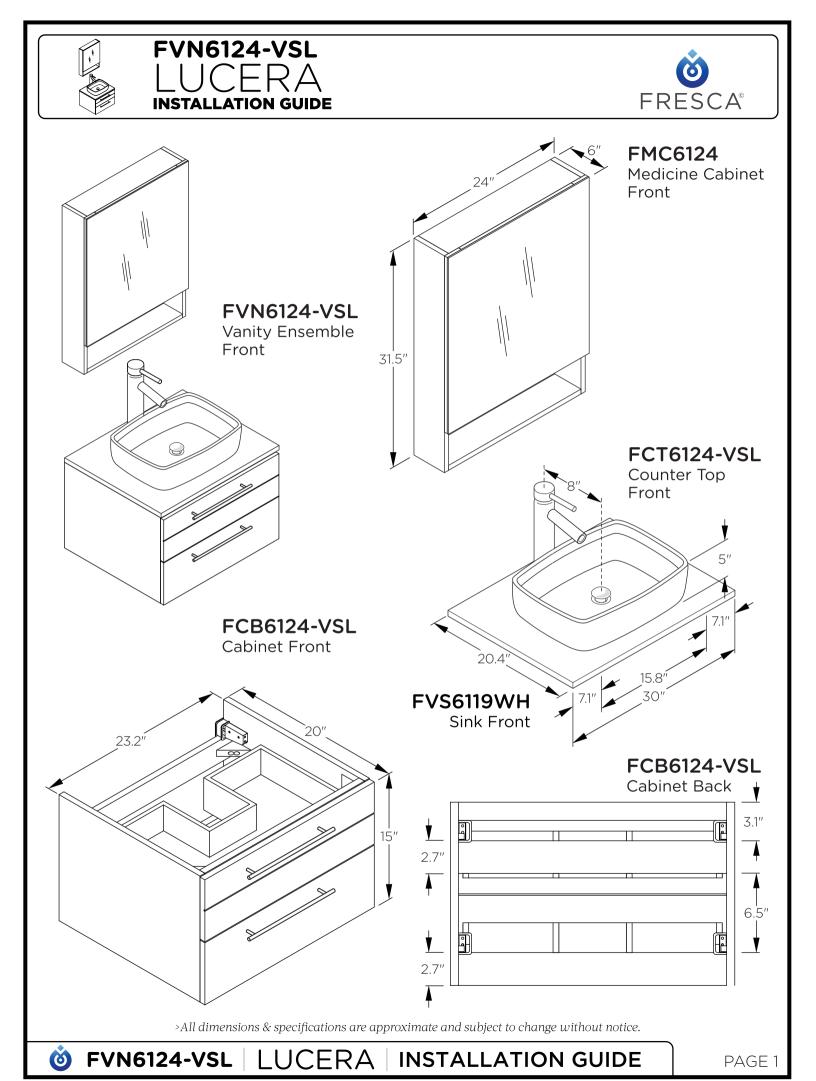





TOOLS FOR ASSEMBLY
















MEDICINE CABINET INSTALLATION

Measure distance between the mounting holes on the back of a medicine cabinet A and mark the perimeter on the wall **3**.

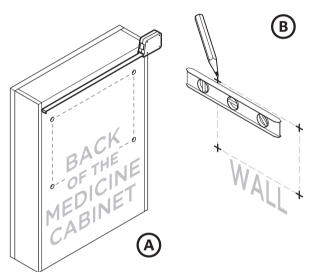


Once marked, drill the holes in the wall **©**.
*Insert the anchors in the holes **©**.

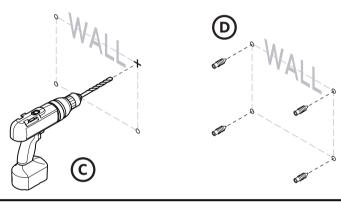


*IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

Connect medicine cabinet to the wall using a drill.

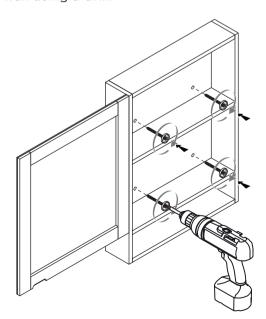

4 Cover the screws with the screw caps.

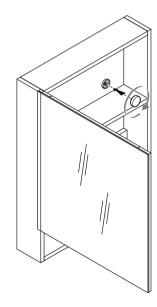

FVN6124-VSL | LUCERA | INSTALLATION GUIDE


PAGE 2






CABINET INSTALLATION


Place cabinet **(D)** in the designated location and mark the bracket position on the wall.

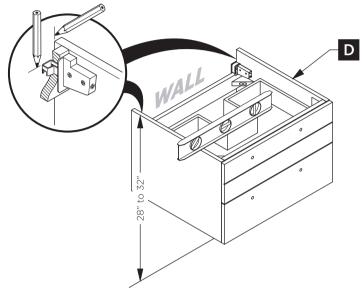


Apply a bid of the silicone and hang a cabinet (D) on the brackets.

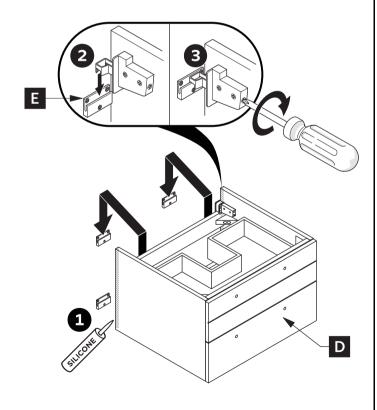


Attach the wall brackets (E) to the wall with the screws (F).





IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

4 Attach the handles to a cabinet.

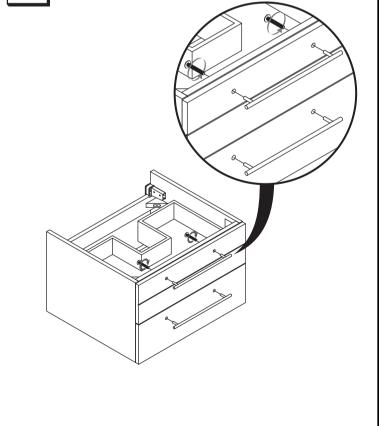

Ó

FVN6124-VSL | LUCERA | INSTALLATION GUIDE


PAGE 3






CABINET INSTALLATION

Apply a bead of silicone on top of the cabinet. Place counter top on a cabinet.

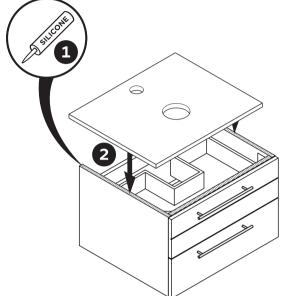


Apply a bead of silicone on top of the counter top and bottom of the sink. Connect sink to the counter top.

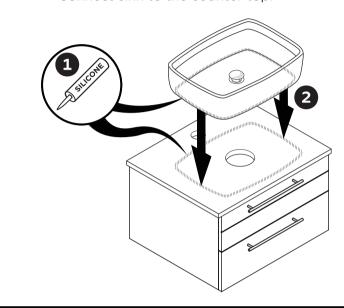


DRAWER REMOVAL & INSTALLATION

DRAWER REMOVAL

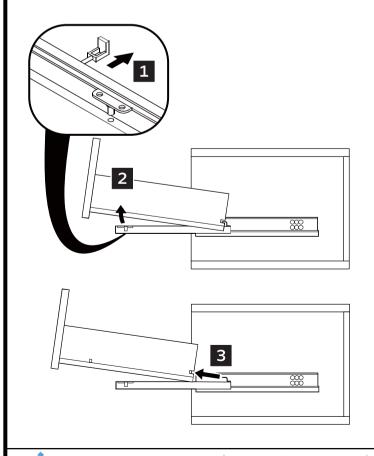

DRAWER INSTALLATION

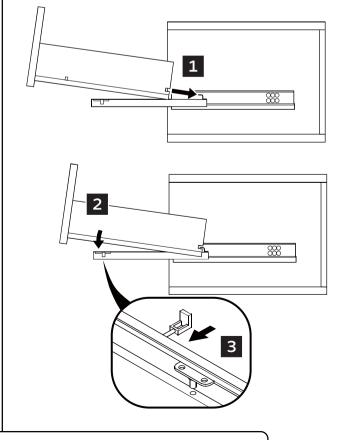


FVN6124-VSL | LUCERA | INSTALLATION GUIDE

PAGE 4





P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

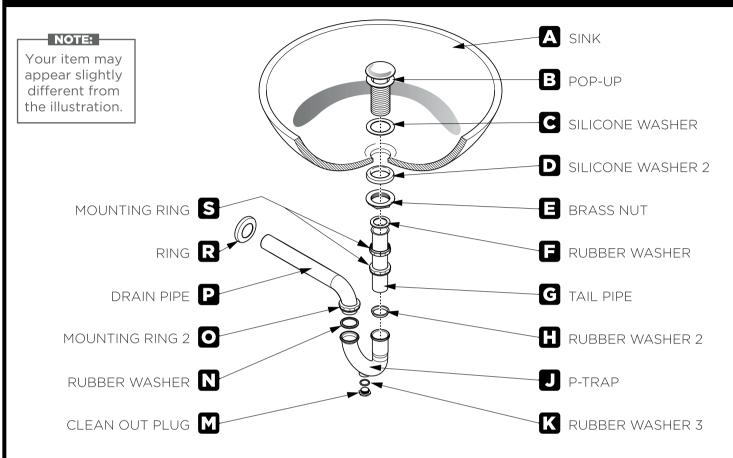

POP-UP INSTALLATION INSTRUCTIONS

