




INSTALLATION GUIDE CONTENTS:

Medicine Cabinet	FMC6124	PAGE 2
Cabinet	FCB6124-UNS	PAGE 3
Sink	FCT2024WH-CMB	PAGE 4





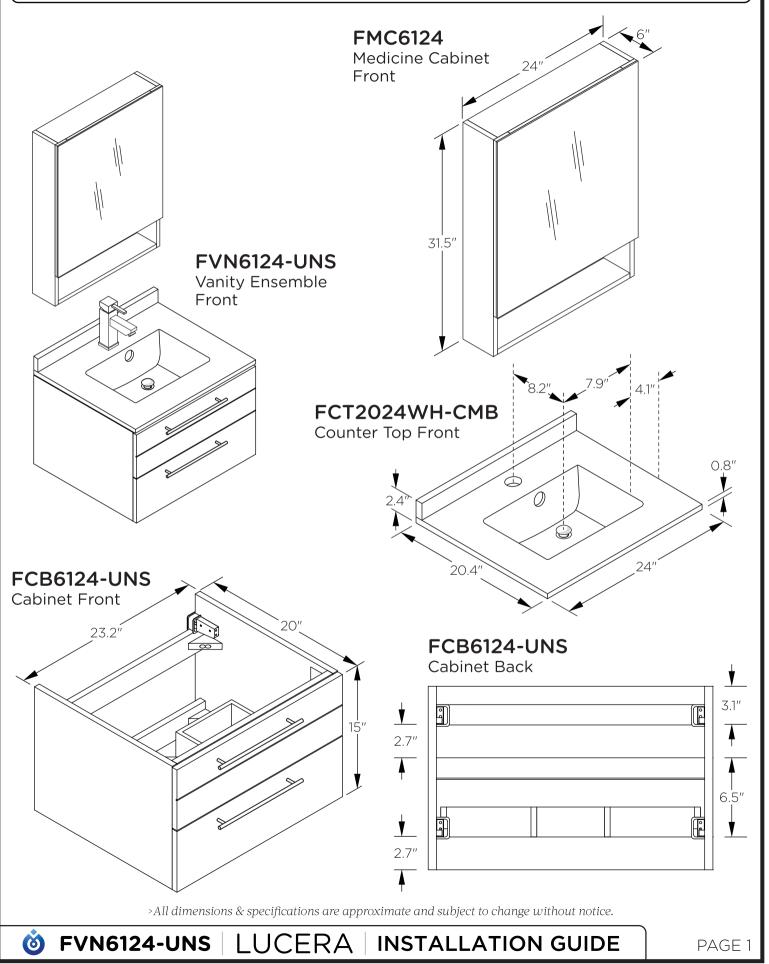





TOOLS FOR ASSEMBLY
















MEDICINE CABINET INSTALLATION

4

Measure distance between the mounting holes on the back of a medicine cabinet A and mark the perimeter on the wall 3.

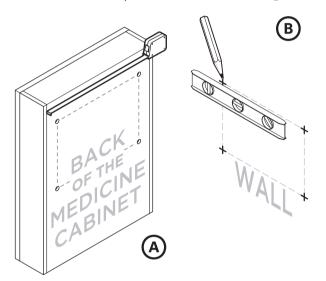


Once marked, drill the holes in the wall **©**.
*Insert the anchors in the holes **©**.

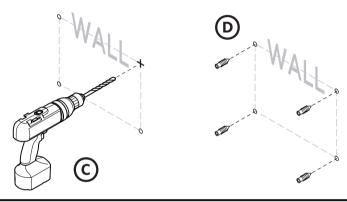


*IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

Connect medicine cabinet to the wall using a drill.

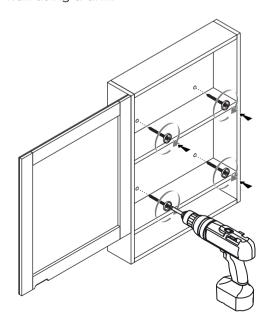

Cover the screws with the screw caps.

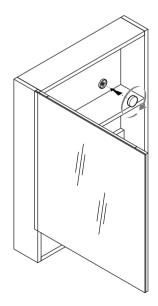



FVN6124-UNS | LUCERA | INSTALLATION GUIDE


PAGE 2






CABINET INSTALLATION


Place cabinet **(D)** in designated location and mark the bracket position on the wall.

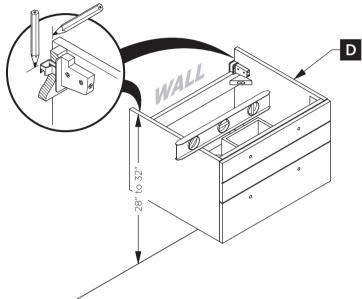

Attach the wall brackets (E) to the wall with the screws (F).






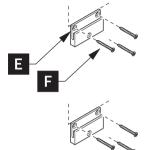




IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

Apply a bid of silicone on back of the cabinet and hang cabinet (D) on the brackets.

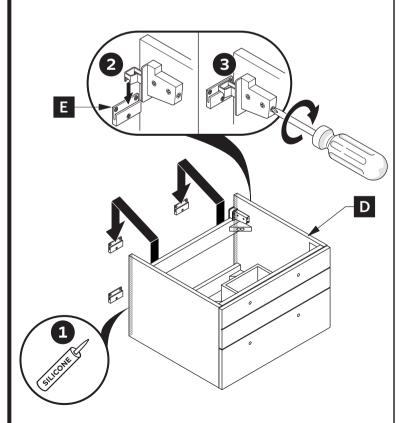

4 Attach the handles to the cabinet.

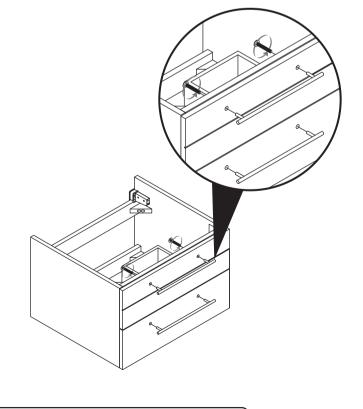

Ö

FVN6124-UNS | LUCERA | INSTALLATION GUIDE


PAGE 3






CABINET INSTALLATION

Flip the counter top upside down and attach sink to it using provided brackets & screws.

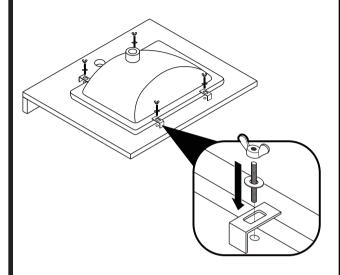


Put a bead of silicone on the top of the cabinet (G) then place a sink (H) on the top of it.

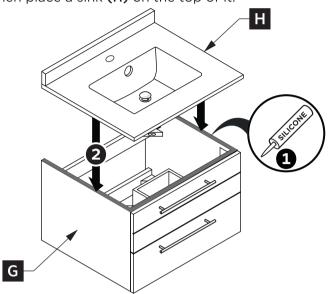


DRAWER REMOVAL & INSTALLATION

DRAWER REMOVAL

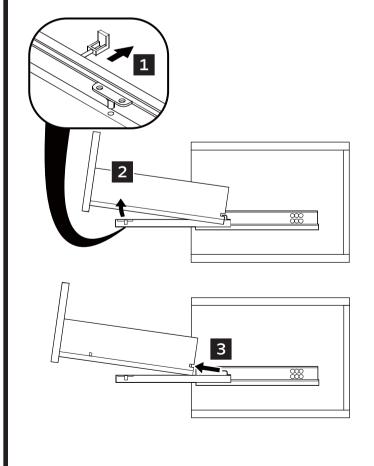

DRAWER INSTALLATION

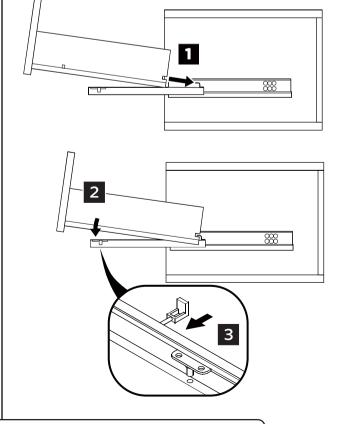




FVN6124-UNS | LUCERA | INSTALLATION GUIDE

PAGE 4





P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

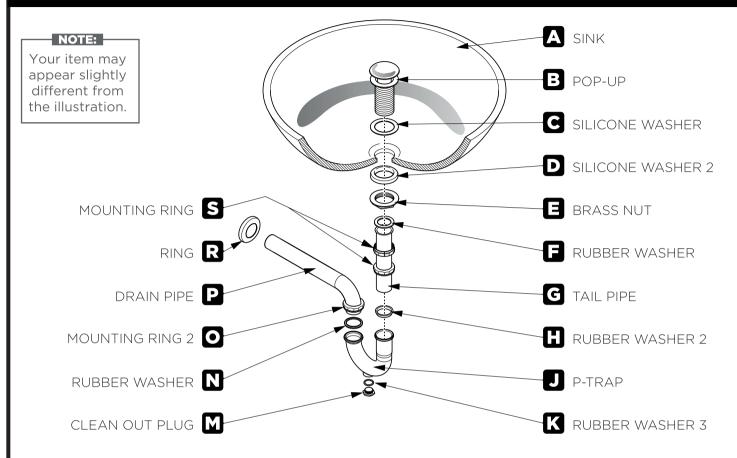

POP-UP INSTALLATION INSTRUCTIONS

