

# **USER GUIDE**

# RECESSED MEDICINE CABINET – SINGLE DOOR WITH LED LIGHTING

Model: 69431620L, 69431620R, 69432026L, 69432026R



(Items other than the mirror shown in the picture above are not included)



### **IMPORTANT SAFETY INFORMATION**

Please read through this installation instruction so you will know how to install and operate your model properly. Keep this document in a safe place for future reference after use.

#### 


This product must be installed in accordance with the installation instruction by qualified technician. Failure to follow instruction could result in death or serious bodily injury.

## 

This product must be serviced by qualified personnel. ALWAYS unplug the power cord or turn off the circuit breaker before service.


### PACKAGE CONTENTS



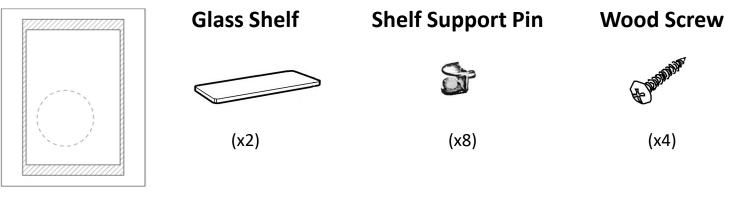


(x1)


## INSTALLATION

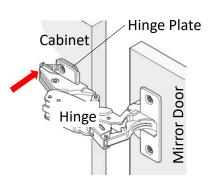


1. Unplug the cable from the Mirror Door to electrical enclosure. Remove the Mirror Door by pulling on the tab behind the Hinge to detach the hinge from the Hinge Plate. Remove the TOP hinge plate.

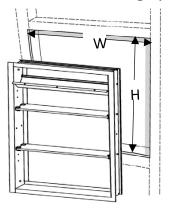


4. Frame out the wall cavity so the cabinet fits tightly into the recess.

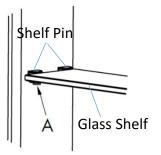

7. Insert Shelf Pins to desired height. Slide the Glass Shelf into position and tighten the plastic set screw (A) 8. Reinstall the Cover Plate and the Mirror Door(s)

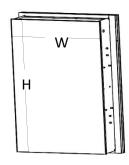

3. Measure the W (width) and the H (height) of the back of the cabinet

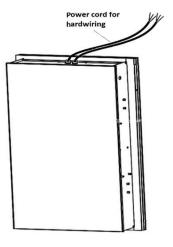

2. Loosen the electrical


enclosure Cover Plate by

removing the 3 screws and

pivot down the Cover Plate.

**Cover Plate** 


5. Power cord for hardwiring

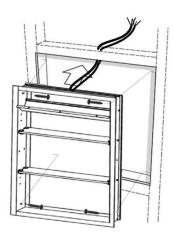


6. Insert and secure the cabinet; hardwire the power cord according to local electrical codes. You may hardwire both cables to the same power supply. Connect the wall switch to the white cable (Main) if one is used. A separate power supply is required for the Outlet (black cable).

- RTANT
- This mirror is NOT designed to work with dimmable wall switch.

### INSTALLATION DIMENSIONS

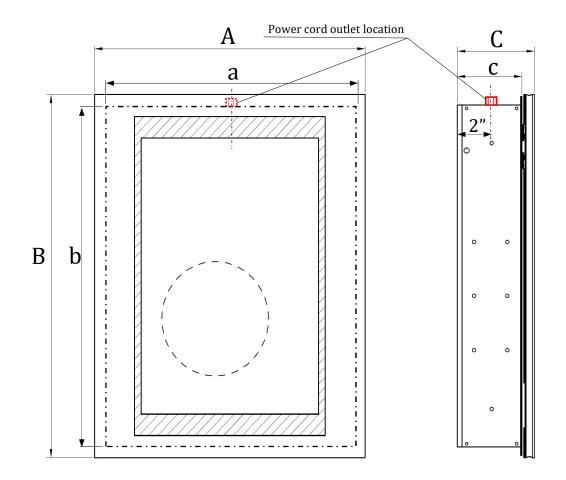

Model #	Overall Dimensions			Rough in Dimensions			Brightness	Power Consumption
	А	В	С	а	b	С	(Lumen)	(Watt)
69431620L	16	20	4-1/2	15	19	4	1065	17
69431620R	16	20	4-1/2	15	19	4	1065	17
69432026L	20	26	4-1/2	19	25	4	1365	22
69432026R	20	26	4-1/2	19	25	4	1365	22

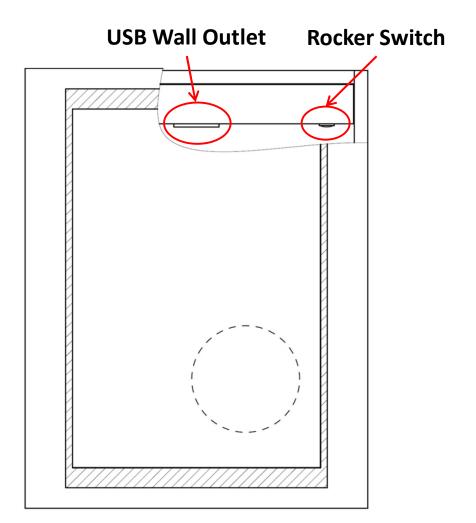

#### 1. Rocker Switch

Located on top inside the medicine cabinet. Turn on the LED light by turning the switch to <|> position. Turn off the LED light by turning the switch to <**O**> position.

#### 2. USB Wall Outlet

Located on top inside the medicine cabinet. It features two 3-prong outlets and 2 USB high-speed charger with 4.8A charging capability.

### CARE AND MAINTENANCE

Clean the mirror with a soft, damp cloth and dry thoroughly with a soft towel. Do NOT allow the edges of the mirror to get or remain wet over a period of time. Please do NOT use glass cleaner that contains ammonia or vinegar. Never spray any cleaner directly onto a mirror. Instead apply the cleaner to a soft cloth and then wipe the mirror. Make sure no commercial cleaner comes in contact with the edge or backing.


#### WARRANTY

#### **5 years Limited Warranty**

**innoci usa** LED mirrors (Illumirror<sup>®</sup>) have been manufactured under the highest standards of quality and workmanship. We warrant to the original purchaser that our LED mirrors are free from any defects in material and workmanship by normal use for 5 years from date of purchase. A replacement for any defective part will be supplied FREE OF CHARGE for installation by you.

This warranty is valid to the original purchaser only and does not cover product damage due to installation error, product abuse, product misuse, etc. whether or not performed by professionals. innoci usa will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for any incidental or consequential damages. All warranty claims should be sent to customerservice@innoci-usa.com or call 1.866.479.8076. Our customer service representative will contact you promptly to help you go through the process until you are completely satisfied with our products. SHORTAGE OR DAMAGED PRODUCTS All shipments are carefully inspected and counted before leaving our distribution centers. Please inspect carefully on receipt of merchandise, noting any discrepancy or damage on the carrier's freight bill at that time, and file a claim with the carrier within 10 days from receipt of order. Then contact our office. Deductions from invoices for shortages or damage claims will not be allowed. RETURN NEW GOODS All claims for returns or adjustments must have prior approval and return authorization (RA) number. Only original, sealed product in salable condition are eligible for return. Credit for authorized returns will be issued at the net price paid for the product and subject to a 15% restocking/handling fee. Merchandise is to be returned via prepaid freight. All unauthorized returns will be refused or subject to a 25% restocking/handling fee.

To request an "RA" number: Contact our Customer Service Representatives at <u>customerservice@innoci-usa.com</u>.We will send you a Return Authorization Number (RA) by return email. Please take necessary precautions when returning merchandise to prevent additional damage. Insurance is the responsibility of the shipper.

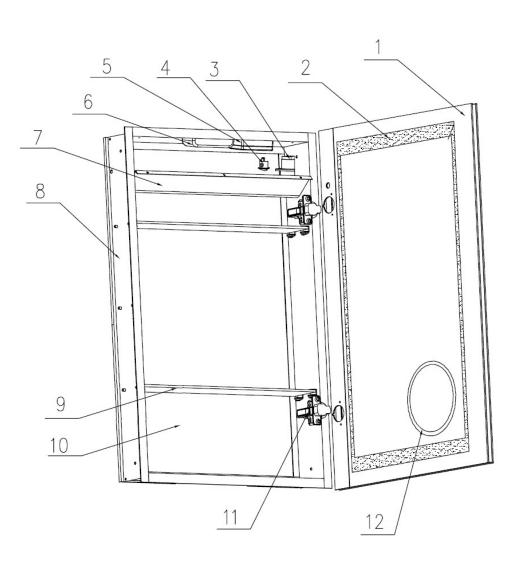

Part	Description				
1	Mirror Door				
2	LED Light				
3	110V Outlet				
4	Rocker Switch				
5	Connection Box				
6	LED Driver				
7	Cover Plate				
8	Aluminum Frame				
9	Glass Shelf				
10	Mirror Back Board				
11	Hinge				
12	Cosmetic Mirror				

# innoci usa, Inc.

14530 Best Ave., Santa Fe Springs, CA 90670

www.innoci-usa.com