




# INSTALLATION GUIDE CONTENTS:

Medicine Cabinet	FMC6183	PAGE <b>2</b>
Cabinet	FCB6142-UNS	PAGE <b>3</b>
Counter Top / Sink	FCT2042WH-S-CMB	PAGE <b>4</b>





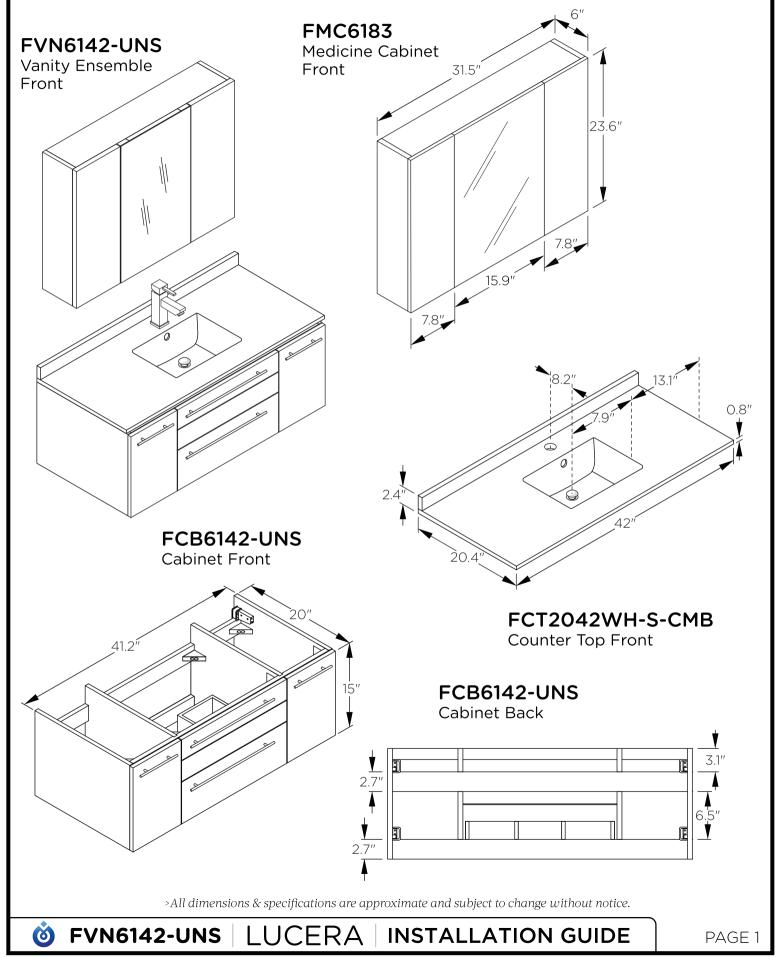





### **TOOLS FOR ASSEMBLY**
















#### MEDICINE CABINET INSTALLATION

Measure distance between the mounting holes on the back of medicine cabinet (A) and mark the perimeter on the wall (B).

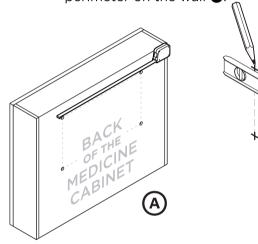


Once marked, drill the holes in the wall **©**.
\*Insert the anchors in the holes **©**.

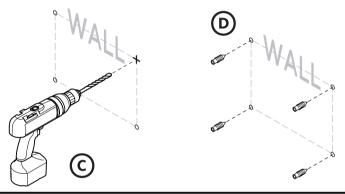


\*IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

Connect medicine cabinet to the wall using a drill.

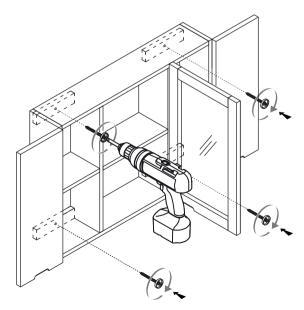

4 Cover the screws with the screw caps.

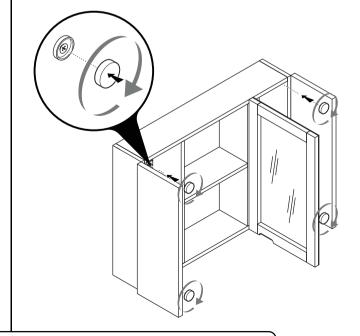

Ö

FVN6142-UNS | LUCERA | INSTALLATION GUIDE


PAGE 2






#### **CABINET INSTALLATION**


Place cabinet (D) in designated location and mark the bracket position on the wall.

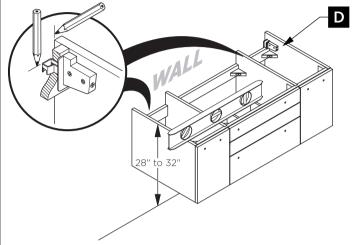

Apply a bid of silicone and hang the cabinet (D) on the brackets (E).

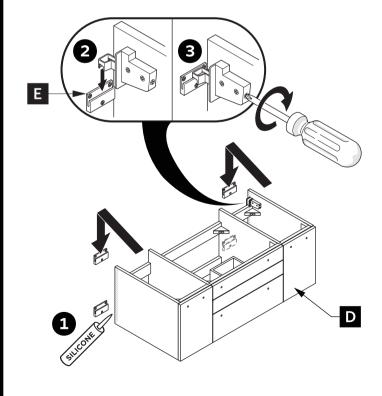


Attach wall brackets (E) to the wall with the screws (F).

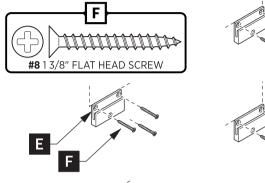

*IMPORTANT:* Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

4 Attach the handles to cabinet.

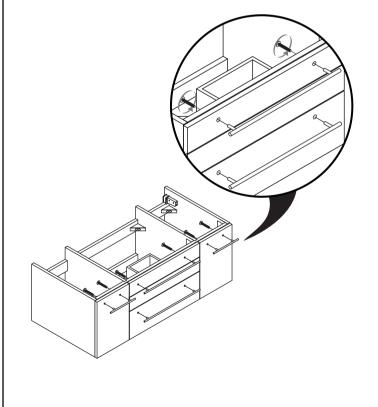

0

FVN6142-UNS | LUCERA | INSTALLATION GUIDE


PAGE 3






## **CABINET INSTALLATION**


Flip the counter top upside down and attach the sink to it using provided brackets & screws.

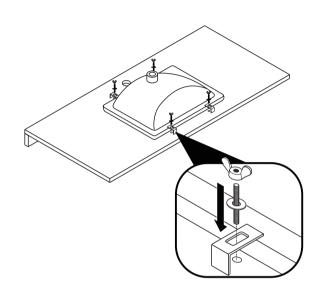


Put a bead of silicone on the top of the cabinet **(D)** then place a sink **(H)** on the top of it.

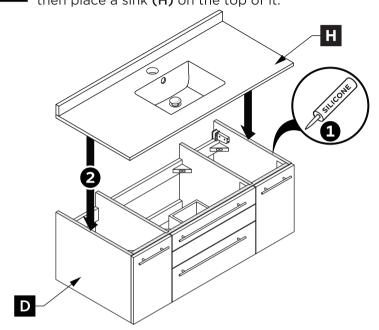

## **DRAWER REMOVAL & INSTALLATION**

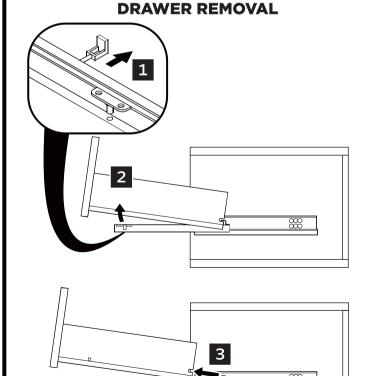

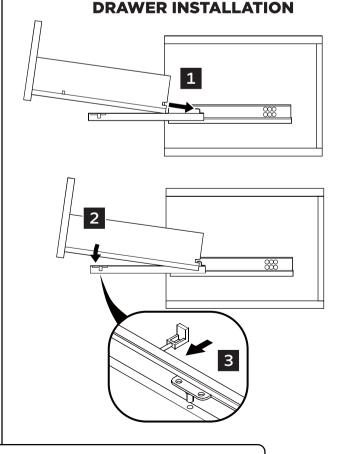

**FVN6142-UNS** 

LUCERA


**INSTALLATION GUIDE** 

PAGE 4





## P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

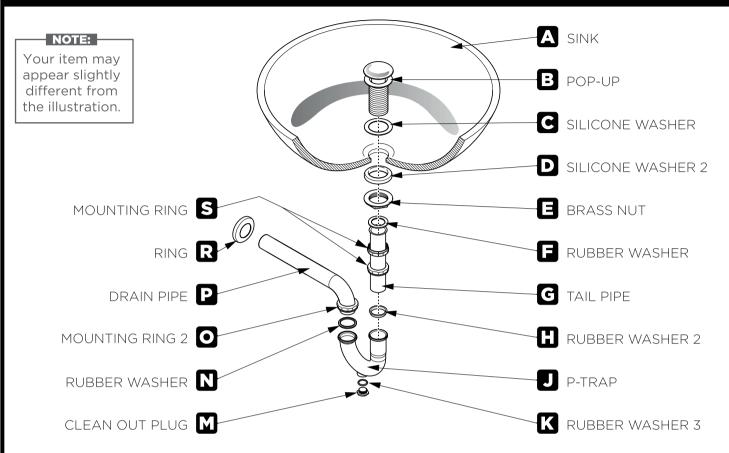

## POP-UP INSTALLATION INSTRUCTIONS

